APTANA

Stadium Stroller



OKG

22
KG

(newborn - 4 years approx.)

IMPORTANT KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE

Contents

Stroller Warnings and Important Notes 04 Lift & Carry Correctly 06 What's in the Box: Stroller Parts 07 What's in the Box: Accessories 07 Accessories & Compatibility 08 Stroller Features 09 Stroller Configurations: Single 11 Stroller Configurations: Tandem 12

	Opening the Stroller Frame	13
mbly	Attaching & Removing the Rear Wheels	14
Stroller Assembly	Attaching & Removing the Front Wheels	14
ller	Attaching the Seat Unit	15
tro	Attaching the Canopy	17
S	Attaching the Arm Bar	18

	Operating the Brake	19
	Front Wheel Swivel Lock	19
	Adjusting the Backrest	20
	Adjusting the Leg Rest	21
	Adjusting the Handlebar Height	21
n	Securing the Harness	22
atic	Adjusting the Harness	23
Stroller Operation	Adjusting the harness height	23
o r	Releasing the Harness	24
ro 	Storage Basket	24
St	Using the Tether Strap	25
	Removing & Reversing the Seat Unit	26
	Using the Stroller	27
	Folding the Stroller	28
	Lifting & Carrying the Stroller	30

Contents

-		
	Seat Liner	31
	Second Seat	
	Second Seat Warnings	
	& Important Notes	32
	Attaching & Removing	
	the Seat Extenders	33
40	Attaching the Second Seat Unit	34
Stroller Accessories	Removing the Second Seat Unit	35
SSO	Baby Capsule	
90	Baby Capsule Warnings	
AC	& Important Notes	36
ē	Installing & Removing the Britax	
0	Click & Go™ Baby Capsule Adaptors	37
Stı	Installing the Britax Baby Capsule	38
	Removing the Britax Baby Capsule	39
	Attaching the Rain Cover	40
	Attaching the Sun Cover	41
	Attaching the Cup / Bottle holder	41
	Attaching Snack Tray	42
	Attaching Buggy Board	43

9 0 0	Care & Maintenance	48
	Warranty	52
ב	Notes	54
<u>5</u>		

Always follow the manufacturer's instructions. Read all instructions carefully before assembly and use of this stroller.

The correct use and maintenance of this product is essential.



! WARNINGS

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS
- PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.
- DO NOT LEAVE CHILDREN UNATTENDED.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER. OTHERWISE THEY MAY BE INJURED.
- THE VEHICLE IS NOT TO BE USED AS AN UNSUPERVISED SLEEPING ENVIRONMENT
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- THE MAXIMUM WEIGHT OF THE CHILD IS NOT TO EXCEED:

BASSINET MODE: 9KG. SINGLE MODE: 22KG (50LB) PARENT & WORLD FACING. TANDEM MODE: UPPER SEAT, 20KG (45LB) PARENT & WORLD FACING. SECOND SEAT 18KG (40LB) PARENT & WORLD FACING. *ACCESSORIES SOLD SEPARATELY.

FOR IMPORTANT NOTES AND WARNINGS ON ACCESSORIES - REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK OR THE INSTRUCTION MANUAL INCLUDED WITH THE INDIVIDUAL PRODUCTS. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.

IMPORTANT NOTES:

- Use great care when using the stroller on stairs, escalators, travelators or other moving surfaces.
- It is recommended to remove the child from the stroller before going up or down stairs or escalators.
- Do not lift the stroller by the arm bar (supplied) because it may disengage.
- Do not allow children to stand on the seat.
- Do not hang bags unless they are supplied or goods from the handle as this could cause the stroller to tip over.
- Do not leave the stroller and its accessories near an open fire or exposed flame.
- Do not place more than 15kg (33lb) in the basket at single mode or 12kg (26lb) at tandem mode, 0.5kg (1lb) in the cup/bottle holder. Seatback pocket 0.5kg (1lb).



This **CAUTION** symbol is shown at certain steps in this instruction manual to highlight the danger of being injured by moving parts.

06

Lift & Carry Correctly

The SMART lifting technique: This technique can be used to pick up small light loads from low levels.

Size up the load

- Assess the load (size, shape, and weight).
- Assess whether the load needs to be moved;
- Where is it going to be placed" Check that there are no obstructions;
- Assess whether mechanical or human assistance is required.

Move the load as close to the body as possible

- A load is heavier to lift or carry if it is not close to the body.
- The whole hand should be used to ensure a firm grip.

Always bend your knees

- Maintain balance.
- Keep feet apart and in a comfortable position.
- Minimise lower back bending.
- Bend knees preferable at as large an angle as possible but not at a right angle - use a semi-squat in preference to a full squat.

Raise the load with your legs

- Achieve the lift smoothly and without jerkiness.
- Maintain the normal curvature of the spine to allow the force of the load to be distributed evenly from the spine to the pelvis.


Turn your feet in the direction that you want to move the load.


- Avoid unnecessary bending, twisting, and reaching.
- Change direction by turning your feet and not your back.
- To set the load down, squat down, keep your head up and let your legs do the work.

Remember to **THINK TALL** - chest lifted, shoulders relaxed, chin tucked in, and head level.


1 x Stroller Frame



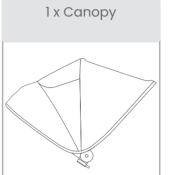

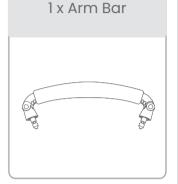



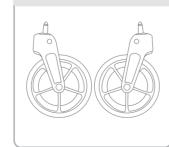

2 x Rear Wheels



What's in the Box: Accessories

What's in the Box: Stroller Parts



Accessories (Sold Separately)

Britax B-Pod Baby Capsule range and selected baby capsules, for detailed compatibility:


Australia: britax.com.au



New Zealand:



- Britax Click & Go Baby Capsule Adaptors Aptana
- Britax Aptana Bassinet
- Britax Aptana Second Seat
- Britax Aptana Lower Second Seat Adaptors
- Britax Aptana Snack Tray
- Britax Aptana Buggy Board
- Britax Universal Rain Cover
- Britax Universal Shade Cover
- Britax Cup Holder

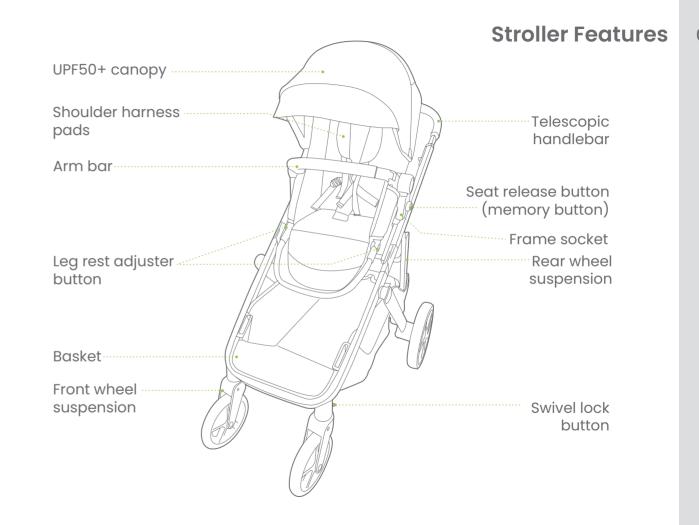


Stroller Features



PLEASE NOTE: The Stroller has 6 single configurations/modes and many adjustments to suit your needs. Shown with optional accessories here (sold separately).

 DO NOT exceed maximum weight limits defined in the Baby Capsule, Bassinet and Accessories instruction manuals.







Stroller Configurations: Single


World facing mode (Lower position only)



Bassinet mode (Lower position)



Bassinet mode (Highest position)

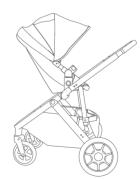

Parent facing mode (Lower position)




Parent facing mode (Highest position)

Stroller Configurations: Tandem

PLEASE NOTE: The Stroller has 10 tandem configurations/modes and many adjustments to suit your growing family needs. Shown with optional accessories here (sold separately).

DO NOT exceed maximum weight limits defined in the Baby Capsule, Bassinet, Seats or Accessories instruction manuals.

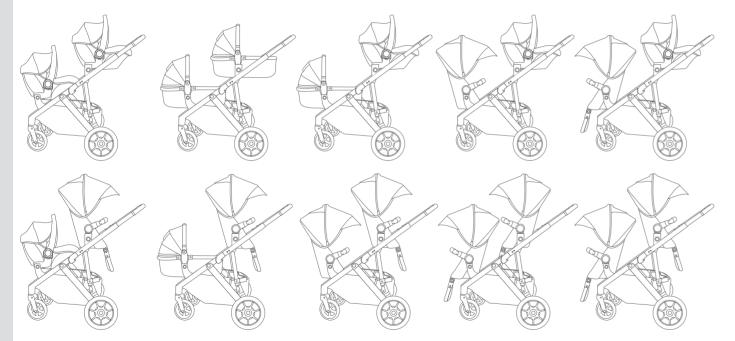



Opening the Stroller Frame

IMPORTANT NOTES:

PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.

- Release the storage latch with due care and open the frame.
- When opening the stroller, be aware of the danger of being injured by moving parts and locking devices during the process. Keep all hands and limbs clear of these parts.
- There is potential for fingers or parts of the body to injured when the stroller is being unfolded, due care should be exercised.
- Keep children clear of the stroller when unfolding the stroller.
- Open the stroller slowly and be careful where you place your hands. Keeping your hands on the handle is the best way to unfold the stroller.

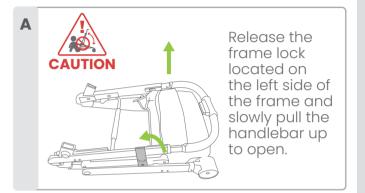

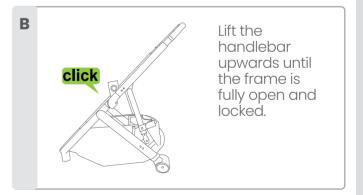


Stroller Assembly

Stroller Assembly

Attaching & Removing the Rear Wheels



A. Insert wheel axle into the moulding and push in until you hear a 'click'. Pull on each wheel to make sure it is securely attached. Repeat the process if not locked in.

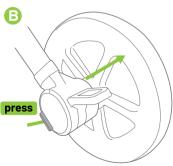


B. To remove the rear wheels, press and hold the release button located under wheel housing and pull away.

Attaching & Removing the Front Wheels



A. Insert each front swivel wheel assembly into the wheel moulding and push in until you hear a 'click'. Pull on each wheel to make sure it is securely attached. Repeat the process if not locked in.

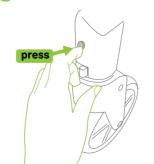

B. To remove the front wheels, push the release button located at the back of the moulding.

Attaching the Seat Unit


IMPORTANT NOTES:

Always remove your child from the stroller seat before installing, removing or changing the seat direction.

© **TIP:** The seat is reversible so it can be attached to the frame in the Parent or World facing position.

Memory Release Buttons:

The stroller memory release buttons are for easy seat, bassinet or baby capsule adaptor release from frame. Once the memory release buttons are pressed in, the seat, bassinet or baby capsule adaptors are technically unlocked and ready to be released from the frame. Always check the memory release buttons are locked before using the stroller.

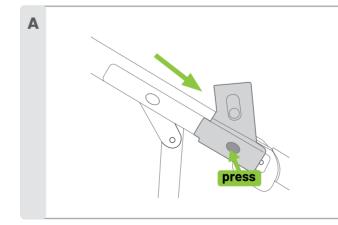


IMPORTANT: Ensure the upper seat housing on both sides are adjusted to the lowest seat position for single mode use.

Press the button to adjust up or down.

Stroller Assembly


Attaching the Seat Unit



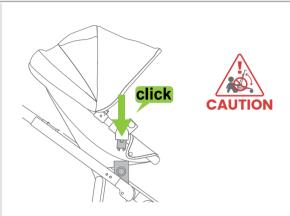

Align the seat connectors with the seat frame sockets.


Push the seat down until both sides have locked into position.

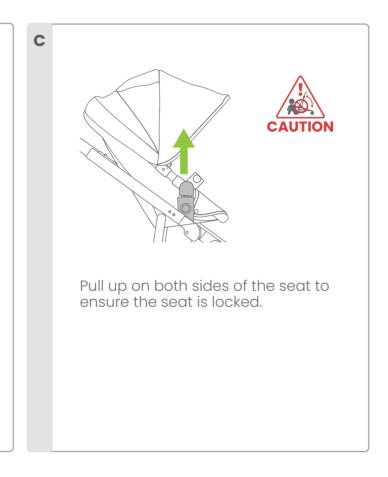



Attaching the Canopy NOT LEAVE YOUR CHILD EXPOSED TO


Stroller Assembly

IMPORTANT NOTE: The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

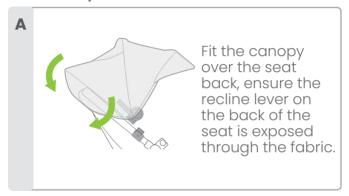

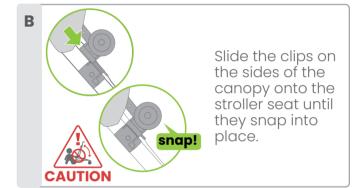

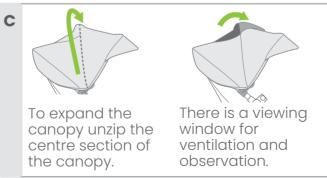


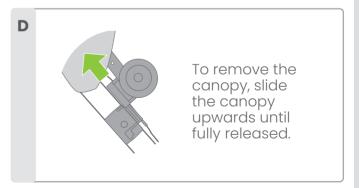


Stroller Assembly

Attaching the Arm Bar

WHEN A CHILD IS IN THE STROLLER, KEEP THE ARM BAR ATTACHED AT ALL TIMES.

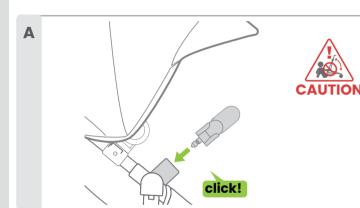

Insert the arm bar mouldings into the sockets on each side of the seat and push in until it locks in position.

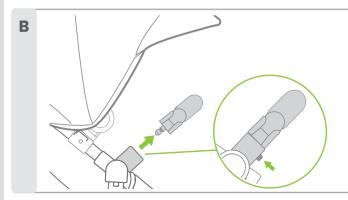

To remove the arm bar, press the button under the socket and rotate arm bar out of the way.

Operating the Brake

WARNINGS: ALWAYS **APPLY THE BRAKES WHEN THE STROLLER IS** STATIONARY.



A. Push down the brake pedal to engage the brake.



B. Push the brake pedal upward until the brake is disengaged.

Front Wheel Swivel Lock

© **TIP:** Always lock the swivel wheels when using the stroller on rough surfaces as this will minimise wheel wobble.



wheels into the fixed position, slide the lock button to one side until you hear a 'click'.

Stroller Operation




B. To allow the wheels to swivel, slide the lock button to the opposite side until you hear a 'click'.

Adjusting the Backrest

WARNINGS:

- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
- THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.


© **TIP:** If the child is sitting in the seat, support the backrest as it reclines. If you have difficulty adjusting the backrest you may need to remove the child from the seat to allow you to raise or lower the backrest with ease.

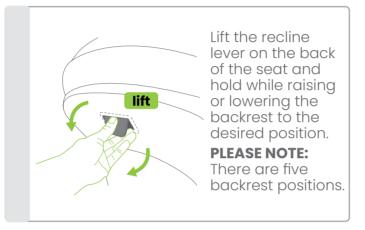

Adjusting the Leg Rest

IMPORTANT NOTES:


- The leg rest feature is provided for your child's comfort.
- The leg rest is not designed to support extra weight.
- Do not allow children to stand or sit on the leg rest, it will disengage if extra weight is applied.

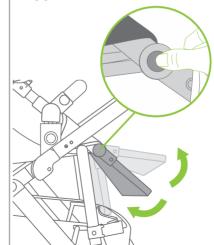

Press and hold the two release buttons on both sides of the leg rest hinge to lower to the desired position. To raise the leg rest simply move it up.

There are five leg rest positions.

Adjusting the Telescopic Handlebar

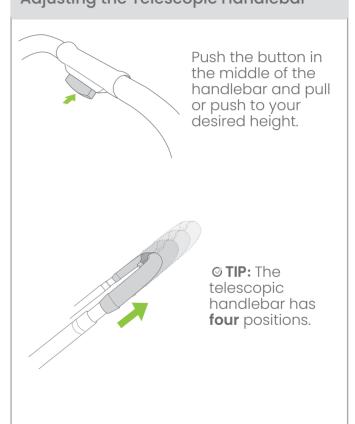


Securing the Harness


WARNINGS:

- USE THE HARNESS AT ALL TIMES.
- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- A five-point harness is provided to restrain your child.
- Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness please follow the steps to the right carefully.

PLEASE NOTE: Each waist buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up. Ensure the harness straps are not twisted as they may become uncomfortable for the child.

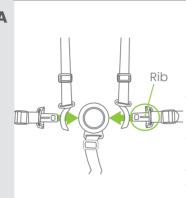


Always apply the brakes before placing child in the stroller seat. Position the shoulder strap near the child's shoulder and position crotch strap between legs. Thread the waist strap buckle tongues through the shoulder straps tongue quides.

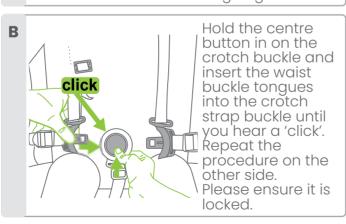

Adjusting the Harness



A. Tighten or loosen the crotch strap by sliding the harness adjuster up or down to the desired fit. Note: The crotch strap should be adjusted to a snug fit.

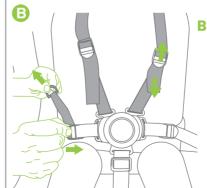


B. Tighten or loosen the waist and shoulder straps by sliding the harness adjuster to the desired fit.

Note: The straps need to fit firmly around the child.


Adjusting the Harness Height

IMPORTANT NOTE: The harness can be adjusted to different heights to accommodate the child. The shoulder straps must be positioned near the child's shoulders.

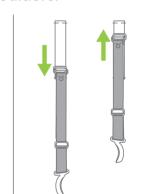


To change the shoulder harness height, simply hold the shoulder harness and slide up and down to the desired position.

Releasing the Harness

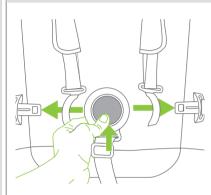

Press the centre of the buckle to release all straps at once.

Storage Basket

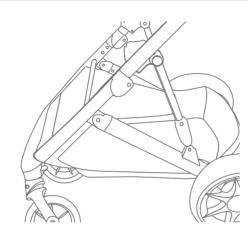


Extra large basket with easy front & rear access and storage pockets.

IMPORTANT NOTE:

• Do not place more than 15KG (33LB) in the basket at single mode or 12KG (26LB) in tandem mode.

Using the Tether Strap

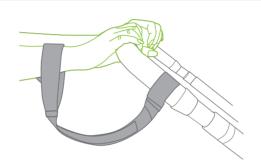

A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.

WARNINGS: USE THE TETHER STRAP TO STOP THE STROLLER **ROLLING AWAY.**

• THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE **UNSTABLE ON HIGHER SLOPING AND UNEVEN** SURFACES AND USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.


- NEVER LET GO OF THE STROLLER WHEN PARKED ON AN INCLINE OR SLOPING SURFACE BECAUSE IT MAY SLIDE OR TIP **OVER. ALWAYS PARK ON A FLAT SURFACE** AND APPLY THE BRAKES.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.


Stroller Operation

Removing & Reversing the Seat Unit

IMPORTANT NOTE:

- Always remove your child from the stroller seat before installing, removing or changing the seat direction.
- The maximum weight of the child using this stroller in Parent or World facing mode is 22kg (50LB).

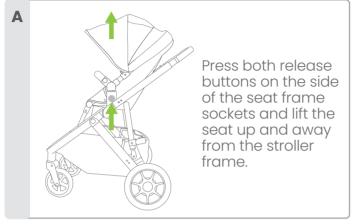

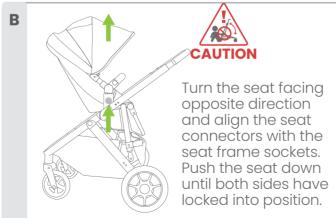

PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.

- Always ensure you bend your knees where appropriate and take due care when lifting the frame.
- With your hand through the wrist tether strap loop, push the stroller holding the handle.
- The stroller can be steered in the desired direction allowing the front wheels to swivel will make this easier.
- The front wheels may wobble or oscillate when walking fast, locking the front swivel wheels will stop this.
- The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.
- Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handle firmly.
- · Do not run with the stroller.

Using the Stroller

- Whenever you stop, always apply the brakes before you leave the stroller.
- Do not hang bags on the handlebar or on the back of the backrest unless these accessories are supplied with the stroller or sold as accessories for the stroller. Any load attached to the handlebar and / or on the back of the backrest will affect the stability of the stroller. Use storage basket instead.

Folding the Stroller

PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.


IMPORTANT NOTES:

- Engage the brake.
- Remove the child/children from the stroller.
- Remove the Baby Capsule, Bassinet or Second Seat.
- Ensure the seat backrest is upright and in World facing mode if you fold the stroller with the main seat attached.
- Close canopy to avoid damage when folding.
- Fold the stroller slowly and be careful where you place your hands.
- When folding the stroller, be aware of the danger of being injured by moving parts and locking devices during the process. Keep all hands and limbs clear of these parts.
- There is potential for fingers or parts of the body to injured when the stroller is being folded, due care should be exercised.
- Keep children clear of the stroller when folding.
- Ensure the frame lock latch is engaged before lifting or carrying the stroller.


FOLDING TIPS


- For easier handling, it is recommended to remove the stroller seat from the frame before folding. Alternatively, the stroller can be folded with seat attached in the World facing position only.
- Ensure the handlebar height is aligned with the frame to prevent it from coming in contact with the wheels and to allow for self standing fold.
- For a more compact fold, ensure the footrest is folded in.
- To fit in smaller cars, it may be convenient to remove the rear wheels.

Folding the Stroller

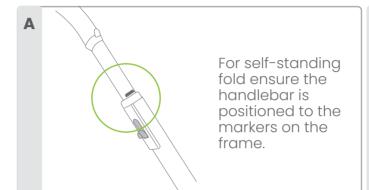




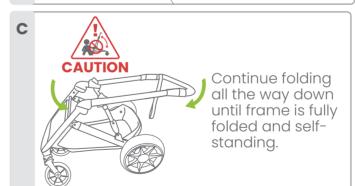

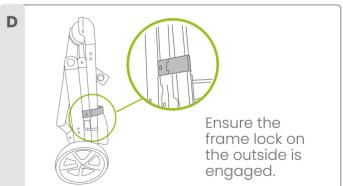

Folding the Stroller

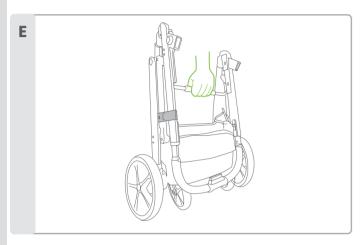

Lifting & Carrying the Stroller

IMPORTANT NOTE:

PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.


- To avoid injury: bend your knees when opening, lifting, carrying, folding, unfolding or adjusting the stroller or any accessories.
- To avoid damage, do not place heavy objects on top of the folded stroller.
- Ensure that the lock latch is engaged when lifting or carrying the stroller.

Stroller Accessories (Included)


Installing the Seat Liner

IMPORTANT NOTES:

• Ensure that the shoulder and waist harness straps are fitted through the liner harness slots and are adjusted to a snug fit.

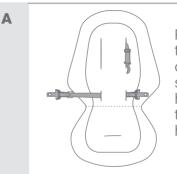

Place the liner on the stroller seat and thread the shoulder and waist harness straps through the liner harness slots.

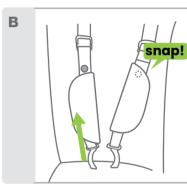

Ensure the shoulder harness pads are secured to the harness strap by using the press studs hidden on the inside of the pads.



Ensure the crotch buckle and crotch pad are threaded through the seat liner, adjust for a comfortable fit.

Stroller Accessories (Sold Separately)

Aptana Second Seat

Includes Second Seat and Lower Second Seat Adaptors

For detailed information refer to:



PLEASE NOTE: These instructions are for installing and removing the second seat on the stroller only. For proper use of the second seat, please follow the instructions manual provided with the second seat

!WARNINGS:


- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS SECOND SEAT IS NOT TO EXCEED 18KG (40LB).

IMPORTANT NOTES:


- Do not use this second seat with any other models of stroller.
- The second seat must be correctly fitted and locked onto the stroller frame.
- The second seat attaches to the lower position of the stroller. It can be used in world facing or parent facing positions.
- Do not overload the stroller. Overloading will cause the stroller to tip backwards.


IMPORTANT NOTE:

- The upper seat housing must be on the tandem mode to allow for enough space for both seats.
- The lower second seat adaptors must be securely attached to the stroller frame before attaching the second seat.
- The second seat can be used in many configurations, do not use the configuration if there isn't enough space for both children.

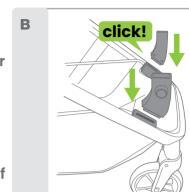

Align the lower second seat adaptors to the frame sockets and press down until you hear a 'click'. Ensure both adaptors are locked in position before attaching the second seat.

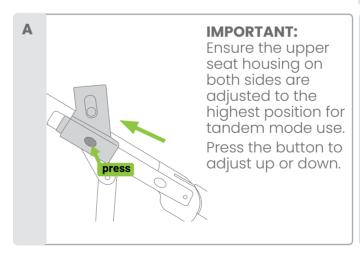

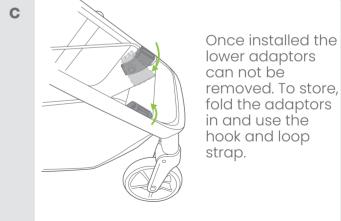

Stroller Accessories (Sold Separately)


Stroller Accessories (Sold Separately)


Attaching the Second Seat Unit

IMPORTANT NOTES:

Always remove your child from the stroller seat before installing, removing or changing the seat direction.

© **TIP:** The seat is reversible so it can be attached to the frame in the Parent or World facing position.

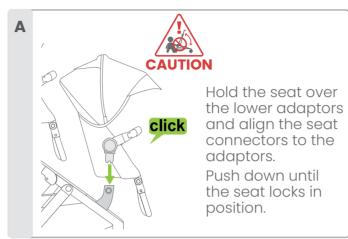

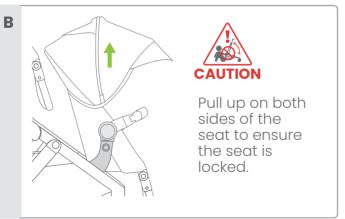

Stroller Accessories (Sold Separately)

Removing & Reversing the Seat Unit

IMPORTANT NOTE:

- Always remove your child from the stroller seat before installing, removing or changing the seat direction.
- The maximum weight of the children using this stroller in tandem mode are: Upper seat 20kg (45lb) parent and world facing modes. Second Seat 18kg (40lb) parent and world facing modes.

© TIP: The seat is reversible so it can be attached to the frame in Parent or World facing modes.



Press both release buttons on the side of the lower adaptors and lift the seat up and away from the stroller frame.

To reverse, turn the seat the opposite direction for parent facing mode.

Stroller Accessories (Included)

Stroller Accessories (Sold Separately) **Baby Capsule**

WARNINGS:

- IT IS UNSAFE TO USE ACCESSORIES NOT **APPROVED FOR USE WITH THIS STROLLER**
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- DO NOT EXCEED THE MAXIMUM WEIGHT **CAPACITY ON THE BABY CAPSULE*.**

IMPORTANT NOTES:

- The Britax Aptana stroller is only compatible with the Britax and selected competitor baby capsules. Baby capsule adaptors included.
- Only use baby capsules that are compatible to fit to this stroller. For detailed compatibility refer to:

Australia: britax.com.au




New Zealand: britax.co.nz



- Remove the stroller seat, bassinet or second seat from the stroller frame before installing the baby capsule.
- The baby capsule must be correctly fitted and locked onto the frame.
- The baby capsule is only to be used in parent facing mode in both single or tandem modes.
- Secure the child using the baby capsule harness at all times.
- Do not leave the child in the baby capsule for extended periods.
- The baby capsule is designed to provide mobility outside of the car, it should not be used instead of an appropriate cot.
- The baby capsule and or second seat must be removed from the stroller frame before folding.
- The sun is very strong. Do not leave your child exposed to the sun. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

Baby Capsule Adaptors

Installing & Removing the Britax Click & Go™ Baby Capsule Adaptors Aptana.

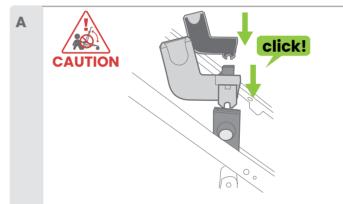


SINGLE & TANDEM MODE UPPER SEAT

Engage the brake and remove seat from stroller.

Align the baby capsule adaptors with the frame sockets and push down until it locks.

!WARNINGS:

THE BABY CAPSULE ADAPTORS MUST BE ATTACHED TO THE STROLLER FRAME BEFORE INSTALLING THE BABY CAPSULE.

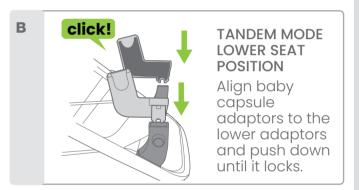

To remove, press the release buttons and pull out.

Upper: on the seat frame sockets.

Lower: on the lower adaptors.

Stroller Accessories (Sold Separately) **Baby Capsule**

Installing the Britax Baby Capsule




SINGLE MODE UPPER SEAT POSITION

Engage the stroller brake. Align the baby capsule with the adaptors and press down firmly until you hear a 'click'. Pull up the baby capsule to ensure it is locked into the stroller frame

Note: The baby capsule must be in parent facing mode (facing the handlebar).

Installing the Britax Baby Capsule

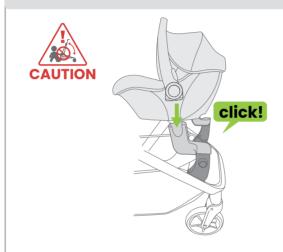


TANDEM MODE LOWER SEAT POSITION

Engage stroller brake. Align the baby capsule to the lower adaptors and press down firmly until you hear a 'click'.

Note: The baby capsule must be in parent facing mode (facing the handlebar).

Baby Capsule

Removing the Britax Baby Capsule

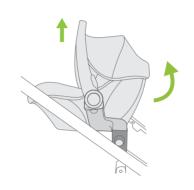

Engage the brake. Pull and hold the release lever on the back of the baby capsule and lift to remove from stroller.

PLEASE NOTE: These instructions are for

installing and removing the baby capsule on the stroller only.

Stroller Accessories (Sold Separately)

- For installing and proper use of the baby capsule in the car, please follow the instructions manual provided with the baby capsule.
- Ensure the baby is secured in the baby capsule with the harness at all times. Refer to the baby capsule instruction manual regarding placing and securing your baby in the baby capsule.
- For attaching or removing competitor baby capsules refer to instruction manual provided with the baby capsule.

Stroller Accessories (Sold Separately)

Universal Rain Cover

IMPORTANT NOTES:

- Ensure rain cover is kept away from the child's face.
- Refit rain cover if required to ensure child is safe.
- © **TIP:** The rain cover can be used in both single and tandem modes. For the second seat a second Universal rain cover will be required. The rain cover extension can be used to cover the contents in the storage basket.

Attaching the rain cover



Fit the rain cover over the canopy. Secure the toggle and elastic loop around the sides of the handlebar. Wrap the bottom of the cover around the leg rest.

Using the Extension

l. Zip the rain cover extension to the rain cover at the back of the canopy.

2. Use the hook & loop attachments around the sides to secure the extension to the rain cover.

Accessing your child



Open zipper to access the baby.

Stroller Accessories (Sold Separately)

Attaching the Sun Cover



Cover

Universal

Bottle Holder

A. Fit the cover over the canopy. Secure the toggle and elastic loop around the sides of the canopy frame.
Wrap the bottom of the cover around the leg rest.



B. To expose mesh window, lift the top cover flap and secure with toggle and elastic loop at the top.

Attaching the Cup / Bottle holder





The cup / bottle holder can only fit on the right-hand side of the frame. Slide the cup / bottle holder down the pin attachment on the frame.



You will hear a click when the cup holder is securely attached. To remove simply pull upwards.

IMPORTANT NOTES:

- Do not place over 0.5kg in the cup / bottle holder.
- Do not place hot drinks in the cup / bottle holder.
- Remove the cup / bottle holder from the stroller before folding the stroller.


Stroller Accessories (Sold Separately)

Snack Tray

Make strolling with your little one even more fun with snacks on-the-go. Designed to sit close to the stroller, making navigating in tight spaces and through doorways easier.

IMPORTANT NOTES:

- The maximum weight that can be placed in the Snack Tray is 1kg.
- Do not place hot drinks in the cup holder.
- Remove the play tray before folding the stroller.

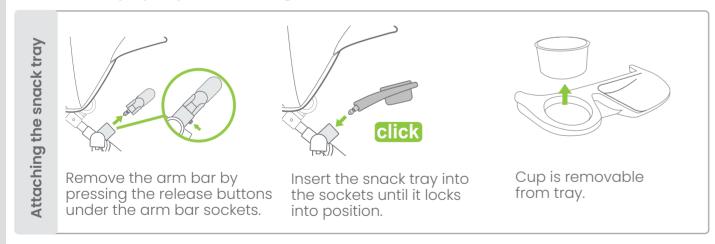

Easy to clean: Hand wash with damp cloth and mild detergent if needed Dishwasher safe (top rack only).

Buggy Board

IMPORTANT NOTE:


• The Buggy Board can only be attached to the left side of the stroller.


the Wheel

stroller frame.


• Buggy Board maximum weight capacity 20kg.

Attaching the Wheel Hub

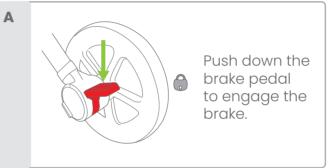

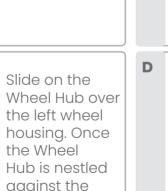


Press down on the silver button to release the wheel hub hinge. A screwdriver may assist you if needed.

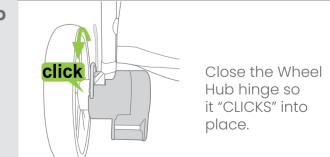

Stroller Accessories (Sold Separately)

Stroller Accessories (Sold Separately) Buggy Board

Attaching the Buggy Board

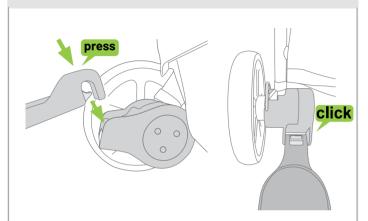

Press and hold the button on the Buggy Board and hook the Buggy Board to the Wheel Hub connector, until it "CLIKS" into place.


Important: Attach the Buggy Board to the Wheel Hub only. Never attach it directly to the rear axle of the stroller.

Stroller Accessories (Sold Separately)

Buggy Board


The Buggy Board can be used in two modes Stand and Sit Mode.

Stand Mode

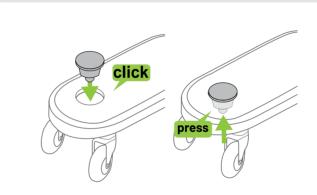

Attach the Buggy Board Cap on the base of the board and cover the seat hole.
Ensure the Cap securely "CLICKS" into place before Stand Mode use.
To remove, press the release button and lift up.

Attaching the Seat (If Supplied)

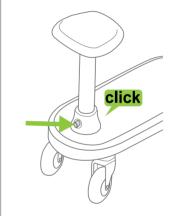


First remove the Cap off the buggy board. Line up the seat with the exposed seat hole and press down until it "CLICKS" into place.


To remove the Seat, press down on the release button at the base and lift up. If you are not using the Seat, keep the Cap in place. When the Cap is secure it will "CLICK" into place.

Stroller Accessories (Sold Separately) **Buggy Board**


Attaching the Storage Strap

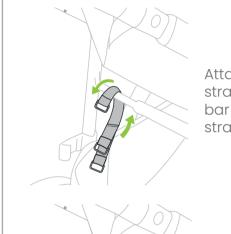

 Attach the storage strap to the basket bar by looping the strap over the bar.





Removing the Buggy Board

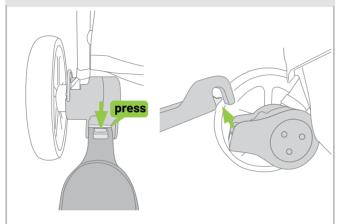

Press and hold the button on the Buggy Board and lift the Buggy Board away from the Wheel Hub connector. You must remove the buggy board before folding the stroller. The wheel hub can remain attached to the stroller.

 Buggy Board



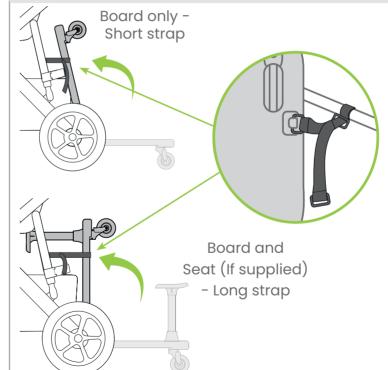

To stow the Buggy Board, rotate it upwards and attach the strap to the appropriate notch on the underside. Use the long strap if the seat is attached, and the short strap if there is no seat.

Stroller Accessories (Sold Separately)

To remove the Buggy Board, pull down on the release tab at the front and lift it off the wheel hub. You can stow the Buggy Board with or without the seat attached

IMPORTANT NOTE:

The Buggy Board must be removed to fold the stroller. The Wheel Hub can remain attached when folding your stroller.

Care & Maintenance

General Maintenance & Repair

- Ensure all safety devices, locks, harness, and brakes are in working order.
- Ensure all joints and folding areas move freely as intended.
- Should any moving or locking parts become stiff or hard to operate, ensure these are free from tension, or dirt by wiping clean with a damp cloth to remove any dirt, sand, or debris. Allow to dry and lightly spray with a dry silicon lubricant. Please carefully read the lubricant instructions prior to use.
- Ensure wheels are regularly cleaned with a damp cloth by removing dirt, sand, or debris.
 Allow to dry and lightly spray the wheel pivot pin with a dry silicon lubricant to keep the wheels moving smoothly. Please carefully read the lubricant instructions prior to use.
- Regularly spray all moving parts with a dry silicon lubricant. Please carefully read the lubricant instructions prior to use.
- Ensure all connecting rivets and screws are secure.
 Tighten if required.
- If there are compression marks on the tyres, use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- To maintain the safety and longevity of the

- stroller, seek prompt repairs or replacement for bent, torn, worn, or broken parts. Do not continue to use the stroller if unsafe.
- All repairs should only be carried out by an authorised Britax repairer. Only Britax replacement parts should be used with the stroller. It may be unsafe to use parts supplied from another manufacturer.

General Tips

Do not store the stroller in your car for prolonged periods of time during summer as it may lead to damage to some of the plastics components.

Do not leave the stroller in direct sunlight for extended periods of time, as colours of some fabrics may fade, and tyres may deteriorate.

Do not fold or store the stroller if damp or wet, as fabric may develop mould or mildew. Always store the stroller inside in a dry, well-ventilated area.

Do not place heavy objects on top of the stroller as it may alter the shape.

Should you have any further questions on care & maintenance of the stroller, please contact our Consumer Service Team at: aunz-support@britax.com

Cleaning

Fabrics

- Removable fabrics may be cleaned using lukewarm water and soap or mild detergent.
 Rinse thoroughly and allow to dry away from direct sunlight.
- Non-removable fabrics can be spot cleaned using a damp sponge and soap or mild detergent. Allow to dry completely before re-use or storage.
- Never use bleach, or abrasive cleaning products.
- DO NOT iron or dry clean.

NOTE: DO NOT place any of the stroller fabrics in the dryer. Allow to dry naturally, away from direct sunlight.

Frame

- Remove dirt and dust away from any moving mechanism.
- Clean frame with a soft damp cloth and soap or mild detergent and allow to dry thoroughly.
- DO NOT use abrasive cleaning products as it may cause stains, discolouration or scratches to the frame
- DO NOT soak or submerge frame in water.
- **DO NOT** remove, dismantle or alter any part of the stroller mechanism or brakes.

Leatherette

- Spot clean with a damp soft cloth.
- **DO NOT** use a dripping wet cloth or wet the leatherette excessively.

Care & Maintenance

Wheels

- · Remove wheels from stroller.
- Clean with damp cloth and soap or mild detergent. Use brush to remove dirt and mud build up around the tyre. Allow to dry thoroughly before placing wheels back on the frame.
- If necessary lubricate wheel shaft with a small amount of lubricant before placing into the stroller.
- Ensure the stroller is cleaned thoroughly after using it on the beach as sand and salt can damage stroller mechanism, wheel assembly, causing premature wear and corrosion.

PLEASE NOTE:

Our product warranty does not cover any rust to the rivets or screws, if you are caught in the rain or at the beach always thoroughly dry the frame to avoid any rust damage.

Care & Maintenance

Just like servicing your car or bicycle, prams and strollers also need **regular maintenance checks**. These checks can improve product performance, extend the life of your stroller and help to provide you and your children a safe and smooth journey.



We recommend servicing your stroller every 6 months and completing an inspection once a month. To prolong the life of your stroller, a regular maintenance should be performed.

5 STEP CHECK LIST

- INSPECT SAFETY DEVICES tether strap, frame lock, harness, buckle and brakes, and ensure all are in working order and free from dirt, sand, and debris.
- 2. **INSPECT** all connecting rivets and screws are secure.
- 3. MAKE SURE FOLDING JOINTS are free of dirt, dust, and debris by cleaning with a damp cloth, allow to dry and lightly spray with a dry silicon lubricant. Please carefully read the lubricant instructions prior to use.
- 4. **REMOVE WHEELS** and wipe clean with a damp cloth to remove any dirt, sand or debris. Allow to dry and lightly spray the wheel pivot pin with a dry silicon lubricant to keep the wheels moving smoothly. Please carefully read the lubricant instructions prior to use.
- 5. **ENSURE WHEN FOLDING AND STORING** to wipe down your stroller frame and allow to dry before storing in a dry place without direct sunlight.

Warranty

Warranty

Australian Consumer Law

On all of our goods, you have the benefit of a statutory consumer guarantee. In summary, goods are guaranteed to be of "acceptable quality" (fit for purpose), goods are guaranteed to match any sample against which they are sold. These consumer guarantees are provided for by the Australian Consumer Law and, if you believe any one of these guarantees is not satisfied by a Britax product, you have rights under the Australian Consumer law to enforce that guarantee.

Your rights under the statutory consumer guarantees are set out in the **Australian**Competition and Consumer Commission's Consumer Guarantees - A Guide for Consumers.

In addition to the statutory consumer guarantees, **Britax** offers its own company warranty on all of its products. You therefore have the option of seeking redress for defective or faulty product either under the **Britax** company warranty or the statutory guarantees.

After the **Britax** company warranty expires, you still have your rights under the statutory consumer guarantees.

International Warranty

Britax products are available through a network of retailers in Australia and New Zealand. If you are an international customer we do not offer a warranty service outside of these regions.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE

Did you know?

Registering your product online simplifies proof of purchase in the event of a warranty claim.

Head to our website to fill out the product registration form:

britax.com.au britax.co.nz



Making A Warranty Claim

Your rights under a **Britax** company warranty are separate from and independent of your rights under the statutory consumer guarantees. What you need to do to enforce your rights under a statutory consumer guarantee is set out in the

Australian Competition and Consumer Commission's Consumer Guarantees -

A Guide for Consumers.

To make a claim under a **Britax** company warranty, please contact our customer service team on:

Australia: 1300 303 330 / New Zealand: 0508 688 822 or alternatively by email at: aunz-support@britax.com

You will be required to:

- Return the product to the place of purchase or to a designated repair agent;
- Present your receipt as proof of purchase;
- Identify the defect in the product; and
- Present the product to **Britax** for inspection on request.

Britax will advise you whether the product is covered by the **Britax** company warranty. **Britax's** decision of whether a product is covered by a **Britax** company warranty is final. **Britax** will act reasonably when determining whether a product is covered by a company warranty.

54	Notes	Notes	55



Scan QR code for features, how to use and assembly.

Britax Childcare Pty. Ltd.

A.B.N. 55 006 773 600

Level 4, 650 Lorimer Street, Port Melbourne, Victoria 3207, Australia

Phone: (03) 9288 7288 **Fax:** (03) 9311 5798

Customer Service

Australia: 1300 303 330 / New Zealand: 0508 688 822

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Britax trademark is the property of Britax Childcare Holdings Limited - UK.

Visit the **Britax** website at: **britax.com.au or britax.co.nz** or email us at **aunz-support@britax.com** Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with **Australian Standard AS 2088:2022**

"Prams and Strollers- Safety Requirements"

Copyright © 2024 Britax Childcare Pty. Ltd. Australic

P/No. 2203674/E