

4-in-1 Stroller



0_{KG}
—
20_{KG}

IMPORTANT KEEP THIS
BOOKLET IN A SAFE PLACE
FOR FUTURE REFERENCE

About Your Stroller	Stroller Warnings & Important Notes	03
	Lift & Carry Correctly	05
	What's in the Box	06
	Stroller Features	08
Stroller Assembly	Opening the Frame	10
	Attaching & Removing the Wheels	11
	Attaching the Stroller Seat	12
	Attaching the Canopy	13
	Attaching the Arm Bar	14
	Attaching the Shoulder Harness Pads	15
Stroller Operation	Using the Stroller	16
	Using the Tether Strap	17
	Using the Front Wheel Swivel Lock	18
	Using the Brakes	19
	Using the Storage Basket	19
	Adjusting the Stroller	20
	Using the Child Harness	22
	Removing and Changing the Stroller Seat	27

Stroller Operation	Converting the Stroller to Bassinet Mode	28
	Folding, Lifting & Carrying the Stroller	30
Baby Capsule Operation	Baby Capsule Information	32
	Installing and Removing the Britax Click & Go™ Baby Capsule Adaptors	33
	Attaching & Removing the Britax Baby Capsule	34
Care & Maintenance	General Maintenance & Repair	35
	Cleaning	36
	5 Step Check List	37
	Warranty	38

Always follow the manufacturer’s instructions. Read all instructions carefully before assembly and use of this stroller.
The correct use and maintenance of this product is essential.

-  **WARNING:**
- **FOLLOW THE MANUFACTURER’S INSTRUCTIONS.**
 - **PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.**
 - **DO NOT LEAVE CHILDREN UNATTENDED.**
 - **DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.**
 - **MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.**
 - **THE VEHICLE IS NOT TO BE USED AS AN UNSUPERVISED SLEEPING ENVIRONMENT.**
 - **DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.**
 - **IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.**
 - **THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IS NOT TO EXCEED:**

STROLLER:	20KG
BASSINET MODE:	9KG
PARENT FACING MODE:	15KG

Important Notes

IMPORTANT NOTES:

- Use great care when using the stroller on stairs, escalators, travelators or other moving surfaces.
- It is recommended to remove the child from the stroller before going up or down stairs or escalators.
- Do not lift the stroller by the arm bar (supplied) because it may disengage.
- Do not allow children to stand on the seat.
- Do not hang bags unless they are supplied or goods from the handle as this could cause the stroller to tip over.
- Do not leave the stroller and its accessories near an open fire or exposed flame.
- Do not place more than 10kg in the basket.



This CAUTION symbol is shown at certain steps in this instruction manual to highlight the danger of being injured by moving parts.

For important notes and warnings on accessories – refer to their individual sections in this book or the instruction manual included with the individual products. The maximum weight varies for each accessory.

Lift & Carry Correctly

The SMART lifting technique: This technique can be used to pick up small light loads from low levels.

Size up the load

- Assess the load (size, shape, and weight).
- Assess whether the load needs to be moved. Where is it going to be placed? Check that there are no obstructions.
- Assess whether mechanical or human assistance is required.

Move the load as close to the body as possible

- A load is heavier to lift or carry if it is not close to the body.
- The whole hand should be used to ensure a firm grip.

Always bend your knees

- Maintain balance.
- Keep feet apart and in a comfortable position.
- Minimise lower back bending.
- Bend knees preferable at as large an angle as possible but not at a right angle – use a semi-squat in preference to a full squat.

Raise the load with your legs

- Achieve the lift smoothly and without jerkiness.
- Maintain the normal curvature of the spine to allow the force of the load to be distributed evenly from the spine to the pelvis.

 
Turn your feet in the direction that you want to move the load.

- Avoid unnecessary bending, twisting, and reaching.
- Change direction by turning your feet and not your back.
- To set the load down, squat down, keep your head up and let your legs do the work.


Remember to **THINK TALL** – chest lifted, shoulders relaxed, chin tucked in, and head level.

What’s in the Box


1x Stroller Frame

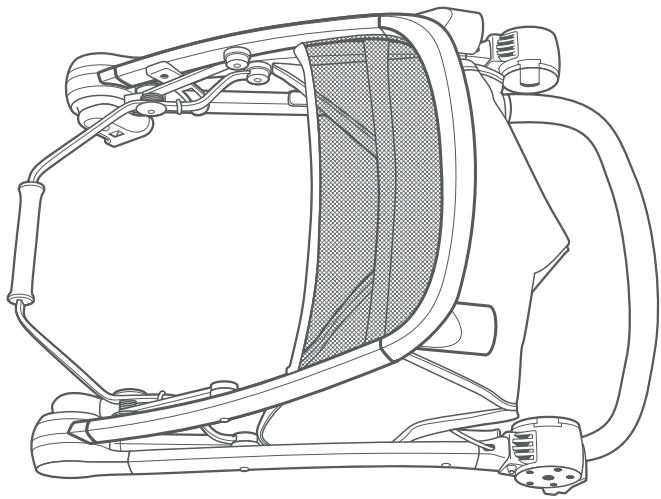


1x Arm Bar

 

1x Stroller Seat

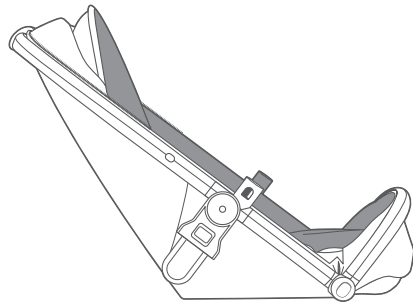 


1x Canopy

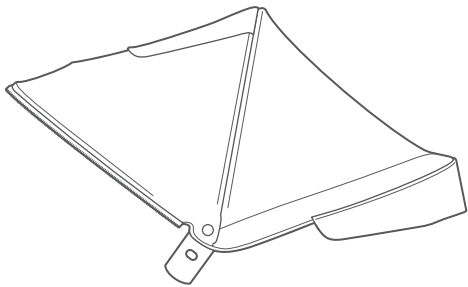 


What’s in the Box

 
2x Front Wheels

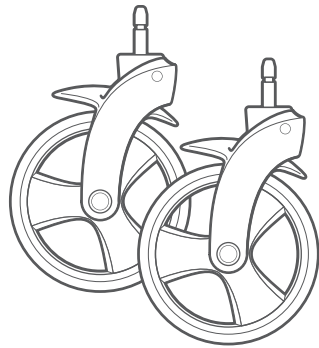

2x Rear Wheels

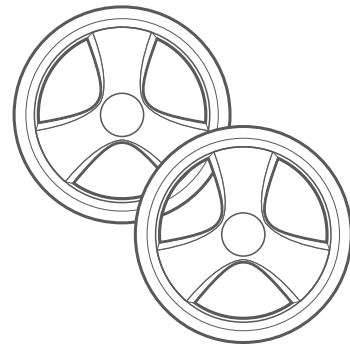 

2x Shoulder Pads

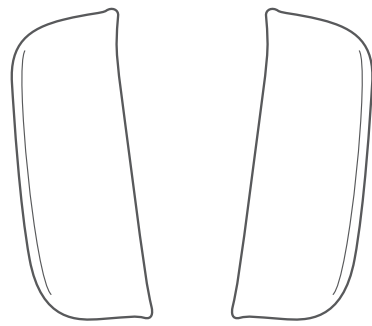 

Optional Accessories (Sold Separately)

- Britax Rain cover
- Britax Sun cover
- Britax Click & Go™ baby capsule adaptors
- Britax baby capsules and selected competitor baby capsules

 
For detailed compatibility refer to:

Australia:
britax.com.au


New Zealand:
britax.co.nz



Stroller Features

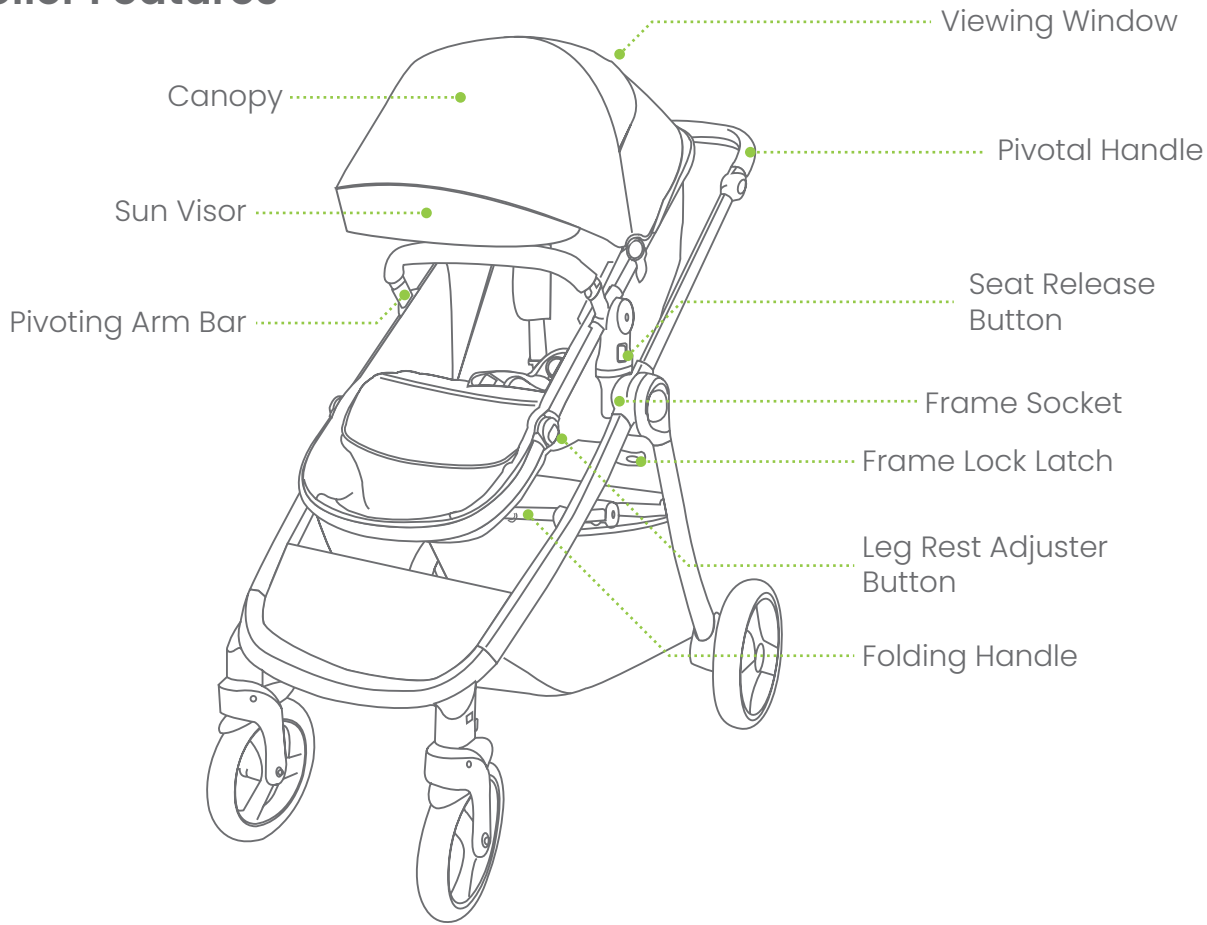

Stroller Features

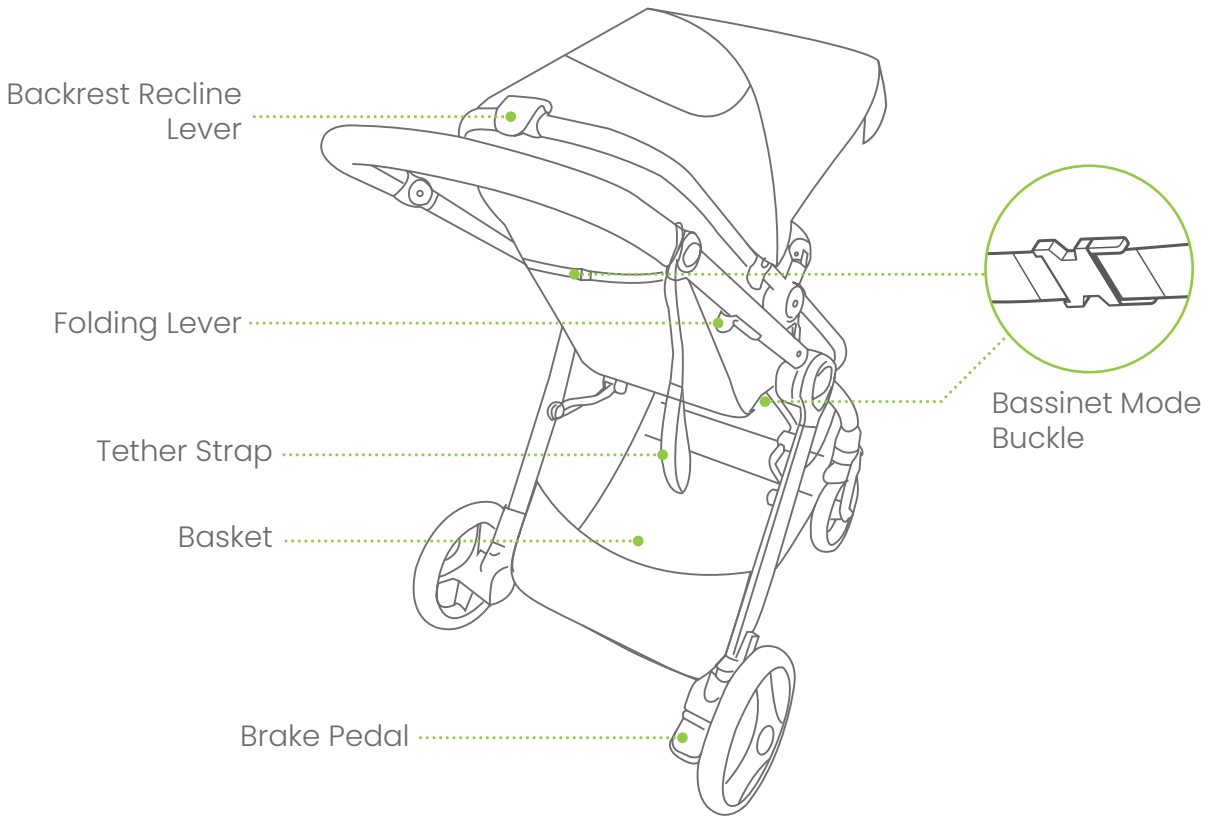 

Stroller Assembly

Opening the Frame

 
IMPORTANT NOTES:

PLEASE REFER TO PAGE 05 FOR SMART LIFTING TECHNIQUES.

- Release the storage latch with due care and open the frame.
- When opening the stroller, be aware of the danger of being injured by moving parts and locking devices during the process. Keep all hands and limbs clear of these parts.
- There is potential for fingers or parts of the body to be injured when the stroller is being unfolded, due care should be exercised.
- Keep children clear of the stroller when unfolding the stroller.
- Open the stroller slowly and be careful where you place your hands. Keeping your hands on the handle is the best way to unfold the stroller.


A

Unlock

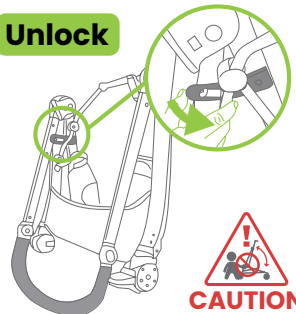

Open the frame lock latch inside the frame. The lower part of the stroller will be open.

 B

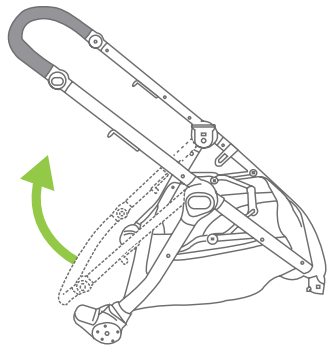

Lift the handle upwards until the frame is fully open and locked.

 
Stroller Assembly

Attaching & Removing the Rear Wheels

A

click

Push

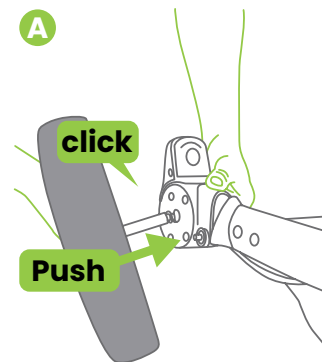


A. Insert wheel axle into the moulding and push in until you hear a 'click'. Pull on each wheel to make sure it is securely attached. Repeat the process if not locked in.

B

Pull

 Hold

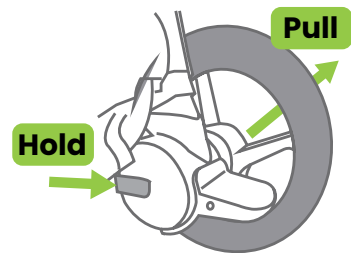


B. To remove the rear wheels, slide and hold the release button in the wheel housing and pull away.

Attaching & Removing the Front Wheels

A

click

 Insert

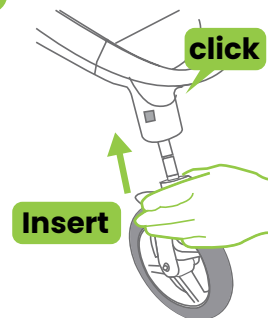


A. To attach the front wheels, insert each wheel into wheel housing and push in until it clicks. Pull on the wheel to ensure it is locked.

B

Push

 Pull

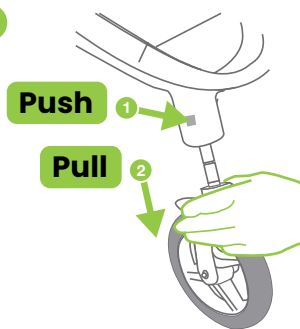

B. To remove the front wheels, push the release button on wheel moulding (1) and pull (2).

 
Stroller Assembly

Attaching the Stroller Seat

IMPORTANT NOTE: Always remove your child from the stroller seat before installing, removing or changing the seat direction.


The seat is reversible so it can be attached to the frame in the forward facing position or the rearward facing position.

A

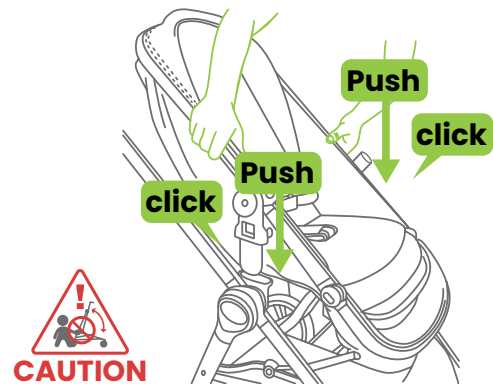

Hold the stroller seat over the frame and align the seat connectors with the frame sockets. Push down on the seat until both stroller seat connectors have locked into the frame sockets.

 B

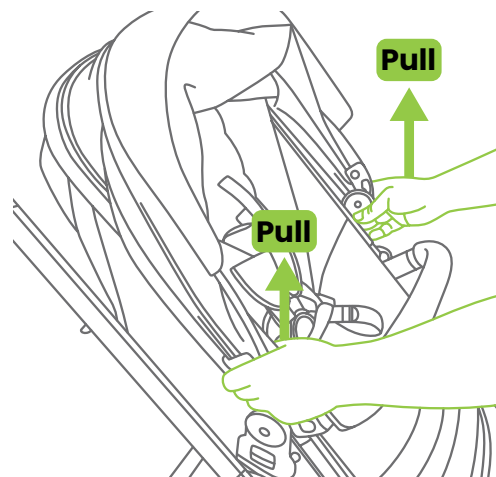


Pull up on both sides of the seat to ensure the seat is locked.

Stroller Assembly

Attaching the Canopy


IMPORTANT NOTE: The sun is very strong. Do not leave your child exposed to the sun. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

 A

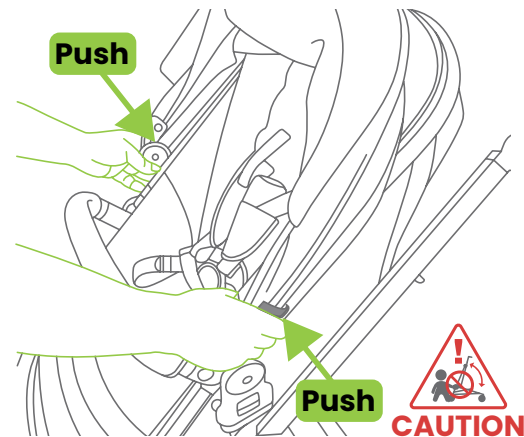

Place the canopy on the stroller seat and push the clips on the sides of the canopy onto the stroller seat until they snap into place.

 B

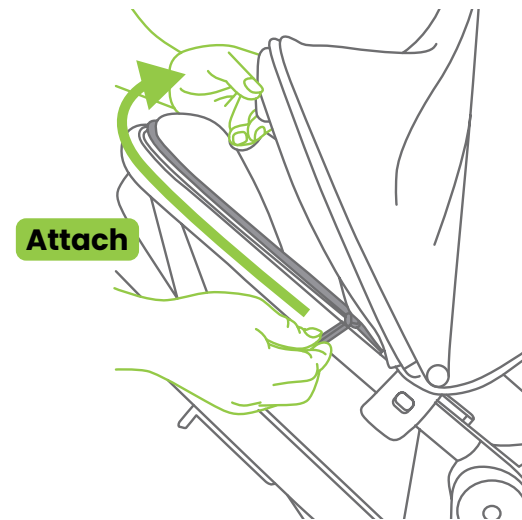


Attach the canopy to the seat unit with the zipper.

Stroller Assembly

Attaching the Arm Bar

IMPORTANT NOTE: When a child is in the stroller keep the arm bar attached to the adaptors at all times.

 A

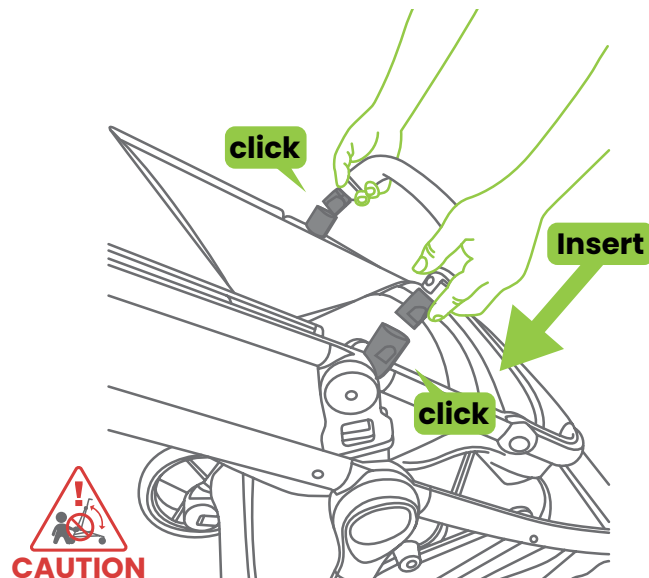


Insert the arm bar mouldings into the sockets on each side of the stroller frame and push down on the arm bar until you hear a 'click'.

To assist with putting a child in the stroller, you can release the arm bar on one side. Press the button on the side of the arm bar moulding and pull the arm bar up and out of the socket. Rotate the arm bar clear of the stroller. Reattach the arm bar after fastening the child in the harness.

Stroller Assembly

Attaching the Arm Bar (Cont.)

 
B

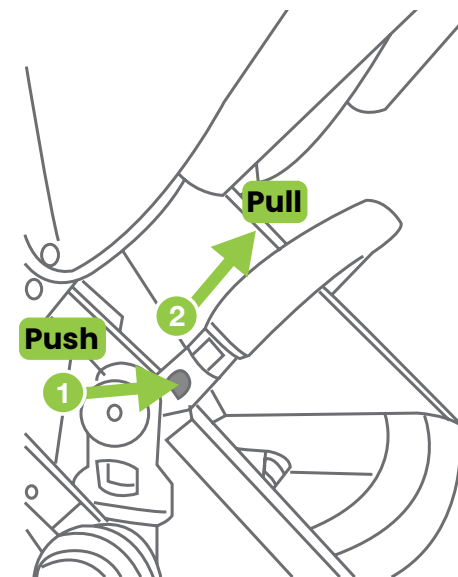

To remove the arm bar, press the button on each side of the arm bar moulding (1) and pull arm bar up and out of the sockets (2).

Attaching the Shoulder Harness Pads

 IMPORTANT NOTE: Ensure that the shoulder straps are fitted through the appropriate harness slots to suit your child's seated shoulder height. (Refer to PAGE 26)

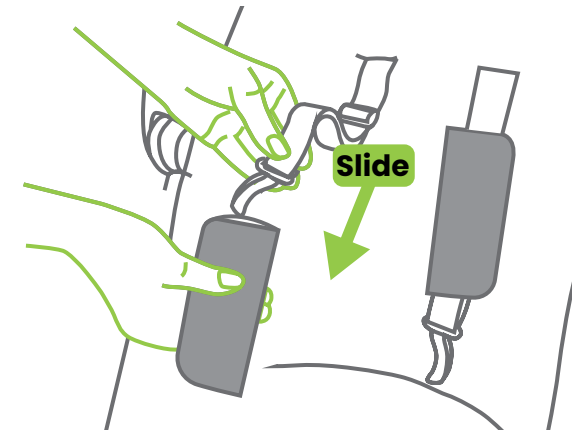

Slide the shoulder harness pads onto the shoulder harness straps and adjust to the position which fits comfortably on the child.

Stroller Operation

Using the Stroller

IMPORTANT NOTE: PLEASE REFER TO PAGE 05 FOR SMART LIFTING TECHNIQUES.

 
- Always ensure you bend your knees where appropriate and take due care when lifting the frame.
- With your hand through the wrist tether strap loop, push the stroller holding the handle.
- The stroller can be steered in the desired direction – allowing the front wheels to swivel will make this easier.
- The front wheels may wobble or oscillate when walking fast, locking the front swivel wheels will stop this.
- The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.
- Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handle firmly.
- Do not run with the stroller.
- Whenever you stop, always apply the brakes before you leave the stroller.
- Do not hang bags or goods unless it is supplied from the handle. Use the storage basket.

Stroller Operation

Using the Tether Strap

WARNING:

- **THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE UNSTABLE ON HIGHER SLOPING AND UNEVEN SURFACES – USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.**
- **NEVER LET GO OF THE STROLLER WHEN PARKED ON AN INCLINE OR SLOPING SURFACE BECAUSE IT MAY SLIDE OR TIP OVER. ALWAYS PARK ON A FLAT SURFACE AND APPLY THE BRAKES.**
- **ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.**
- **USE THE TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.**

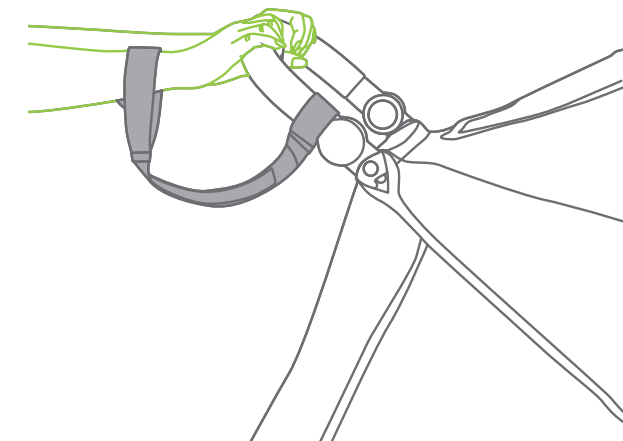

A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.

 
Stroller Operation

Using the Front Wheel Swivel Lock

IMPORTANT NOTE: Always lock the swivel wheels when using the stroller on rough surfaces as this will minimise wheel wobble.


The swivel wheels should only be locked when the wheels are in the trailing position (wheels under frame).

A

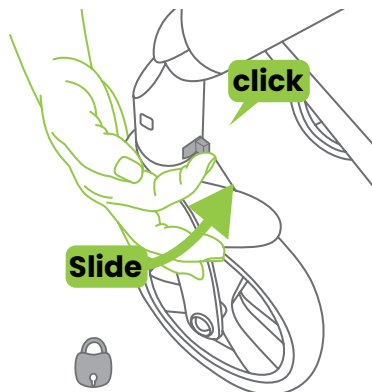

To lock the front wheels into the fixed position, slide the swivel wheel locking clip towards the inside of the frame until you hear a 'click'.

 B

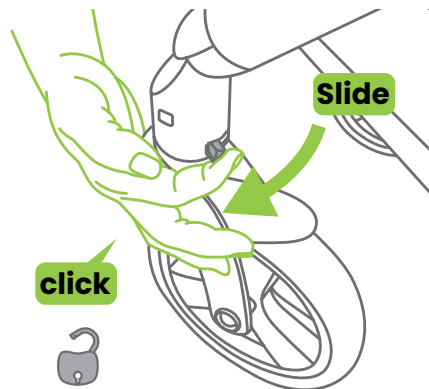


To allow the wheels to swivel, slide the black swivel wheel locking clip towards the outside of the frame until you hear a 'click'.


Using the Brakes

WARNING:

 ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS STATIONARY.

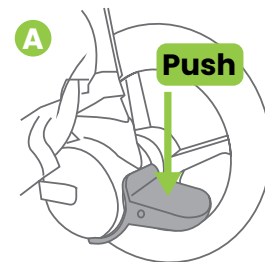

 A. Push down the brake pedal to engage the brake.

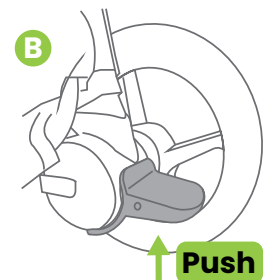


B. Push the brake pedal upwards to disengage the brake.

Stroller Operation

Using the Storage Basket

 IMPORTANT NOTE: Do not place more than 10kg in the basket.

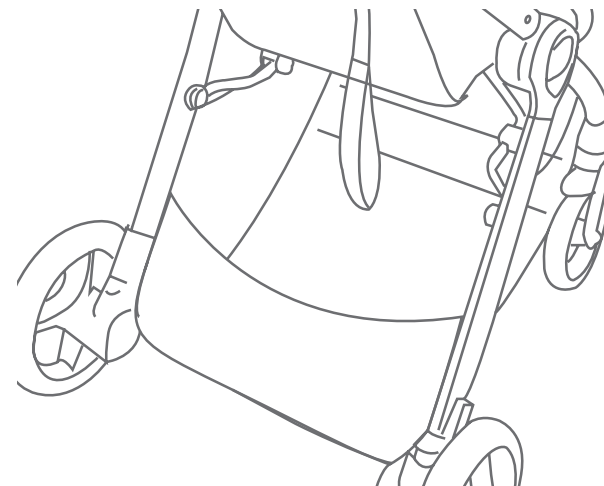


The stroller features a storage basket found underneath the seat, with easy front & rear access.

Adjusting the Backrest

- ! WARNING:**
- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
 - THE LOWEST RECLINE POSITION (BASSINET MODE) SHOULD BE USED TO TRANSPORT BABIES (0-9KG NEWBORNS TO 6 MONTHS OLD APPROX). THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.
 - IF THE CHILD IS SITTING IN THE SEAT, SUPPORT THE BACKREST AS IT RECLINES. IF YOU HAVE DIFFICULTY ADJUSTING THE BACKREST YOU MAY NEED TO REMOVE THE CHILD FROM THE SEAT TO ALLOW YOU TO RAISE OR LOWER THE BACKREST WITH EASE.

 
TIP: There are three backrest positions, including bassinet mode ideal for newborns.

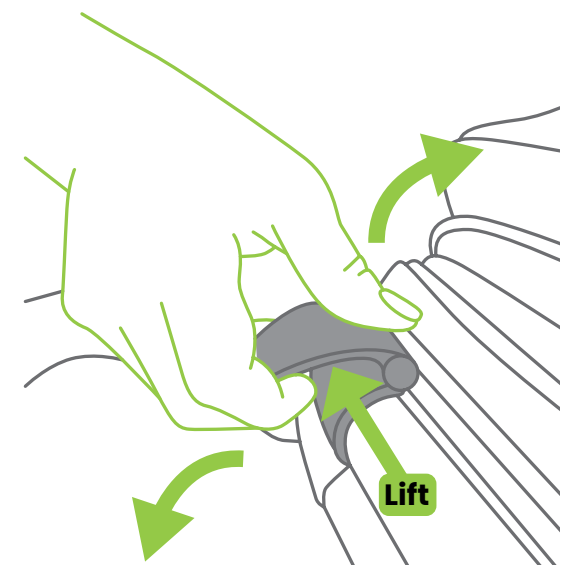

Lift the recline lever on the back of the seat and hold while raising or lowering the backrest to the desired position.


Adjusting the Leg Rest

 - IMPORTANT NOTES:**
- The leg rest feature is provided for your child’s comfort.
 - The leg rest is not designed to support extra weight.
 - Do not allow children to stand or sit on the leg rest, it will disengage if extra weight is applied.
 - If the leg rest disengages simply lift up again to reset leg rest mode.

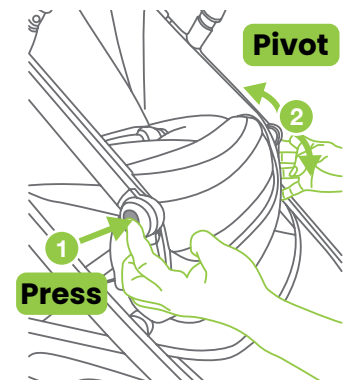

Press the two release buttons on both sides of the leg rest hinge (1) and hold while raising or lowering the leg rest to the desired position (2).

 Adjusting the Pivoting Handle

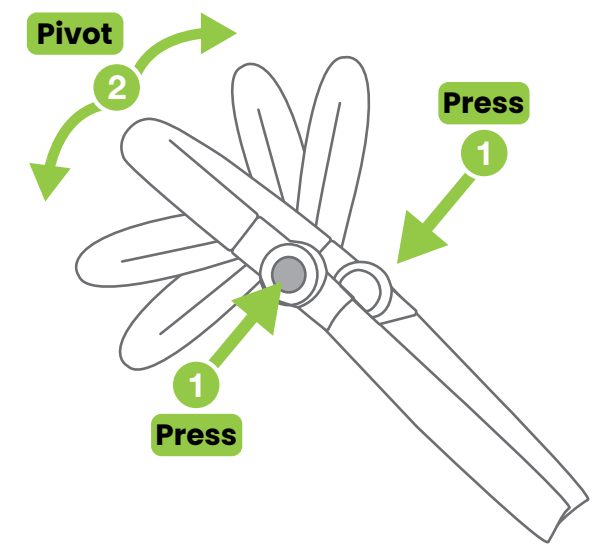

Press the two release buttons on the outside of the handle (1) and hold while raising or lowering the handle to the desired position (2).
When the desired position has been achieved let go of both release buttons.

! WARNING:

 
- **USE THE HARNESS AT ALL TIMES.**
- **ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.**
- **THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.**
- **NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.**
- **WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.**
- **A FIVE POINT HARNESS IS PROVIDED TO RESTRAIN YOUR CHILD.**
- **BUCKLE TONGUES SEPARATE FOR ADDED SAFETY.**

- **TO RECONNECT BUCKLE TONGUES AND TO SECURE THE CHILD IN THE HARNESS PLEASE FOLLOW THE STEPS ON THE FOLLOWING PAGE CAREFULLY.**

IMPORTANT NOTES:


- Each waist buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up.
- Ensure the harness straps are not twisted as they may become uncomfortable for the child.
- Always apply the brakes before placing child in stroller seat. Position the shoulder strap near the child's shoulder and position crotch strap between legs.

A

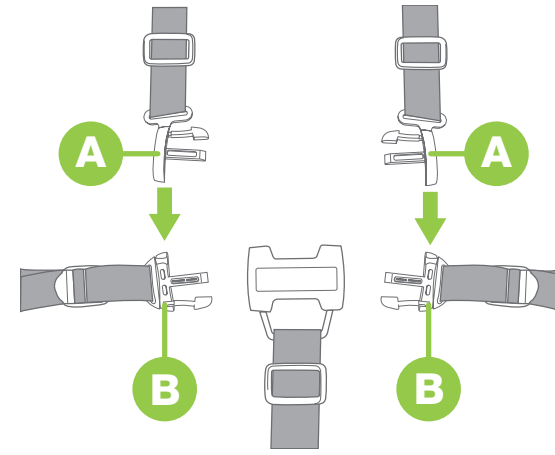

Position the shoulder strap tongue (A) on top of the waist buckle tongue (B) on both sides.

 B

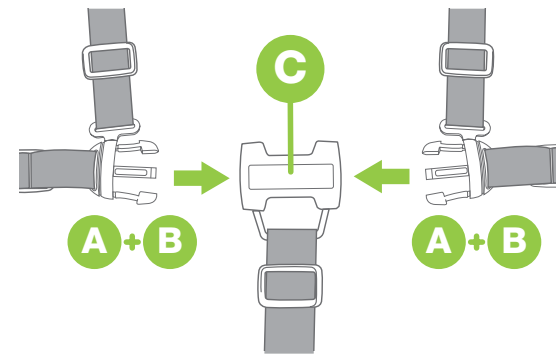


Push both buckle tongues (A + B) into the buckle housing (C) until the buckle tongues lock into position.

Adjusting the Harness


! WARNING: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.

 A

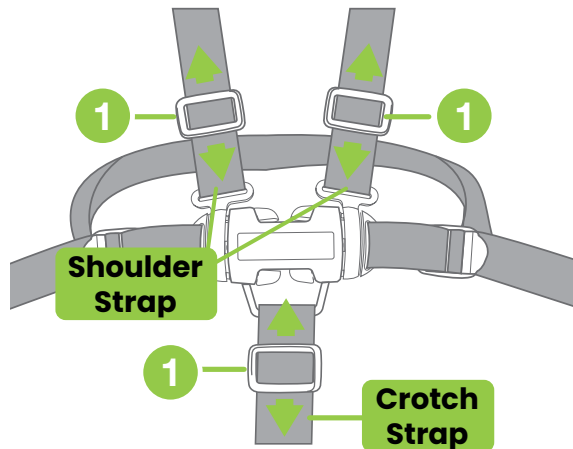

Tighten or loosen the shoulder straps and crotch strap by sliding the 3 Bar Sliders (1) up or down. The crotch strap should be adjusted to a snug fit.

 
B

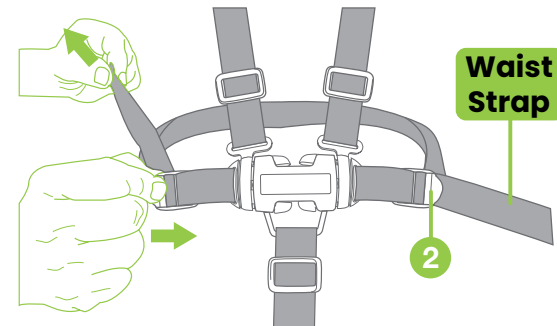

To tighten or loosen the waist straps, hold and lift the 4 Bar Slider (2) and pull the harness strap to adjust to the desired fit. The waist strap needs to fit firmly around the child.


Adjusting the Harness (Cont.)

 C

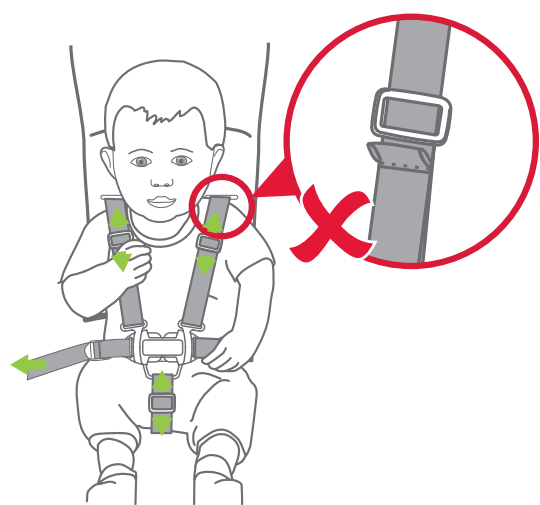

To tighten or loosen the shoulder straps, slide the 3 bar slider up or down to adjust to the desired fit. Always adjust the harness strap when changing the seating position of the child.

 Opening the Harness

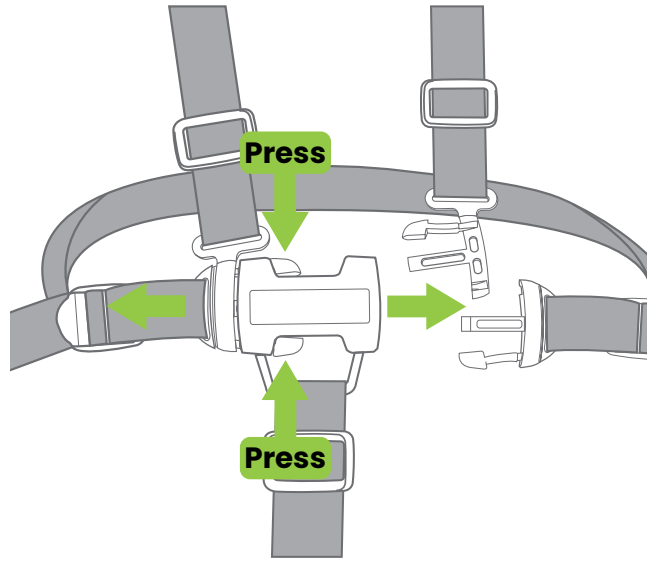


To release the buckle, squeeze the top and bottom buckle tongues together with enough pressure so the buckle tongues can release from the buckle housing.

Adjusting the Shoulder Harness Height


IMPORTANT NOTE: The harness can be adjusted to three different heights to accommodate the child. The shoulder straps must be positioned near the child’s shoulders.

 A

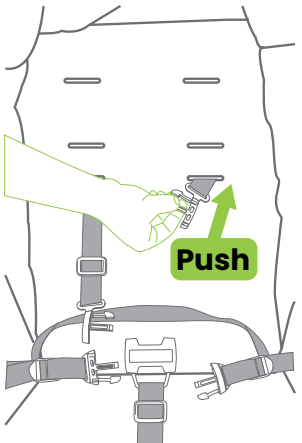A line drawing of a stroller's shoulder harness. A hand is shown pushing a small tab (the tongue) out of a slot on the side of the harness. A green arrow points to the tab with the word "Push" in a green box.

To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat.

 B

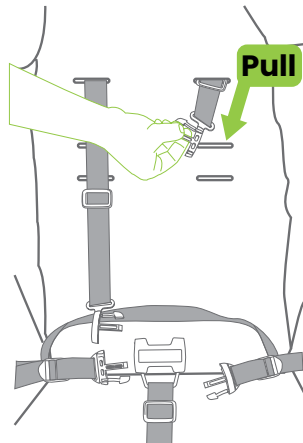A line drawing of a stroller's shoulder harness. A hand is shown pulling the harness tongue through a slot on the side of the harness. A green arrow points to the slot with the word "Pull" in a green box.

 
Select the appropriate shoulder harness height and pull each shoulder harness tongue through the harness slot.

Removing and Changing the Stroller Seat

IMPORTANT NOTES:

- Always remove your child from the stroller seat before installing, removing or changing the seat direction.
- The seat is reversible so it can be attached to the frame in the forward facing position or the rearward facing position.
- The maximum weight of the child using this stroller in rearward facing position (baby facing parent position) is 15kg.

A

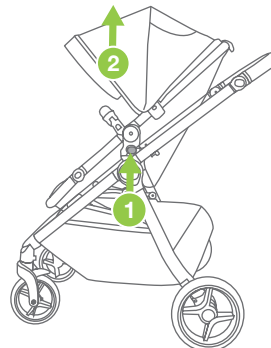A line drawing of a stroller. A hand is shown lifting the seat up and away from the frame. A green arrow points to the seat with the number "1" in a green box. Another green arrow points to the seat connectors with the number "2" in a green box.

Lift both release levers on the seat connectors at the same time (1) and lift the seat up and away from the stroller frame (2).

B


A line drawing of a stroller. A hand is shown turning the seat to the rearward facing position. A green arrow points to the seat with the word "CAUTION" in a red box.

Turn the seat facing the opposite direction and then attach the stroller seat to the frame in the rearward facing position.

Converting the Stroller to Bassinet Mode


- ! WARNING:**
- **USE THE HARNESS AT ALL TIMES.**
 - **DO NOT USE BASSINET MODE ONCE THE CHILD CAN SIT UP UNAIDED.**
 - **THE BASSINET MODE CAN ONLY BE USED ON THE STROLLER FRAME, IT CAN NOT BE USED OWN ITS OWN.**
 - **THE MAXIMUM WEIGHT OF THE CHILD USING BASSINET MODE IS NOT TO EXCEED 9KG.**
 - **DO NOT LEAVE CHILD UNATTENDED.**
 - **DO NOT USE FOR UNSUPERVISED SLEEPING.**

 A

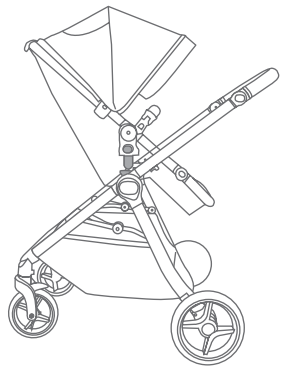

Put stroller seat into reverse facing position.

 B

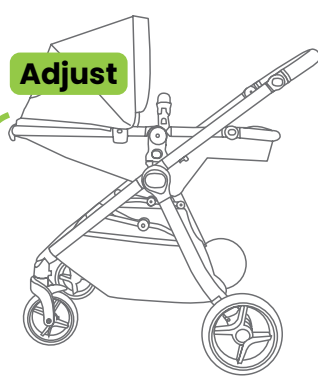


Adjust

Using the recline lever adjust the backrest to the lowest position.

Converting the Stroller to Bassinet Mode (Cont.)

 
C

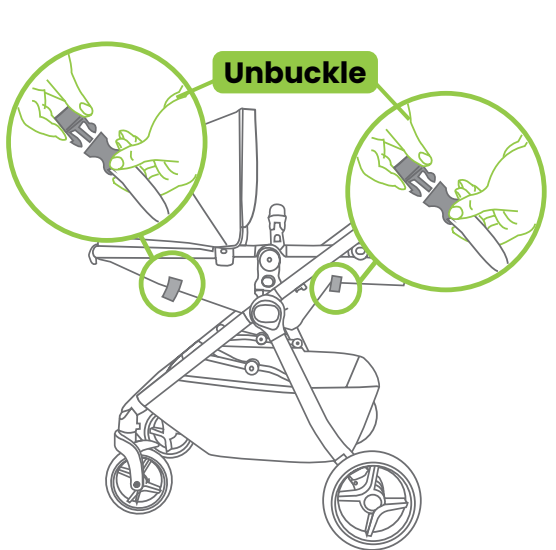

Unbuckle

Unbuckle the clips on the backrest and under the leg rest.

 D

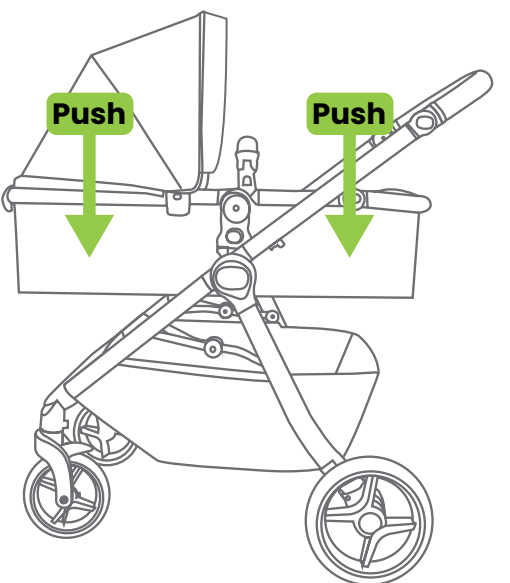

Push

Push down the backrest and leg rest to complete the conversion. Use the harness to secure the baby in bassinet mode.

Stroller Operation

Folding, Lifting & Carrying the Stroller

 
IMPORTANT NOTE: PLEASE REFER TO PAGE 05 FOR SMART LIFTING TECHNIQUES.

- Remove the child from the stroller before commencing any folding operation.
 - Fold the stroller slowly and be careful where you place your hands.
 - When folding the stroller, be aware of the danger of being injured by moving parts and locking devices during the process. Keep all hands and limbs clear of these parts.
 - There is potential for fingers or parts of the body to be injured when the stroller is being folded, due care should be exercised.
 - Keep children clear of the stroller when folding the stroller.
 - To avoid injury: bend your knees when opening, lifting, carrying, folding, unfolding or adjusting the stroller or any accessories.
 - To avoid damage, do not place heavy objects on top of the folded stroller.
 - Ensure that the storage latch is engaged when lifting or carrying the vehicle.
 - Make sure the seat is in upright position before folding if seat is attached.
 - Remove the baby capsule if connected to the frame prior to folding.
 - The rain cover and shade cover must also be removed if fitted.
- ⌚ **TIP:** The stroller seat and wheels can be removed to reduce the total folded size.
- ⌚ **TIP:** For easier handling, it is recommended to remove the stroller seat from the frame (refer to PAGE 27) before folding. Then fold the frame and put both the seat and frame in the car.
- ⌚ **TIP:** For smaller cars it may be convenient to simply remove the rear wheels.

Stroller Operation


Folding the Stroller

A

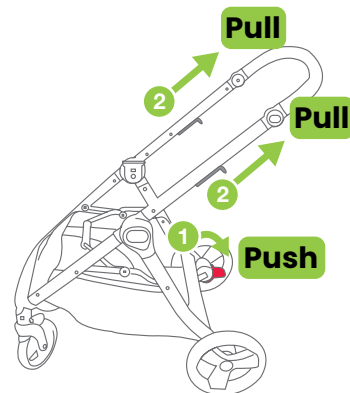


Engage the brake (1). Pull the latches on the handle tube upwards (2) and drop down the handle all the way.

 B

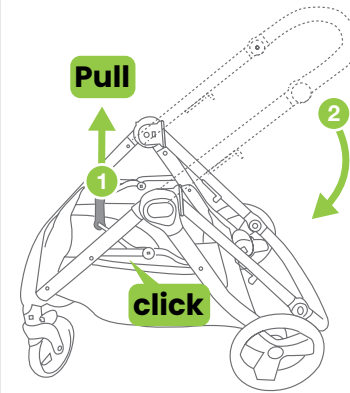

Pull the folding handle under the stroller seat upwards (1) until you hear a 'click' and the frame is fully folded (2).

 C

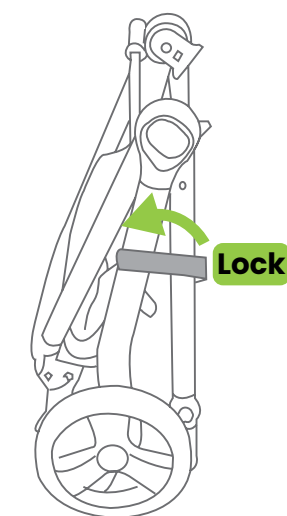

Lock the frame in place using the frame lock latch.

Baby Capsule Operation

Baby Capsule Information

WARNING:

- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- DO NOT EXCEED THE MAXIMUM WEIGHT CAPACITY ON THE BABY CAPSULE.

IMPORTANT NOTES:

- This stroller is compatible with Britax and competitor baby capsules.
- Only use baby capsules that are compatible to fit to this stroller. For detailed compatibility refer to:

Australia:
britax.com.au



New Zealand:
britax.co.nz



 
- Remove the stroller seat from the stroller frame before installing the baby capsule.
- The baby capsule must be correctly fitted and locked onto the frame.
- The baby capsule must only be used in the rearward facing position (baby facing parent), fitted facing toward the stroller handle.
- Secure the child using the baby capsule harness at all times.
- Do not leave the child in the baby capsule for extended periods.
- The baby capsule is designed to provide mobility outside of the car but it should not be used instead of an appropriate cot.
- The baby capsule must be removed from the stroller frame before folding.
- The sun is very strong. Do not leave your child exposed to the sun. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

Baby Capsule Operation

Installing & Removing the Britax Click & Go™ Baby Capsule Adaptors (Sold Separately)


WARNING: THE BABY CAPSULE ADAPTORS MUST BE ATTACHED TO THE STROLLER FRAME BEFORE INSTALLING THE BABY CAPSULE.

A

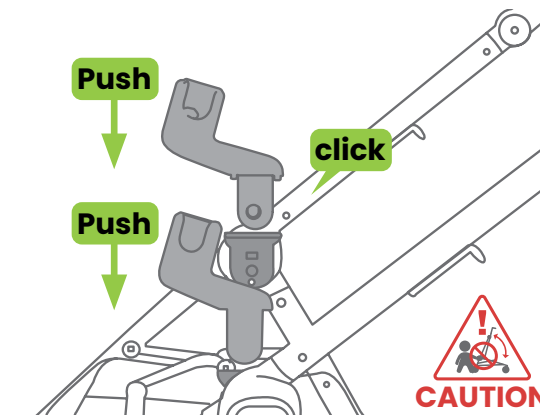

Engage the stroller brake first. Align the baby capsule adaptors to the stroller frame socket and push down until you hear a 'click' sound and locks into position. Ensure adaptors are locked correctly by pulling up to check.

 B

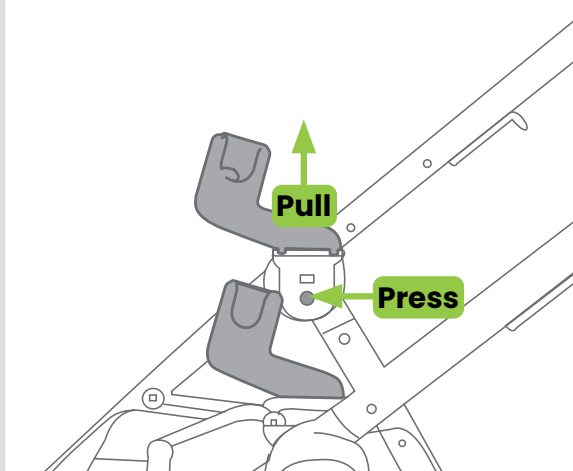

To remove the adaptors, press in and hold the button on the bottom of the adaptor and pull up the adaptors out of the frame sockets.

 
Attaching & Removing the Britax Baby Capsule (Sold Separately)

PLEASE NOTE: These instructions are for installing and removing the Britax baby capsule on the stroller only. For installing and proper use of the baby capsule in the car, please follow the instruction manual provided with the baby capsule.

Ensure the baby is secured in the baby capsule with the harness at all times. Refer to the baby capsule instruction manual regarding placing and securing your baby in the baby capsule.


For attaching or removing competitor baby capsules refer to instruction manual provided with the baby capsule.

- A** Engage the stroller brake. Align baby capsule with the baby capsule adaptors and press down until you hear a 'click'.

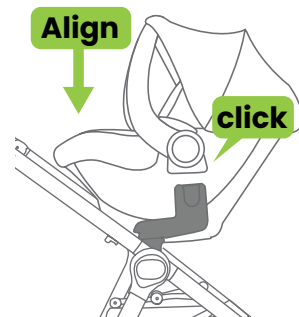

Pull up the baby capsule to ensure it is locked into the stroller frame.

 Note: The baby capsule must be on parent facing mode (facing the stroller handlebar).

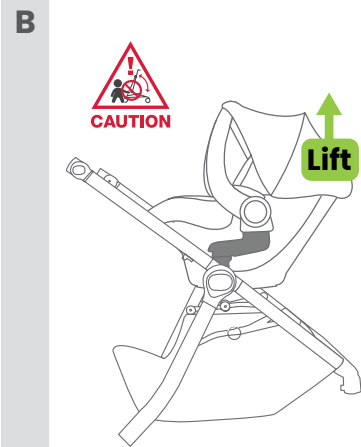

Before removing the baby capsule, engage the stroller brake first.

Pull and hold the release lever on the back of the baby capsule and lift to remove from the adaptors on the stroller frame.

General Maintenance & Repair

- Ensure all safety devices, locks, harness, and brakes are in working order.
- Ensure all joints and folding areas move freely as intended.
- Should any moving or locking parts become stiff or hard to operate, ensure these are free from tension, or dirt by wiping clean with a damp cloth to remove any dirt, sand, or debris. Allow to dry and lightly spray with a dry silicon lubricant. Please carefully read the lubricant instructions prior to use.
- Ensure wheels are regularly cleaned with a damp cloth by removing dirt, sand, or debris. Allow to dry and lightly spray the wheel pivot pin with a dry silicon lubricant to keep the wheels moving smoothly. Please carefully read the lubricant instructions prior to use.
- Regularly spray all moving parts with a dry silicon lubricant. Please carefully read the lubricant instructions prior to use.
- Ensure all connecting rivets and screws are secure. Tighten if required.
- If there are compression marks on the tyres, use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- To maintain the safety and longevity of the

stroller, seek prompt repairs or replacement for bent, torn, worn, or broken parts. Do not continue to use the stroller if unsafe.

- All repairs should only be carried out by an authorised Britax repairer. Only Britax replacement parts should be used with the stroller. It may be unsafe to use parts supplied from another manufacturer.

General Tips

- **Do not store the stroller in your car** for prolonged periods of time during summer as it may lead to damage to some of the plastics components.
- **Do not leave the stroller in direct sunlight** for extended periods of time, as colours of some fabrics may fade, and tyres may deteriorate.
- **Do not fold or store the stroller if damp or wet**, as fabric may develop mould or mildew. Always store the stroller inside in a dry, well-ventilated area.
- **Do not place heavy objects on top of the stroller** as it may alter the shape.

Should you have any further questions on care & maintenance of the stroller, please contact our Consumer Service Team at:
aunz-support@britax.com

Care and Maintenance

Cleaning

Fabrics

- Removable fabrics may be cleaned using lukewarm water and soap or mild detergent. Rinse thoroughly and allow to dry away from direct sunlight.
- Non-removable fabrics can be spot cleaned using a damp sponge and soap or mild detergent. Allow to dry completely before re-use or storage.
- Never use bleach, or abrasive cleaning products.
- **DO NOT** iron or dry clean.

PLEASE NOTE: DO NOT place any of the stroller fabrics in the dryer. Allow to dry naturally, away from direct sunlight.

Frame

- Remove dirt and dust away from any moving mechanism.
- Clean frame with a soft damp cloth and soap or mild detergent and allow to dry thoroughly.
- **DO NOT** use abrasive cleaning products as it may cause stains, discolouration or scratches to the frame.
- **DO NOT** soak or submerge frame in water.
- **DO NOT** remove, dismantle or alter any part of the stroller mechanism or brakes.

Leatherette

- Spot clean with a damp soft cloth.
- **DO NOT** use a dripping wet cloth or wet the leatherette excessively.

Wheels

- Remove wheels from stroller.
- Clean with damp cloth and soap or mild detergent. Use brush to remove dirt and mud build up around the tyre. Allow to dry thoroughly before placing wheels back on the frame.
- If necessary lubricate wheel shaft with a small amount of lubricant before placing into the stroller.
- Ensure the stroller is cleaned thoroughly after using it on the beach as sand and salt can damage stroller mechanism, wheel assembly, causing premature wear and corrosion.

PLEASE NOTE: Our product warranty does not cover any rust to the rivets or screws, if you are caught in the rain or at the beach always thoroughly dry the frame to avoid any rust damage.

Just like servicing your car or bicycle, prams and strollers also need **regular maintenance checks**. These checks can improve product performance, extend the life of your stroller and help to provide you and your children a safe and smooth journey.



We recommend servicing your stroller every 6 months and completing an inspection once a month. To prolong the life of your stroller, a regular maintenance should be performed.

Care and Maintenance

5 STEP CHECK LIST

- 1. INSPECT SAFETY DEVICES** tether strap, frame lock, harness, buckle and brakes, and ensure all are in working order and free from dirt, sand, and debris.
- 2. INSPECT** all connecting rivets and screws are secure.
- 3. MAKE SURE FOLDING JOINTS** are free of dirt, dust, and debris by cleaning with a damp cloth, allow to dry and lightly spray with a dry silicon lubricant. Please carefully read the lubricant instructions prior to use.
- 4. REMOVE WHEELS** and wipe clean with a damp cloth to remove any dirt, sand or debris. Allow to dry and lightly spray the wheel pivot pin with a dry silicon lubricant to keep the wheels moving smoothly. Please carefully read the lubricant instructions prior to use.
- 5. ENSURE WHEN FOLDING AND STORING** to wipe down your stroller frame and allow to dry before storing in a dry place without direct sunlight.

Warranty

Australian Consumer Law

On all of our goods, you have the benefit of a statutory consumer guarantee. In summary, goods are guaranteed to be of “acceptable quality” (fit for purpose), goods are guaranteed to match any sample against which they are sold. These consumer guarantees are provided for by the Australian Consumer Law and, if you believe any one of these guarantees is not satisfied by a Britax product, you have rights under the Australian Consumer law to enforce that guarantee.

Your rights under the statutory consumer guarantees are set out in the **Australian Competition and Consumer Commission’s Consumer Guarantees – A Guide for Consumers.**

In addition to the statutory consumer guarantees, **Britax** offers its own company warranty on all of its products. You therefore have the option of seeking redress for defective or faulty product either under the **Britax** company warranty or the statutory guarantees.

After the **Britax** company warranty expires, you still have your rights under the statutory consumer guarantees.

International Warranty

Britax products are available through a network of retailers in Australia and New Zealand. If you are an international customer we do not offer a warranty service outside of these regions.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

Warranty

Did you know?

Registering your product online simplifies proof of purchase in the event of a warranty claim.

Head to our website to fill out the product registration form:

britax.com.au britax.co.nz



Making a Warranty Claim

Your rights under a **Britax** company warranty are separate from and independent of your rights under the statutory consumer guarantees. What you need to do to enforce your rights under a statutory consumer guarantee is set out in the **Australian Competition and Consumer Commission’s Consumer Guarantees – A Guide for Consumers.**

To make a claim under a **Britax** company warranty, please contact our customer service team on:

Australia: 1300 303 330 / **New Zealand:** 0508 688 822 or alternatively by email at: **aunz-support@britax.com**

You will be required to :

- Return the product to the place of purchase or to a designated repair agent;
- Present your receipt as proof of purchase;
- Identify the defect in the product; and
- Present the product to Britax for inspection on request.

Britax will advise you whether the product is covered by the **Britax** company warranty. **Britax’s** decision of whether a product is covered by a **Britax** company warranty is final. Britax will act reasonably when determining whether a product is covered by a company warranty.

Britax Childcare Pty. Ltd.

A.B.N. 55 006 773 600

Level 4, 650 Lorimer Street, Port Melbourne, Victoria 3207, Australia

Phone: (03) 9288 7288 **Fax:** (03) 9311 5798

Customer Service

Australia: 1300 303 330 / **New Zealand:** 0508 688 822

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The **Britax** trademark is the property of Britax Childcare Holdings Limited – UK.

Visit the **Britax** website at: **britax.com.au** or **britax.co.nz** or email us at

aunz-support@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with **Australian Standard AS 2088:2022**

“Prams and Strollers- Safety Requirements”

Copyright © 2026 Britax Childcare Pty. Ltd. Australia