



IMPORTANT:

KEEP THIS BOOKLET IN THE PLACE PROVIDED ON THE CHILD RESTRAINT




Harnessed Child Restraint

INSTRUCTION BOOK




Series No. BL90G/A/2013

baby 
love™

SEATBELT QUICK SETUP

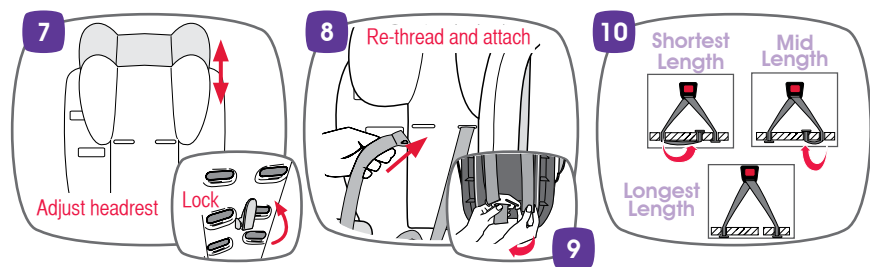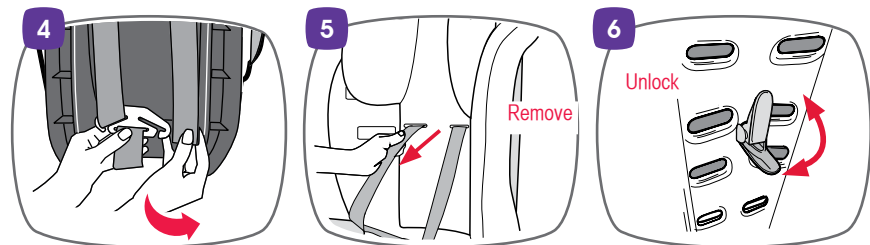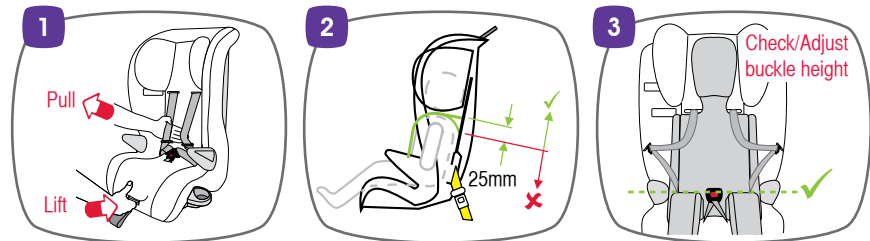

SEATBELT QUICK SETUP

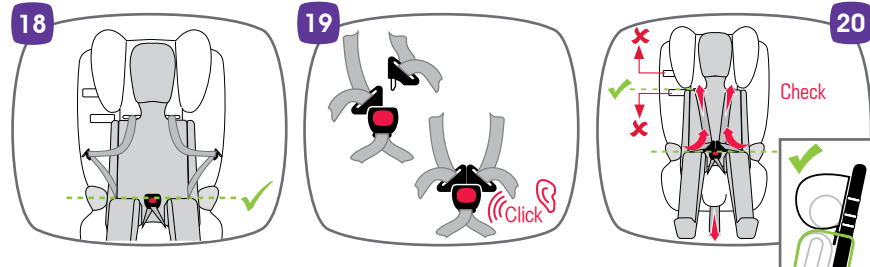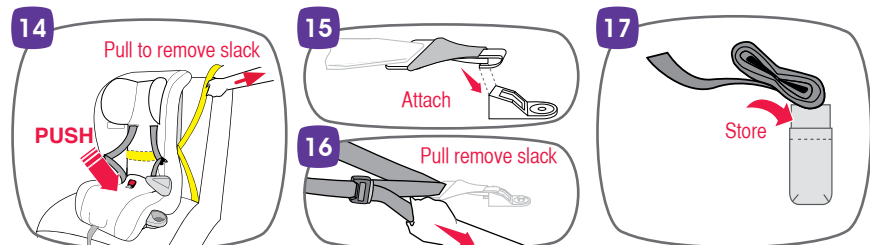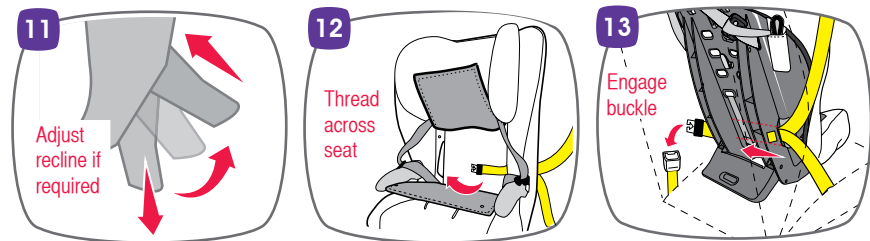

INTRODUCTION

肩膀超过靠下肩高标记的婴儿 (大约6个月的宝宝) 只采用前向式安装, 直到儿童肩膀达到靠上的肩高标记 (大约8岁的儿童)。

在儿童达到该座椅上限以前必须不断使用这一安全座椅。

在儿童肩膀超过靠下的肩高标记前不得使用该儿童安全座椅。

婴儿若过早乘坐前向式座椅则可能受到严重的伤害。

儿童过早使用垫高椅则可能受到严重的伤害。

不建议个子比该座椅大儿童仅仅使用安全带。儿童肩膀达到该垫高椅靠上的肩高标记以前最安全的办法是使用垫高椅。

Magagamit lamang sa isang nakaharap pasulong na posisyon ng isang bata na ang mga balikat ay lampas sa ibabang marka ng taas ng balikat (humigit-kumulang 6 na buwang edad) hanggang sa maabot ng mga balikat ng bata ang itaas na marka ng taas ng balikat (humigit-kumulang 8 na taong gulang).

Ipagpatuloy ang paggamit ng pampigil ng bata na ito hanggang sa maabot ng bata ang limitasyong ito.

Huwag gamitin ang pampigil sa bata na ito hanggang sa ang mga balikat ng bata ay lumampas sa ibabang marka ng taas ng balikat.

Ang mga sanggol ay nasa seryosong peligro ng pagkapinsala kung sila ay haharap ng masyadong maaga.

Ang mga bata ay nasa seryosong peligro ng pagkapinsala kung sila ay masyadong maagang ililipat sa mga upuang booster.

Ang paggamit lamang ng seatbelt ay hindi inirekomenda para sa mga bata na nakalakhan na ang pampigil na ito. Ang mga bata ay pinakaligtas sa isang upuang booster hanggang sa maabot ng kaniyang mga balikat ang itaas na marka ng taas ng balikat ng upuang booster.

INTRODUCTION

केवल उस शिशु द्वारा मात्र सामने की दशा की स्थिति में प्रयोग किया जाना चाहिए जिसके कंधे कंधे के नचिले भाग से ऊपर आ गए हों (लगभग 6 महीने की आयु पर) और तब तक जब तक कि शिशु के कंधे कंधे के ऊपरी भाग के चिन्ह तक न पहुँच जाएँ (लगभग 8 वर्ष की आयु पर)।

शिशु के इस सीमा तक पहुँचने तक इस शिशु प्रतबिन्ध का प्रयोग जारी रखें।

शिशु प्रतबिन्ध का प्रयोग तब तक न करें जबतक कि शिशु का कंधा कंधे के नचिले भाग के चिन्ह को पार न करे।

शिशुओं को समय से पहले सामने की ओर बैठाए जाने पर उन्हें गम्भीर चोट का खतरा होता है।

बूस्टर सीट को समय से पहले प्रयोग किए जाने पर शिशुओं को गम्भीर चोट का खतरा होता है।

जनि शिशुओं की आयु इस सीट के लिए उचित आयु से अधिक हो गई हो उनके लिए मात्र सीटबेल्ट के प्रयोग का सुझाव नहीं दिया जाता है। शिशु बूस्टर सीट में तब तक सबसे अधिक सुरक्षित होते हैं जब तक कि उनके कंधे बूस्टर सीट के कंधों के उपरी चिन्ह तक न पहुँचें।

Sólo debe utilizarse orientado hacia adelante para un niño cuyos hombros sobrepasen el marcador de altura inferior (aproximadamente a los 6 meses de edad) hasta que los hombros del niño alcancen el marcador de altura superior (aproximadamente a los 8 años de edad).

Utilice este sistema de seguridad infantil hasta que el niño alcance ese límite.

No utilice este sistema de seguridad hasta que los hombros del niño no sobrepasen el marcador de altura inferior.

El niño corre el riesgo de sufrir lesiones graves si se utiliza la silla orientada hacia adelante antes de tiempo.

El niño corre el riesgo de sufrir lesiones graves si se lo traslada antes de tiempo a un asiento elevador.

No se recomienda utilizar sólo un cinturón de seguridad para el niño que ya no quepa en este asiento. El niño estará más seguro en un asiento elevador hasta que sus hombros alcancen el marcador de altura superior del asiento elevador.

Carefully read all the instructions for installation in this book. If in doubt about the method of installation, consult Nursery Elegance or agent or a child restraint fitter or, in New Zealand, to consult the agent for the vehicle.

This car seat is suitable for toddlers and older children as a harnessed child restraint from 6 months to 8 years of age (approximately).

TO BE USED WITH A LAP-SASH OR LAP ONLY SEATBELT IN THE BACK OF MOST CARS WITH FORWARD FACING SEATS.

The child should not sit in this forward facing child restraint until their neck muscles are able to support their head. Babylove recommends that you keep your child in a rearward facing restraint for as long as possible (up to approximately 12 months or more).

Regional Road Rules may prohibit the use of a restraint in the front seat of a vehicle until the child is 4 years of age. Check your Regional Rules for exemptions.

No child restraint can guarantee absolute protection from injury in every crash. However, to ensure that your child gets all the protection designed into the restraint. PLEASE READ AND FOLLOW THESE INSTRUCTIONS EXACTLY and use only Babylove recommended parts and accessories.

THIS RESTRAINT MUST BE ATTACHED TO A CHILD RESTRAINT UPPER ANCHORAGE POINT IN THE CAR. REFER TO CAR OWNER'S HANDBOOK FOR LOCATION OF UPPER ANCHORAGE POINTS. REFER TO A CHILD RESTRAINT FITTING STATION IF NO UPPER ANCHORAGE POINTS ARE IN THE MOTOR CAR. Refer to pages 37.

Follow these instructions so that the protection to the occupant is not reduced. The seat belt, tether strap, headrest and harness must be adjusted correctly and the restraint reclined as instructed. For particular advice refer to the index on the next page.

This child restraint is not suitable for use on an aircraft.

Always store the instruction book in the pocket provided on the side of the cover.

PAGE

- 10** WARNINGS
- 12** SPECIAL FEATURES
- 14** SHOULDER HEIGHT MARKERS & A GROWING CHILD
- 16** SHOULDER HEIGHT LABELS & THE NEXT STEP
- 17** SUITABLE FOR USE
- 18** HOW TO SETUP
- 24** HOW TO INSTALL
- 28** HOW TO USE
- 30** HOW TO REMOVE
- 31** CARE AND MAINTENANCE
- 34** ACCESSORIES AND FEATURES
- 37** INSTALLATION OF CARS UPPER ANCHOR FITTING
- 41** IN CASE OF ACCIDENT


WARNINGS

- Fit the restraint firmly to the car seat.
- Fit the harness firmly to the child.
- A loose restraint or harness is dangerous.
- Supervision of children is needed because they may be able to undo buckles and adjusters.
- Use the restraint exactly as shown in the instructions.
- **DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.**
- Do not alter or modify this restraint.
- Repairs must only be done by the manufacturers or agent.
- Do not allow the restraint to come into contact with polishes, oils, bleach and other chemicals.
- Destroy the restraint if it has been in a severe crash, even if no damage is visible. See page 41.
- **DO NOT USE THIS RESTRAINT WITHOUT THE COVER.**
- Always secure the loose end of the top tether strap. Do not use the child restraint where this strap may fall into the seat back or off the side of the seat.
- **ALWAYS ATTACH HOOK AND REMOVE SLACK.**
- **DO NOT ATTACH THIS CHILD RESTRAINT TO ANY ISOFIX LOW ANCHORAGE.** ISOFIX low anchorages in cars are designed to withstand only those loads imposed by children aged up to approximately 4 years of age in a correctly fitted and approved ISOFIX compatible child restraint. This child restraint is not approved for use with the car's ISOFIX low anchorages.

IMPORTANT :


- Regularly check the restraint components, straps and other fittings for correct function and condition. Seek prompt repair.
- **IF AN AIRBAG IS FITTED IN THE SEATING POSITION WHERE THE CHILD RESTRAINT IS TO BE FITTED, FOLLOW THE VEHICLE MANUFACTURERS WARNINGS AND INSTRUCTIONS.**
- Protect all webbing from abrasion and cutting by sharp corners and edges.
- The restraint should not be purchased or sold as a second hand item. It is recommended not to use child restraints older than 10 years as the protection in an accident may be reduced.
- This restraint must be used in conjunction with a lap or lap-sash seatbelt.
- The restraint should not be purchased or sold as a second hand item. It is recommended not to use child restraints older than 10 years as the protection in an accident may be reduced.
- This restraint must be used in conjunction with a lap or lap-sash seatbelt.
- **THIS RESTRAINT IS NOT SUITABLE FOR USE WHERE THE TOP TETHER STRAP MAY FALL INTO A SPLIT IN THE SEAT BACK OR OFF THE SIDE OF THE SEAT.**
- Seatbelt extenders are not recommended to be used if the seatbelt is not long enough to secure the child restraint. If seatbelts are too short then seek advice from a child restraint fitter and consider their recommendations before using a seatbelt extender. If you use a seatbelt extender then ensure that the seatbelt buckle does not contact the child.

SPECIAL FEATURES

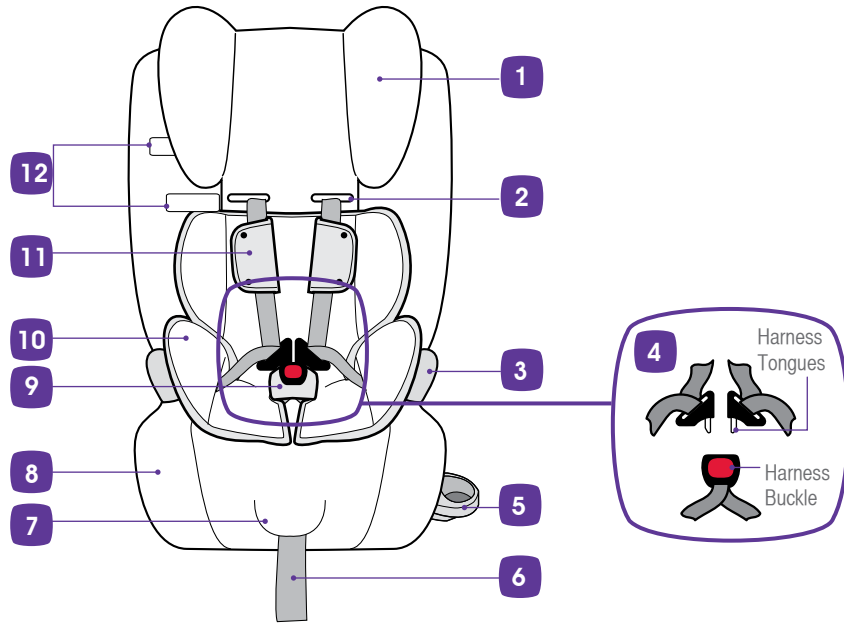

- | | |
|--|--|
| 1. Adjustable Headrest | 7. Harness Adjustment Lever (under flap) |
| 2. Harness Slots | 8. Padded cover for comfort |
| 3. Armrests | 9. Crotch Pad (If fitted) |
| 4. Harness Tongues and Buckle (Red button) | 10. Padded Insert (If fitted) |
| 5. Cup Holder (if fitted) | 11. Shoulder Pads (If fitted) |
| 6. Harness Adjustment Strap | 12. Shoulder Height Markers |


SPECIAL FEATURES

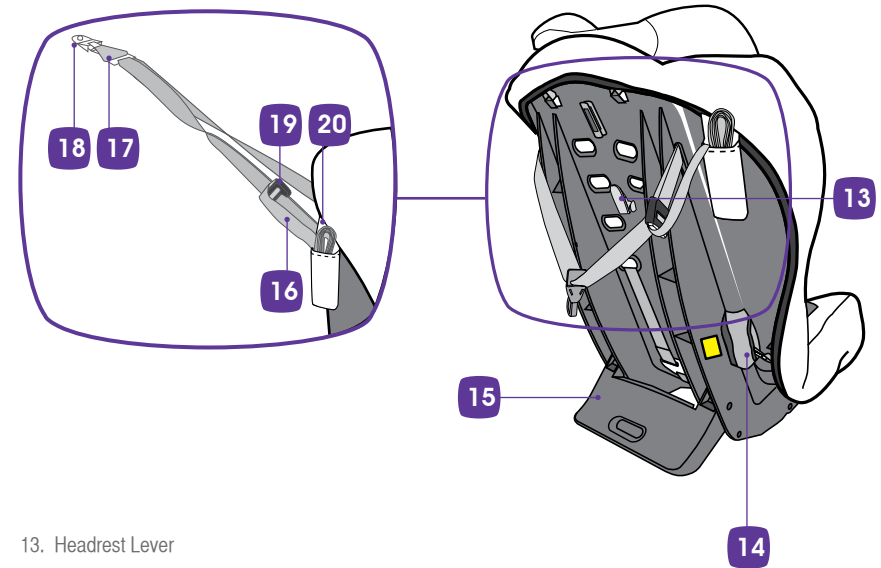

- | |
|---|
| 13. Headrest Lever |
| 14. Path for the car's Lap-sash seatbelt or lap only seatbelt |
| 15. Adjustable Recline Foot |
| 16. Adjustable Top Tether Strap |
| 17. Attachment Clip |
| 18. Car's Upper Anchorage fitting |
| 19. Top Tether Strap Adjuster |
| 20. Top Tether Storage Pocket (attached to cover) |

NOTE: Not all features are supplied on some models. "if fitted" is used to indicate some of the features that may not be on the child restraint supplied.

SHOULDER HEIGHT MARKERS & A GROWING CHILD

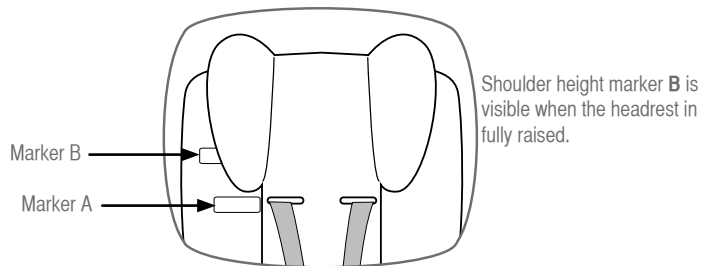

YOUNG CHILD

Commence use when shoulders must not be below the lowest shoulder height marker.


From approximately 6 months of age

However, Babylove recommends that you keep your child in a rearward facing restraint for as long as possible (up to approx 12 months).

OLDER CHILD

Discontinue use when shoulders are in-line with highest marker.

To approximately 8 years of age.

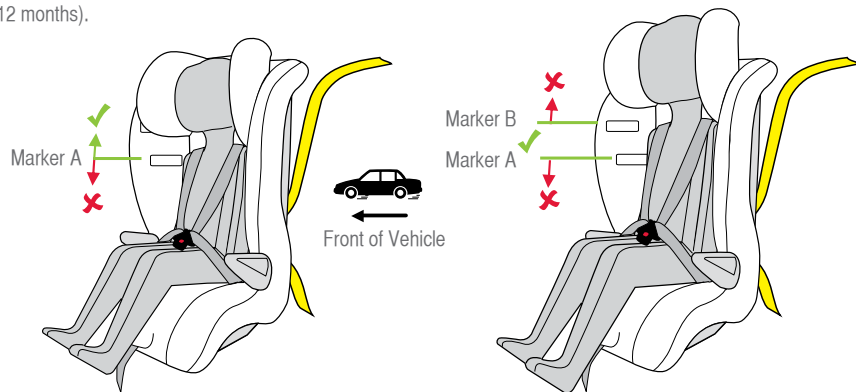

Change to the next type of booster seat or vehicle seatbelt when shoulders reach the upper shoulder height marker when the headrest is in the highest position.


If a child no longer physically fits in the seat then move to the next form of child restraint.

SHOULDER HEIGHT MARKERS & A GROWING CHILD

! IMPORTANT: Follow this advice.


Marker A Smaller Toddler - LOWER SHOULDER HEIGHT MARKER

The child's shoulders must be in-line or above this marker. If the child's shoulders are below then the child should remain in their previous child restraint. Approximately 6 months.

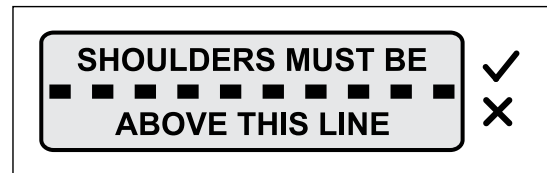

Marker B Larger Child - UPPER SHOULDER HEIGHT MARKER

When the child's shoulders reach this upper marker, or the child no longer fits in the child restraint, approximately 8 years of age, then the child must be moved to the next form of child restraint, see next page.

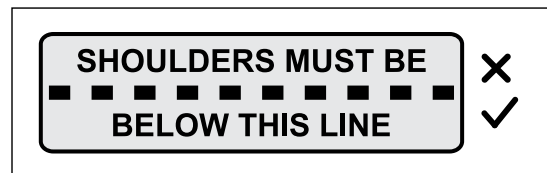

SHOULDER HEIGHT LABELS & THE NEXT STEP

Next type of restraint that can be used in the car for your child.

When your child has outgrown the seat, you can then either use:

Use a booster seat suitable for children up to 8-10 years of age and a Child Harness suitable for use with the booster seat.




Or you can use a booster seat suitable for children up to 8-10 years of age with the car's seatbelt.

For more information on suitable booster seats visit www.babylove.com.au or www.britax.com.au

Or the car seatbelt.

If a child's legs do not hang over the edge of the vehicle seat then they need to use a booster seat so that the seatbelt fits correctly and so the child does not slump. A lap seatbelt on the child's abdomen is dangerous.

NOTE: This child restraint includes a booster seat configuration for children 4 years to approximately 6 to 8 years.

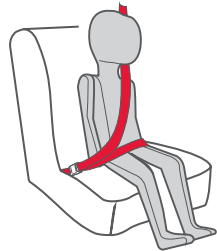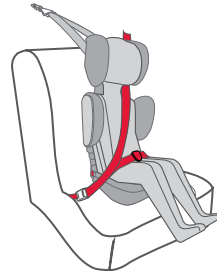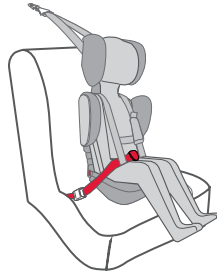

SUITABLE FOR USE

TO BE USED WITH A LAP SASH OR LAP ONLY SEAT BELT IN THE BACK OF MOST CARS WITH FORWARD-FACING SEATS.

To be used only in a forward-facing position by a child whose shoulders are above the lower shoulder height marker (approximately 6 months of age) until the child's shoulders reach the upper shoulder height marker (approximately 8 years of age).

This child restraint uses a top tether strap and needs to be placed in a car seating position with a child restraint anchor fitting or anchorage point. If there is no anchor fitting see pages 36 to 38.

Infants are at risk of serious injury if they face forward too early.

The child should not sit in this forward facing child restraint until their neck muscles are able to support their head. Stay in a rear facing child restraint.

Regional Road Rules may prohibit the use of a restraint in the front seat of a vehicle until the child is 4 years of age. Check your Regional Rules for exemptions.

WARNINGS

- Fit the restraint firmly to the car seat and then fit the harness firmly to the child.
- A loose restraint or harness is dangerous.
- Do not use this restraint if the child's shoulders are below the lowest shoulder height marker.
- Do not use in a front seat, unless it has a child restraint anchorage point i.e.: utilities.
- Do not use the restraint without the Top Tether Strap correctly attached.
- Do not use on any vehicle seat which faces sideways or rearwards.
- WHERE AN AIRBAG IS FITTED IN THE SEATING POSITION WHERE THE CHILD RESTRAINT IS TO BE FITTED, FOLLOW THE VEHICLE MANUFACTURERS WARNINGS AND INSTRUCTIONS.

IMPORTANT:

Use lap or lap-sash seat belt and upper anchorage strap to attach the child restraint to the vehicle seat when using the in-built harness.


HOW TO SETUP

SETTING UP THE HARNESS

- A. Put the restraint on a flat ground and supported from behind so that it will not tip over.
- B. Sit the child comfortably in position.
- C. Check the height of the buckle and adjust if necessary as detailed on page 23.
- D. Determine the desired headrest position, just above the child's shoulders.
- E. Remove the child and adjust the shoulder straps if necessary as detailed on page 19 and 22.
- F. Repeat steps A-D to confirm the correct set-up of the built-in harness.

ADJUSTING THE BUCKLE POSITION

The buckle needs to be positioned as shown. If the buckle is too low it will be uncomfortable and needs to be lengthened. See next page for adjusting to a better position.

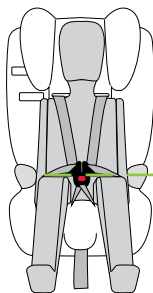

Buckle Position
OK
Centre of button on buckle, level with top of child's thighs or just above (with all slack removed from crotch strap.)

IMPORTANT :


You must adjust the crotch strap to the correct length for your child before installing the restraint as it cannot be adjusted in the car. The crotch strap should only be extended if the harness tongues are located low against your child's legs, thus creating discomfort. Always return the crotch strap to its shorter length when using the seat with a smaller child. The buckle should always be positioned low down on your child's abdomen.

HOW TO SETUP

ADJUSTING SHOULDER HARNESS STRAPS


Correct fitment of the harness is very important to protect the child. The harness must fit firmly around the upper torso of the child and be positioned so as to leave the child's arms and legs free.

- 1. Lower shoulder strap slots
- 2. Mid shoulder strap slots
- 3. Upper shoulder strap slots
- 4. Top slots in seat back
- 5. Headrest clamp
- 6. Lower Height Marker
- 7. Upper Height Marker
- 8. Harness Slots in Headrest
- 9. Shoulder harness straps
- 10. Harness tongues & buckle
- 11. Lap strap slots
- 12. Crotch strap slots
- 13. Harness adjustment strap

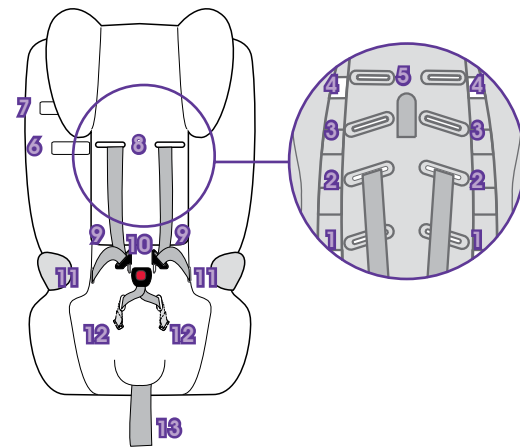

The shoulder straps must be in the slots which are nearest to the child's shoulders, but not more than 25mm below the child's shoulders.


Always adjust the height of the shoulder straps and crotch straps as the child grows.

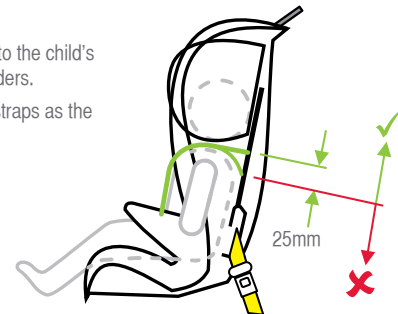


HOW TO SETUP

ADJUSTING HARNESS STRAP HEIGHT & HEADREST: STEPS IN CHANGING SHOULDER STRAP SLOTS


A. To adjust harness strap height and/or adjust headrest, lengthen the harness by lifting the lever and pull the harness to lengthen.

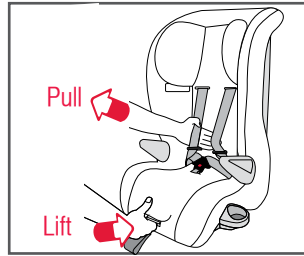

B. At the rear of the restraint, remove both harness shoulder straps from metal Strap Connector by slipping strap through open slot.

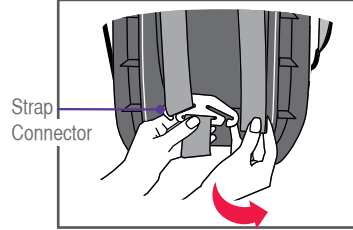

C. Pull the shoulder straps through slots at the front of the restraint.

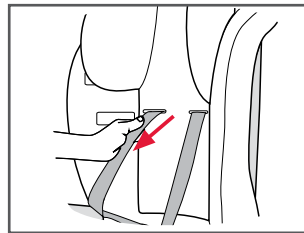

D. Release the headrest at the back of the restraint by rotating the lever down to loosen headrest clamp (1). Slide the headrest up or down to suit the height of your child. Ensure that the headrest slots align with the corresponding slots of the seat shell. Rotate the lever upward to clamp the headrest (2). DO NOT clamp the headrest in any position, with the slots not aligned correctly. Check alignment of slots as shown in Fig 1.

HOW TO SETUP



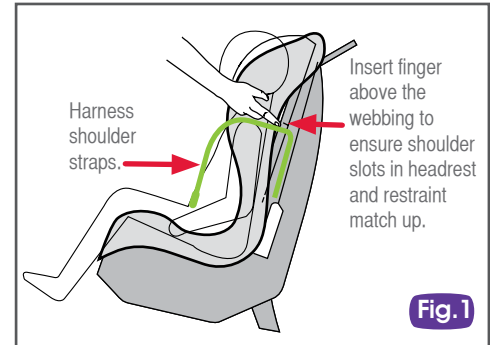


Fig. 1


HOW TO SETUP

- E. Thread the shoulder straps through the slots.
Engage the straps to the metal strap connector.

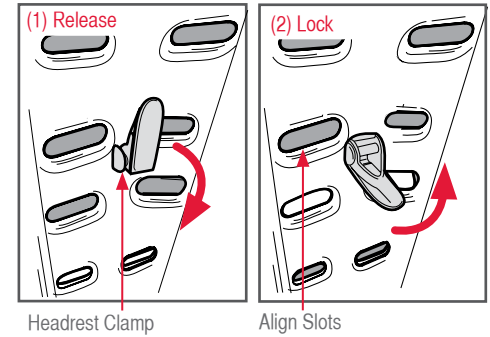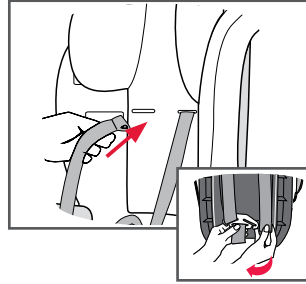

! IMPORTANT :

Never adjust the height of the headrest without changing the harness strap slots.

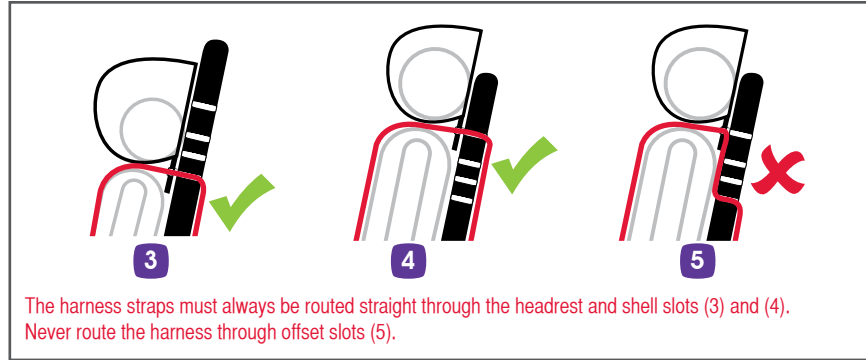


HOW TO SETUP


ADJUSTING THE CROTCH BUCKLE HEIGHT

The crotch buckle height can be adjusted by threading the 3 bar slide into other slot configurations.


- Lift trim cover to reveal crotch strap slots and the 3 bar slide.
- Turn the crotch 3-bar slide and push through each slot as shown right until the Crotch strap assembly through the slot. Turn the seat over to access the 3 bar slide underneath the seat.
- Having released the 3 bar slide this forms the longest length. If a mid-length is required, take the 3 bar slide from an outer slot and feed through the centre slot by turing the 3 bar slide on its side to form a short loop. See 2 below.
- Repeat steps A,B and C and leave the 3 bar slides underneath the seat to achieve the highest crotch strap length. See 3 below.
- Refit the cover.
- Pull the crotch buckle upwards to remove slack.
- Check the buckle height on the child's thighs.

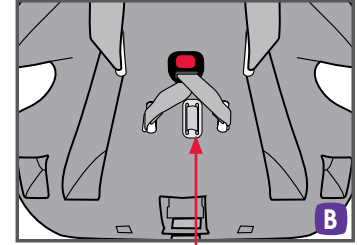

Centre Slot

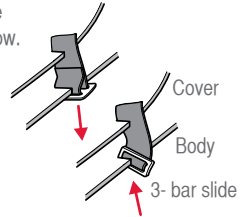


1. Shortest Length for smaller size child

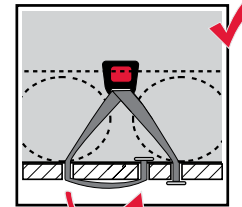


Long loop

2. Mid Length for Mid size Child

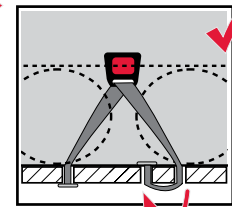

Short loop

3. Longest Length for larger child

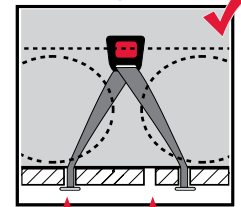

Centre of buckle above the thighs

3 Bar Slide

Centre slot

! IMPORTANT :

When replacing cover, ensure none of the harness straps are twisted and that all straps are secure by pulling each harness strap.



HOW TO INSTALL

INSTALLING INTO VEHICLE (FORWARD-FACING) (UPRIGHT OR RECLINED)

A. Determine whether an upright or reclined installation is required.

B. To move the Recline Foot from upright to reclined mode or vice versa. Pull the Foot outwards to unlock it, then rotate the foot.

Push inwards to lock in place. See diagrams below.

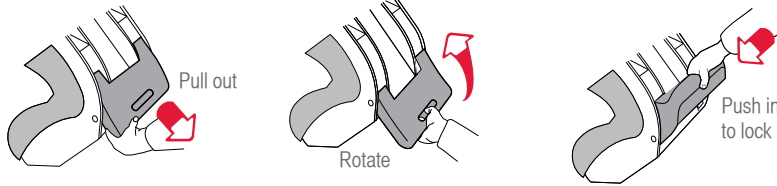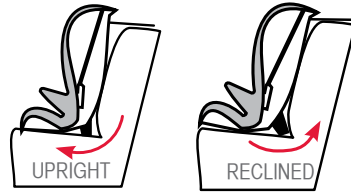



HOW TO INSTALL

C. Position restraint centrally to the chosen car seat position. The restraint must be in a forward facing direction. Some vehicle seat fabrics (particularly velours) may be damaged by a child restraint used continuously. We recommend the use of a thick towel or other protection under and behind the seat to keep the vehicle seat in good condition.

Pull the centre panel flap down and gently lift headrest trim end.

Fully lengthen seatbelt and feed the seatbelt through the closest seatbelt path slot and pass across the seating surface through the opposite slot. Follow the yellow belt path label - **FORWARD-FACING BELT PATH** and engage the seatbelt into the buckle.

Put the top tether strap over the back of the seat to avoid it becoming trapped during seat fitment.

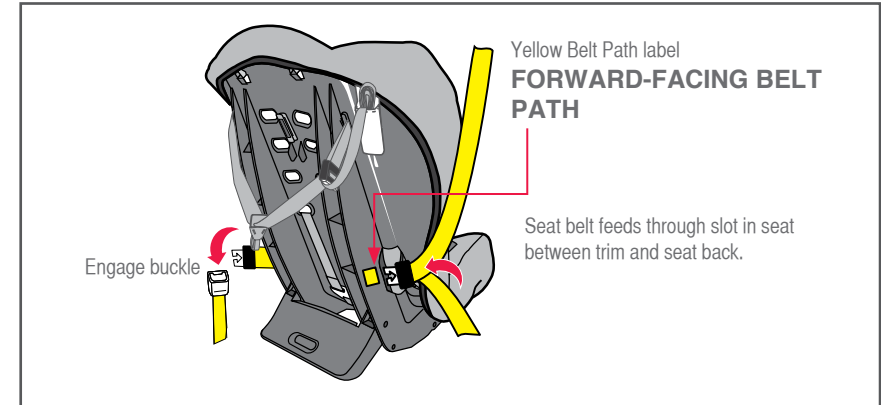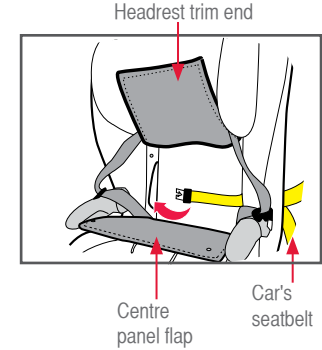

HOW TO INSTALL




- D. Lengthen the top tether strap and connect the attachment clip to the car's upper anchorage point making sure to remove as many twists as possible.

Lengthen the top tether strap by fully pressing the adjuster button (A) while pulling top tether strap (B) to slacken as shown left.

Refer to your vehicle owner's manual for the location of the upper anchorage point in the car. If the vehicle is not fitted with a child restraint upper anchorage point then refer to page 37 to 40 for the installation of the upper anchorage point provided with this child restraint.

- E. Push down on the restraint to compress it into the vehicle seat. Whilst compressed in the seat, pull on the lap portion to remove all slack from the belt. Pull the sash belt and allow excess belt to feed back into the retractor. Ensure all slack is removed from the lap and sash belt.

- F. The restraint should now be held firmly against the vehicle seatback. The top tether should be left slack until the sash belt is fitted and all slack removed.

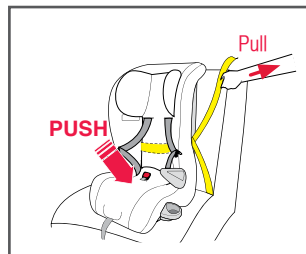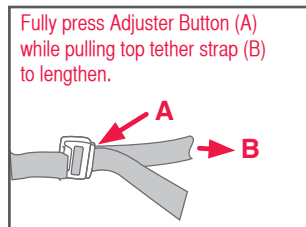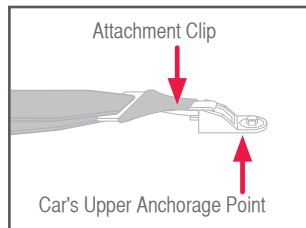



CAUTION:
CHILDREN CAN BE INJURED OR RESTRAINTS AND TOP TETHER STRAP DAMAGED BY UNSECURED CARGO IN A COLLISION. SECURE OR REMOVE HAZARDOUS CARGO BEFORE USING THIS CHILD RESTRAINT.

HOW TO INSTALL

- G. Pull the top tether adjustment strap (C) to remove all slack but do not tighten.

Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible to the child. Fold up excess strap and use pocket to store excess strap behind seat.

EXPLANATION NOTE: This method of installation ensures good seatbelt tension, even with the child in the seat. We recommend that as your child grows, you should periodically check the seatbelt and top tether tension to ensure that the car seatbelt has not slackened and the top tether strap is not too tight.

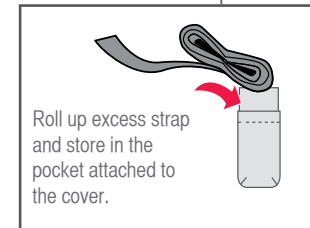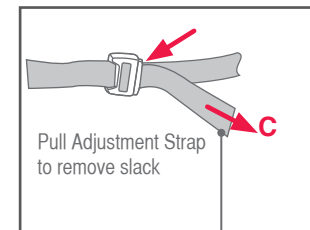


IMPORTANT :
Always ensure that the car seatbelt is firmly restraining the child restraint on the vehicle seat and ensure the slack is removed from the tether strap.
Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible by the child. Do not use the child restraint where this strap may fall into a split in the seatback or off the side of the seat.
Make sure cup holders (if fitted) do not interfere with closure of the car door.
ALWAYS attach top tether hook and remove slack.


HOW TO USE

PLACING CHILD IN THE RESTRAINT

A. To lengthen harness lift harness adjustment lever while pulling on both shoulder straps evenly until the harness will accommodate the child.

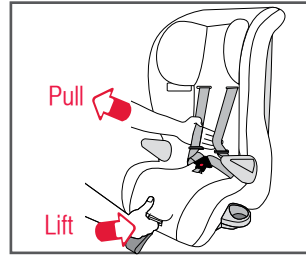

B. Place the child in the restraint and feed each arm through shoulder straps. Pull the harness buckle up between child's legs.

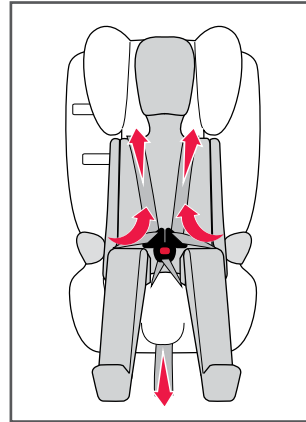

C. Fit either harness tongue into the buckle followed by the other tongue. A click is heard when the second tongue is fully engaged.



Should the second tongue not insert - press the red button and reinsert the tongues. Check for secure engagement by pulling harness straps. (If the harness buckle does not engage correctly, it may require cleaning or seek replacement - refer to page 32).

D. Ensure slack is removed from harness lap strap by pulling shoulder straps then pull harness adjustment strap to adjust harness to a comfortable but firm fit. Ensure that all slack in harness straps is removed. Shoulder harness straps must fit firmly to the child. Do not over tighten. A loose harness could result in serious injury in an accident.

Do not use restraint if straps do not tighten. Contact your local authorised service agent for repair.

! WARNING :
DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.

HOW TO USE

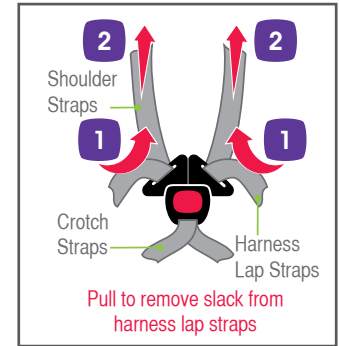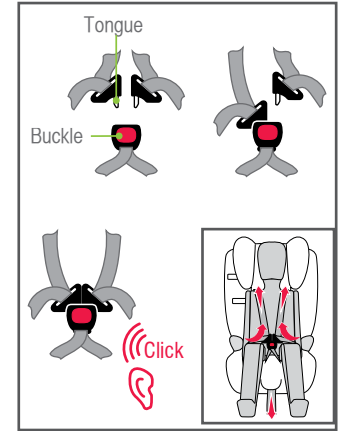

HOW TO REMOVE



TO REMOVE CHILD FROM RESTRAINT

Press the red harness buckle button, both harness tongues will be released. You may lengthen the harness by pressing the adjuster button or lifting the adjuster lever and pulling the shoulder straps. Move each shoulder strap to the child's side, remove the child.

If buckle tongue holders are provided, store the tongues in these.

TO REMOVE RESTRAINT FROM VEHICLE

- Disengage seatbelt tongue from buckle and remove from restraint.
- Fully press top tether strap adjuster button (A) while pulling top tether strap (B) to slacken as shown right. In some vehicles loosening of the top tether strap may be difficult. If so, try pushing the restraint against the vehicle seat back or slightly lifting the restraint to release the tension.
- Disengage the attachment clip from the car's upper anchorage point. Fold up strap and store in pocket provided. The child restraint is now disconnected and can be removed from the car.

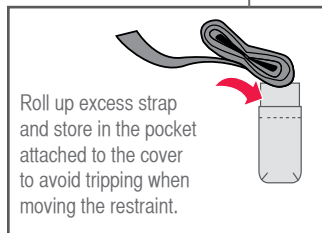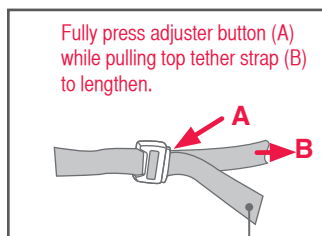

CARE & MAINTENANCE

REGULAR CARE OF THIS RESTRAINT:

Please check the following items regularly to ensure the safety of your child:

- Check the webbing of the straps for fraying.
- Check there are no cracks in moulding.
- Check the harness adjuster is operating and is clamping the webbing.
- Ensure the buckle is free of fluff, liquid or other matter that may enter the buckle slots. Clean the buckle if it is sluggish to engage. See next page.
- If any part of the restraint is cracked or broken, seek repair immediately - contact Customer Service 1300 303 330

CLEANING CAR SEAT

Use only mild soap and water to clean all metal and plastic parts of the restraint. Do not use chemicals or cleaning agents.

HARDWARE: Use only mild soap and water to clean all webbing, metal and plastic parts of your child's restraint, using a damp cloth.

Do not use chemicals or cleaning agents. Do not try and place any hardware into a washing machine.

STRAPS/HARNESS: We would only recommend that you spot clean the straps/harness with a damp sponge. The harness straps can be soaked, however they must be thoroughly dried without excessive heat (never tumble dry). The harness straps should not be placed in a washing machine as this may cause damage to the stitching or even damage your washing machine.

CAR SEAT COVER: The restraint has a flame retardant cover which is removable for cleaning, please clip the hook and loop together on the cover and seat pad (if supplied) to prevent any damage to the cover when washing. Cleaning instructions are on the care label attached to the cover. All car seat covers are machine washable (gentle cycle), cold water only, rinse well and dry on a flat surface. Do not tumble dry, bleach or dry-clean.

CARE & MAINTENANCE

BUCKLE OPERATION




To ensure the buckle remains operational the inside of the buckle must be kept free of liquids, sand, dirt, fluff, food or similar substances. If the buckle is not operating or you do not hear a strong audible click when second tongue is inserted then the buckle needs to be washed or replaced. Contact Customer Service for assistance.

TO CLEAN HARNESS BUCKLE:

If sticky liquids such as baby formula, fruit juice, etc. get inside your harness buckle, it may become sluggish. An indication of a sluggish harness buckle is that you cannot hear a click when engaging the harness tongues. To restore the harness buckle to good working order it needs to be cleaned as follows:

- Remove the harness buckle from the restraint: From the underside of the restraint pull each crotch 3-bar slide then turn the 3-bar slide and push through each slot.
- Place the harness buckle under warm (max. 40 degrees Celsius) running water as shown below. Let the water run through the mouth of the buckle for five minutes. Check the harness buckle is clean by engaging the harness tongues and buckle several times until you hear a click.
- If you still cannot hear a strong audible click then repeat the cleaning process several times.
- Refit the harness buckle to the restraint ensuring the red button facing outwards and the 3-bar slide is fed through the same slots.

If the harness buckle cannot be returned to its original working condition then contact Nursery Elegance Pty Ltd Customer Service for assistance.

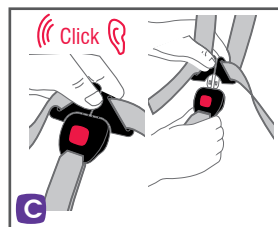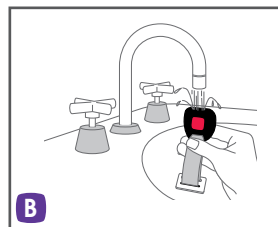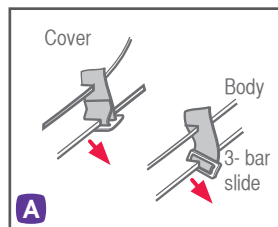

CARE & MAINTENANCE

TO CLEAN THE COVER

The restraint has a flame retardant cover which is removable for cleaning. Cleaning instructions are on the care label attached to the cover. When washing cover engage hook & loop strips together to eliminate other garments being caught. Ensure to keep strips free of lint to work effectively.

The cover has been designed to protect your child when seated in the restraint. Care should be taken if children either eat or drink while in the restraint as some food or drink products may cause damage or marking to the cover. Wash or clean immediately.

Do not pull sticky items from covers as the cover may be damaged - soak in water and gently remove.

To keep your product looking its best, take care when using while wearing jewelry or other items that could snag.



VERY IMPORTANT:

Only replace the cover with Babylove supplied replacement cover with identical shoulder height markers or a replacement cover meeting AS/NZS 8005.

ACCESSORIES & FEATURES

TO REMOVE COVER

Remove any accessories eg: padded insert, shoulder pads before removing cover. Follow the sequence below A to G to remove the cover.


A. Disengage harness tongues from crotch buckle.

C. Peel elastic cover away from headrest.

F. Feed crotch buckle and harness adjustment strap through slot in cover, (If applicable).


E. Unhook Elastic Loops from under the restraint

B. Unhook the strap connector from the back of the restraint and feed the shoulder harness straps through the headrest slots and cover, (If applicable).

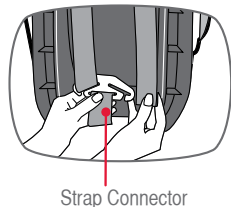

Strap Connector

D. Unhook elastic loops.

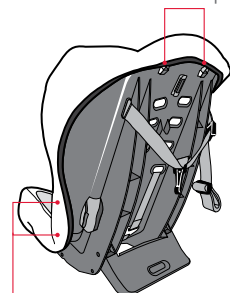

G. Peel cover away from seat.

TO REPLACE COVER

To replace cover refit in reverse sequence G to A.

ACCESSORIES & FEATURES

Use of aftermarket accessories, that is, accessories not provided with this child restraint can reduce the safety of the child restraint and may cause injury or death. Always follow the instructions covering the use of accessories in this section or the instructions provided with accessory. If an aftermarket accessory is used that is not recommended by Nursery Elegance then ensure that the accessory is for this restraint compliant with AS/NZS 8005 and stated as suitable for use with this child restraint. The following instructions apply to accessories that may be supplied with this restraint at point of purchase. If not, a variety of Babylove accessories are available from various retailers of Nursery Elegance products.

CROTCH PAD (IF FITTED)

The Crotch Pad is designed to provide extra comfort for baby or child and is fitted to the restraint as follows: Feed Crotch Buckle through the slot in crotch pad as shown.

PADDED INSERT (IF FITTED)

The Padded Insert is designed to snugly support the baby for extra comfort. Simply place the padded insert on the restraint between Harness straps and the restraint back. Ensure padded insert is lined up with or below the shoulder straps.


Discontinue use if the Insert causes discomfort or when the child's shoulders reach the Middle Shoulder Height Marker. This will allow the child to use the in-built harness longer.

SHOULDER PADS (IF FITTED)

Shoulder Pads are designed to provide extra comfort for baby or child and are easily fitted to the shoulder harness straps by:

A. Pull apart fasteners and remove shoulder pads from harness.

B. Re-fit shoulder pads to harness and attach fasteners for use.

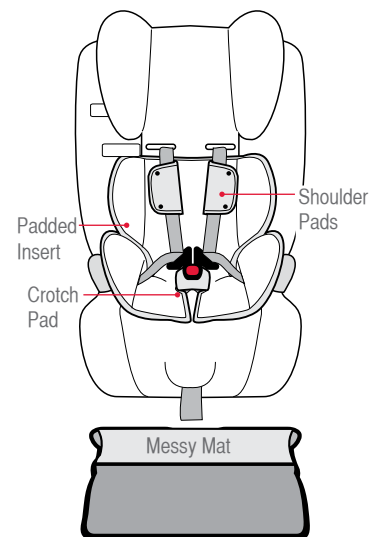


ACCESSORIES & FEATURES

CUP HOLDERS (IF SUPPLIED)

The Child restraint Seat has the facility to fit a cup holder on either side of the seat. Fit the cup holder onto the seat to use. Ensure the cup holder and its contents can not be crushed by the car door. Cup Holder can be removed if not in required.

IMPORTANT:



Only use for holding cups, bottles and drink cartons. Do not use for hot drinks

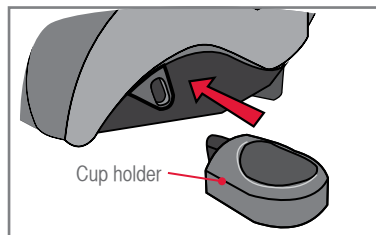

MESSY MAT™ SEAT PROTECTOR (IF SUPPLIED)

Place ribbed or pocket end of the Messy Mat™ seat protector on edge of car seat, smooth back toward seat join ('A') and fit in any excess Messy Mat™ into the join of the car seat ('A').

Hook and loop attachment referred in some instruction books, are no longer required to fit this model of Messy Mat™ seat protector.

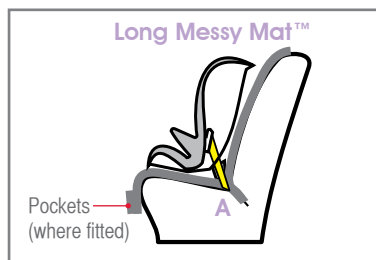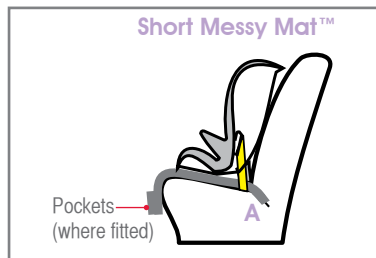

CAUTION:

The pocket is only for small, light items. DO NOT overload the pocket with heavy, bulky items as this may damage the pocket or cause passengers to trip over them.

INSTALLATION OF CAR'S UPPER ANCHOR FITTING

Consult the vehicle owner's handbook for location of anchorage fittings or anchorage points and the possible use of spacers. Some vehicles may have an anchor fitting fitted by the vehicle manufacturer. If anchorage points cannot be found refer to car manufacturer or local child restraint fitting station or traffic authority for preferred position of upper anchorage point.

TOP TETHER STRAP


IMPORTANT:

THE ATTACHMENT CLIP COVER MUST ALWAYS BE USED AS IT PREVENTS THE RISK OF INCORRECT FITMENT OF THE ATTACHMENT CLIP TO THE UPPER ANCHORAGE POINT. ALWAYS ENSURE THAT THE ATTACHMENT CLIP IS CORRECTLY ENGAGED TO THE UPPER ANCHORAGE POINT AND NOT HOOKED OR FITTED TO ANY OTHER OBJECT BEFORE EACH USE OF THE RESTRAINT. THIS IS ESPECIALLY IMPORTANT IN VEHICLES SUCH AS STATION WAGONS, VANS, HATCH BACKS OR VEHICLES WITHOUT A FIXED PARCEL SHELF, SINCE THE ANCHOR POINT IS USUALLY NOT VISIBLE.

IMPORTANT INSTALLATION NOTE:

In some vehicles the upper anchorage point in the rear vertical panel can only be installed in one way. Please refer to vehicle owner's handbook or a child restraint fitting station for correct method.

INSTALLATION OF CAR'S UPPER ANCHOR FITTING

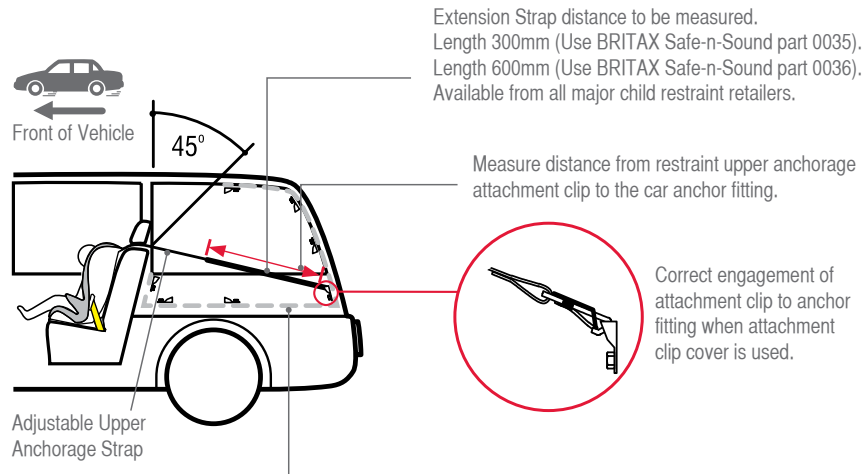

The shaded areas of this diagram illustrate the possible locations of the upper anchorage point (car anchor fitting). Within each shaded area is an upper anchorage point showing the correct way to install the fitting. Ensure the upper anchorage point is aligned as illustrated unless stated otherwise in the vehicle owner's handbook.

INSTALLATION OF CAR'S UPPER ANCHOR FITTING

IF THE CAR IS FITTED WITH CHILD RESTRAINT UPPER ANCHORAGE POINT

Locate the upper anchorage point behind the rear seating position. (Consult the car owners handbook for the location of the upper anchorage point). The upper anchorage point should be directly behind and central to the restraint. Remove thread plug from the parcel shelf/floor/roof, etc. and install attachment bolt and fitting as shown in Fig 1.



CAUTION: DO NOT OVERTIGHTEN ATTACHMENT BOLT. OVERTIGHTENING MAY FRACTURE OR BREAK BOLT. MAXIMUM TORQUE IS 20 Nm(14.75 ft.lb.)

Note: Minimum of five full turns of attachment bolt is required before tightening force is applied.

IF THE CAR IS NOT FITTED WITH CHILD RESTRAINT UPPER ANCHORAGE POINTS

For Sedans only - Drill 9mm diameter hole in the parcel shelf on the centre line of the seating position as shown in Fig 3. Before drilling the hole, check the underside for accessibility. Install the attachment bolt as shown in Fig 2. It is recommended that this installation be carried out by a child restraint fitting station or licenced motor mechanic.

For vehicles other than Sedans - In Australia, consult your nearest child restraint fitting station or traffic authority for vehicle inspection to find the best, correct position for the placement of the upper anchorage point, and for the correct attachment bolt length and use of spacers. In New Zealand, consult the agent for the vehicle. Note to Queensland purchasers: The installation of anchorage points must be approved by authorised officers appointed by Queensland Transport. Authorised officers can be sourced from all Queensland Transport Customer Service and Queensland Ambulance Service Centres.

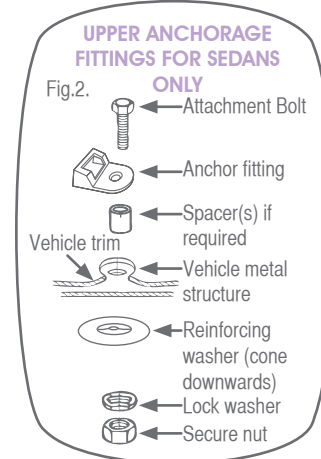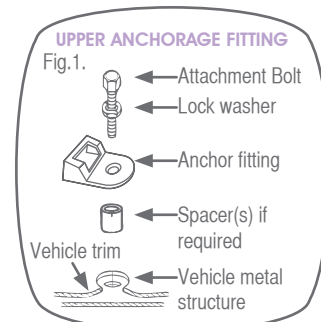

INSTALLATION OF CAR'S UPPER ANCHOR FITTING

ONLY USE A 5/16 UNC GRADE 5 BOLT. IF THE BOLT IS NOT THE CORRECT LENGTH THE CAR MANUFACTURER'S HAND BOOK CAN PROVIDE ADVICE ON THE CORRECT LENGTH BOLT.

WARNING

CHILD RESTRAINTS MUST NOT BE ATTACHED TO UNSOUND METAL OR TO WOOD, OR SYNTHETIC STRUCTURES. WHEN DRILLING 9 MM HOLE DO NOT DRILL THROUGH FUEL LINES, FUEL TANKS, ELECTRICAL WIRING, OR RADIO SPEAKERS. WEBBING STRAPS MUST BE PROTECTED FROM SHARP CORNERS AND EDGES. THE ANCHOR FITTING MUST BE USED ONLY AS DESCRIBED ABOVE. IT MUST NOT BE HOOKED ONTO ANY OTHER OBJECT.

CAR INSTALLATION ACCESSORIES

(From retailers of Britax Safe-n-Sound products)


 
EXTRA ANCHOR KITS: Available for using the restraint in additional cars.

Re-order no: 0038

EXTENSION STRAPS: May be required for cars without a fixed parcel shelf.

Re-order no: 0035 (length 300mm) or

0036 (length 600mm)

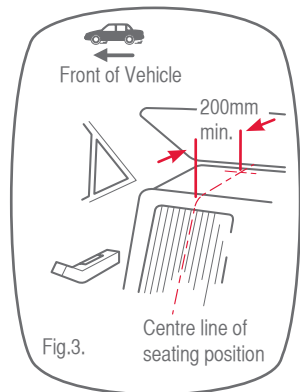

IN CASE OF ACCIDENT

If your restraint has been involved in a severe crash, you should destroy the restraint even if no damage is obvious. Some insurance companies offer vehicle insurance which covers or partially covers the replacement of your child restraint. Contact your insurance company for further details. Your insurance company may require you to keep the child restraint for assessment, **but do not use the child restraint after a severe crash.**

55

AUSTRALIA

Phone number: 1300 131 477

NEW ZEALAND

Phone number: 0508 688 822

www.babylove.com.au

We reserve the right to alter this product without notice in our constant endeavor for improvement.

The Babylove Trademark and model names are the property of Nursery Elegance Pty Ltd.

This product is covered by Australian and Overseas patents and applications.

BRITAX Safe-n-Sound
Patents Pending.

©2007-2016

baby 
love™

P/No. 2202774/A