

○

britax
safe·n·sound
CONVERTIBLE BOOSTER SEAT



Instructions for Installation & Use

Series No. BS0008A-020133



FORWARD FACING









6 months to
8 years (approx)

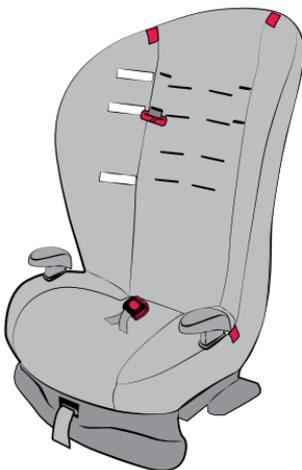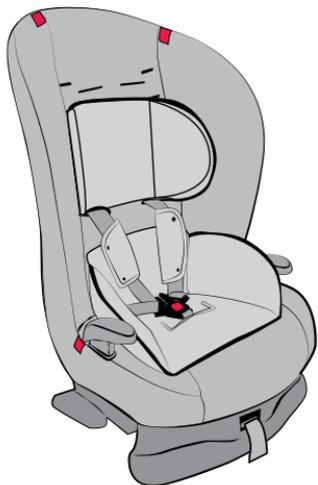









IMPORTANT:

KEEP THIS BOOKLET IN THE PLACE PROVIDED ON THE CHILD RESTRAINT


QUICK SETUP- HARNESSSED CHILD

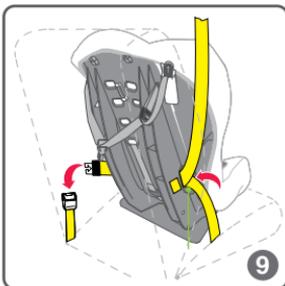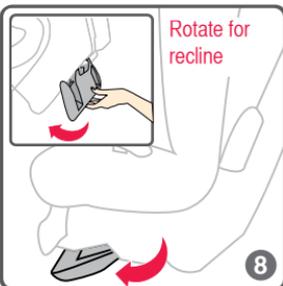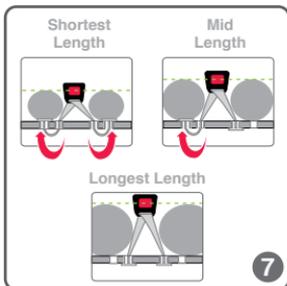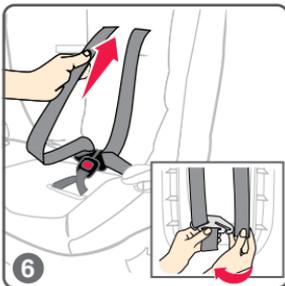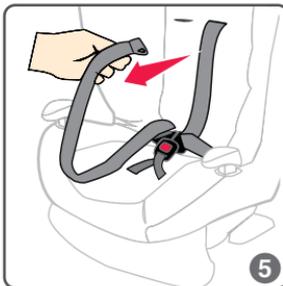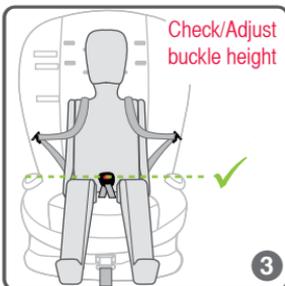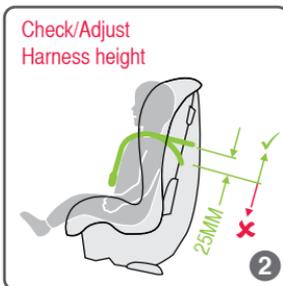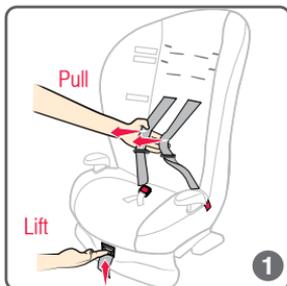










QUICK SETUP- HARNESSSED CHILD

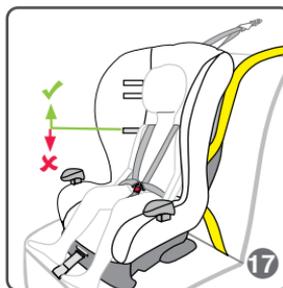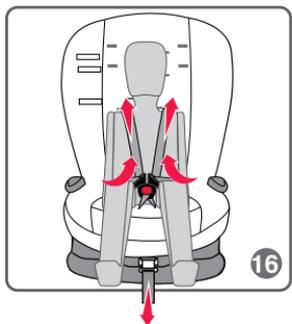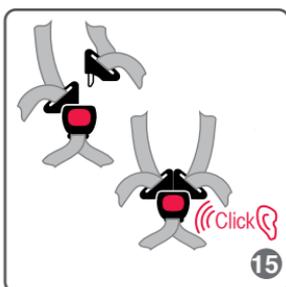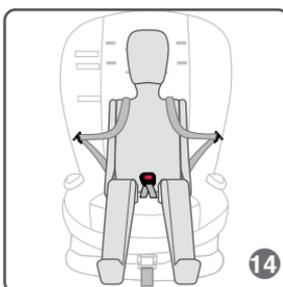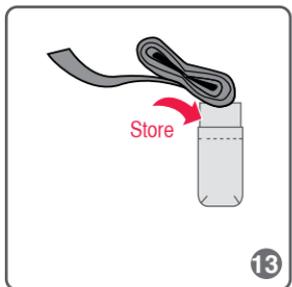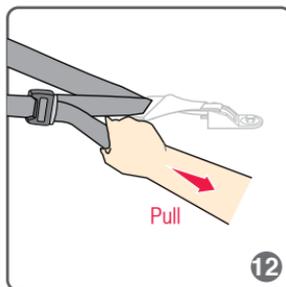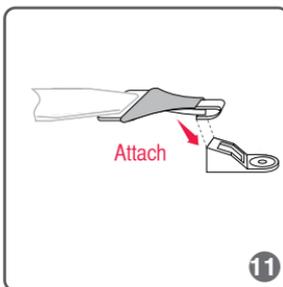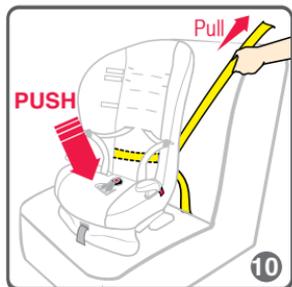

QUICK SETUP - WITH SEATBELT

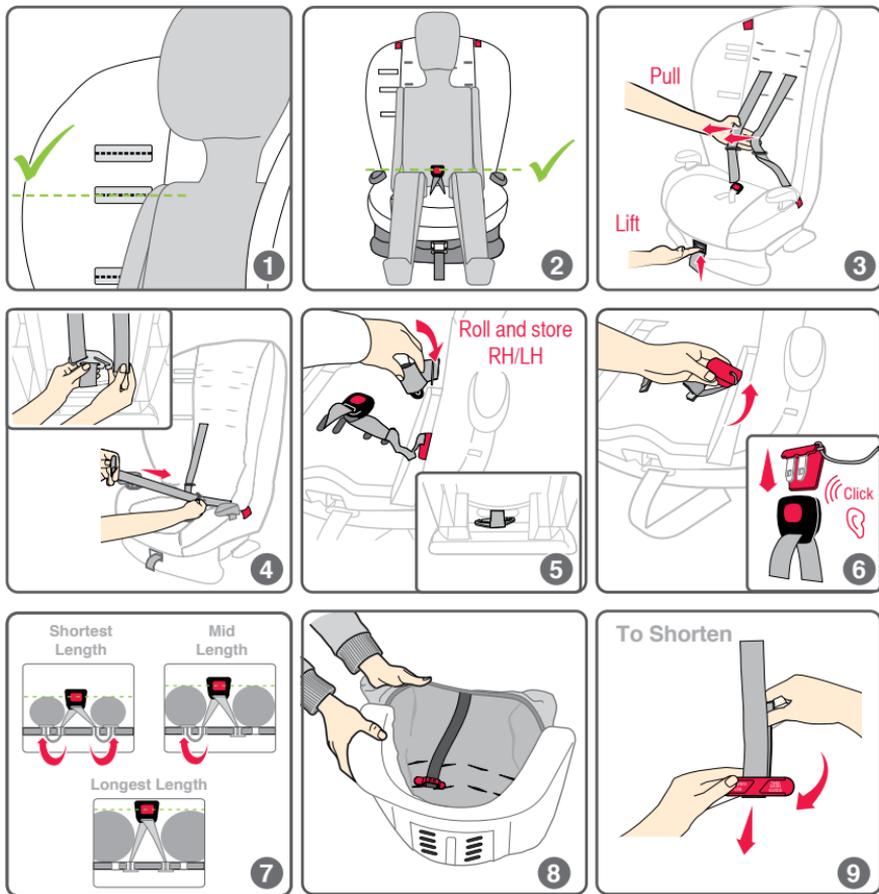

QUICK SETUP - WITH SEATBELT

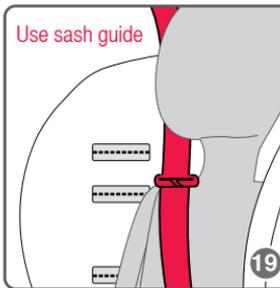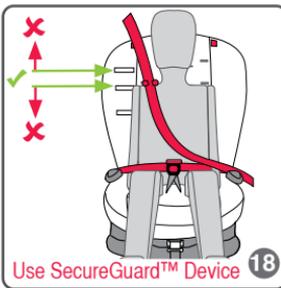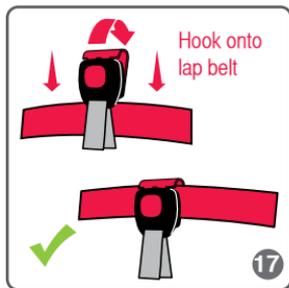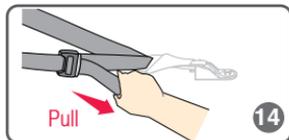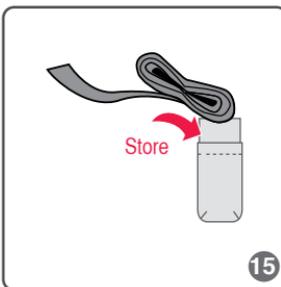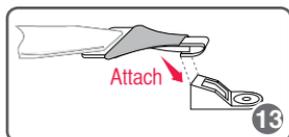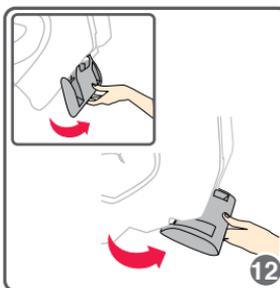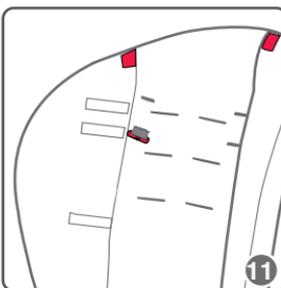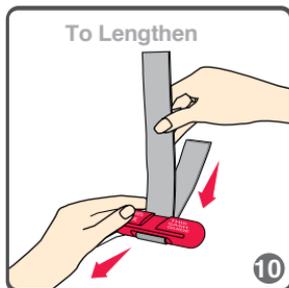

INTRODUCTION

To be used in a forward-facing position with built-in harness by a child whose shoulders are above the lower shoulder height marker (approximately 6 months of age) until their shoulders reach the middle shoulder height marker (approximately 4 years of age).

Then to be used with a lap-sash seatbelt until the child's shoulders reach the upper shoulder height marker (approximately 6 to 8 years of age).

Can also be used with child harness that is approved for use with this child restraint in the booster seat mode.

Continue to use this child restraint until the child reaches this limit. Children are safest in a booster seat until their shoulders reach the upper shoulder height marker of the booster seat.

Do not use this child restraint until child's shoulders are above the lower shoulder height marker.

If the knees do not bend in front of the vehicle seat cushion continue to use a booster seat.

Just using a seatbelt is not recommended for children that have outgrown this seat. Use a larger booster seat.

يتم استخدامه في الوضعية المواجهة إلى الأمام مع أحزمة التثبيت المدمجة للطفل الذي تجاوز كتفیه علامة ارتفاع الأكتاف السفلية (تقريبًا في عمر 6 أشهر) حتى يصل كتفي الطفل إلى علامة ارتفاع الأكتاف الوسطى (تقريبًا في عمر 4 سنوات). ومن ثم يتم استخدامه مع حزام أمان الكتف والخصر حتى يصل كتفي الطفل إلى علامة ارتفاع الأكتاف العلوية (تقريبًا في عمر 6 إلى 8 سنوات). يمكن استخدامه أيضًا مع أحزمة تثبيت الأطفال المستحسنة للاستخدام مع حاجز الأطفال هذا في وضعية مقعد الأمان المرتفع. استمر في استخدام حاجز الأطفال هذا لحين وصول الطفل إلى هذا الحد. يكون الأطفال أكثر أمانًا في مقعد أمان مرتفع حتى تصل أكتافهم إلى علامة ارتفاع الأكتاف العلوية لمقعد الأمان المرتفع.

لا تستخدم حاجز الأطفال هذا إلا عندما يكون كتفي الطفل قد تجاوزا علامة ارتفاع الأكتاف السفلية. إذا كانت الركبتين لا تنتهيان أمام ومساءة كرسي السيارة، استمر في استخدام مقعد مرتفع. لا نوصي بمجرد استخدام حزام الأمان للأطفال الذين كبر حجمهم عن هذا المقعد. استخدم مقعد أمان مرتفع ذو مقاس أكبر.

Được sử dụng ở vị trí hướng mặt về phía trước với dây nịt gắn sẵn cho em nào có vai trên vạch ghi ở dưới cùng (khoảng 6 tháng tuổi) cho đến khi vai của em cao tới vạch ghi độ cao của vai ở giữa (khoảng 4 tuổi).

Sau đó được sử dụng với dây nịt an toàn quàng qua vai cho đến khi vai em cao tới vạch ghi độ cao của vai ở trên cùng (khoảng 6-8 tuổi).

Cũng có thể được sử dụng với đai nịt được chấp thuận cho sử dụng với ghế em bé này trong kiểu ghế trẻ em.

Hãy tiếp tục sử dụng ghế em bé (restraint) này cho đến khi em cao tới giới hạn này. Trẻ em được an toàn nhất trong ghế trẻ em cho đến khi vai của em cao tới vạch ở trên cùng của ghế trẻ em.

Không sử dụng ghế em bé này cho đến khi vai của em ở trên vạch ghi độ cao của vai ở dưới cùng. Nếu đầu gối không co lại đằng trước đệm ghế xe, hãy tiếp tục sử dụng ghế trẻ em (booster).

Chỉ sử dụng dây nịt an toàn không được đề nghị cho trẻ em lớn hơn ghế này. Hãy sử dụng ghế trẻ em (booster) rộng hơn.

INTRODUCTION

Na χρησιμοποείται σε θέση με κατεύθυνση προς τα εμπρός με ενσωματωμένο ιμάντα από ένα παιδί του οποίου οι ώμοι είναι πάνω από τον χαμηλότερο δείκτη ύψους ώμου (περίπου 6 μηνών) μέχρι οι ώμοι να φτάσουν στο μεσαίο δείκτη ύψους ώμου (περίπου 4 ετών).

Στη συνέχεια, πρέπει να χρησιμοποιείται με ζώνη ασφαλείας τριών σημείων μέχρι οι ώμοι του παιδιού να φτάνουν στον ανώτερο δείκτη ύψους ώμου (περίπου 6 έως 8 ετών).

Μπορεί επίσης να χρησιμοποιηθεί με τον παιδικό ιμάντα που έχει εγκριθεί για χρήση με αυτή την παιδική διάταξη συγκράτησης σε λειτουργία βοηθητικού καθίσματος.

Συνεχίστε να χρησιμοποιείτε αυτή την παιδική διάταξη συγκράτησης έως ότου το παιδί φτάσει σε αυτό το όριο. Τα παιδιά είναι ασφαλέστερα σε ένα βοηθητικό κάθισμα μέχρι οι ώμους τους να φθάνουν στον ανώτερο δείκτη ύψους ώμου του βοηθητικού καθίσματος.

Μην χρησιμοποιείτε αυτή την παιδική διάταξη συγκράτησης μέχρι οι ώμοι του παιδιού να είναι πάνω από τον χαμηλότερο δείκτη ύψους ώμων.

Αν τα γόνατα δεν λυγίζουν μπροστά από το μαξιλάρι καθίσματος του οχήματος, συνεχίστε να χρησιμοποιείτε ένα βοηθητικό κάθισμα.

Η χρήση μόνον μίας ζώνης ασφαλείας δεν συνιστάται για παιδιά που έχουν ξεπεράσει αυτό το κάθισμα. Χρησιμοποιήστε ένα μεγαλύτερο συμπληρωματικό κάθισμα.

肩膀超过靠下的肩高标记的儿童（大约6个月的宝宝）采用前向式安装，配备内置安全带使用，直到他们的肩膀超过中间的肩高标记（大约4岁的儿童）。

然后和 safety 腰带一起使用，直到儿童的肩膀达到靠上的肩高标记（大约6-8岁的儿童）。

可以和此垫高椅匹配的儿童安全带一起使用。

在儿童到达该座椅上限之前必须不断使用该安全座椅。儿童肩膀到达垫高椅靠上的肩高标记以前最安全的办法是使用垫高椅。

在儿童肩膀超过靠下的肩高标记前不得使用该儿童安全座椅。

如果儿童在车辆弹性座垫前无法自然屈膝则需要继续使用垫高椅。

不建议个子比该座椅大的儿童仅仅使用安全带。要使用更大尺寸的垫高椅。

केवल उस शिशु द्वारा बलिंट-इन हार्नस के साथ मात्र सामने की दिशा की स्थिति में प्रयोग किया जाना चाहिए जिसके कन्धे कन्धे के नचिले भाग से ऊपर आ गए हों (लगभग 6 महीने की आयु पर) और तब तक जब तक कि शिशु के कन्धे कन्धे के ऊपरी भाग के चिन्ह तक न पहुँच जाएँ (लगभग 4 वर्ष की आयु पर)।

इसके बाद लेप-सेश सीटबेल्ट के साथ तब तक प्रयोग किया जाना चाहिए जब तक कि शिशु के कन्धे कन्धे के ऊपरी भाग के चिन्ह तक न पहुँच जाएँ (लगभग 6 से 8 वर्ष की आयु पर)।

शिशु हार्नस के साथ प्रयोग भी किया जा सकता है जो बूस्टर सीट मोड में शिशु प्रतबिन्ध के साथ प्रयोग के लिए अनुमोदित हों।

शिशु के इस सीमा तक पहुँचने तक इस शिशु प्रतबिन्ध का प्रयोग जारी रखें। शिशु बूस्टर सीट में तब तक सबसे अधिक सुरक्षित होते हैं जब तक कि उनके कन्धे बूस्टर सीट के कन्धों के उपरी चिन्ह तक न पहुँचें।

शिशु प्रतबिन्ध का प्रयोग तब तक न करें जबतक कि शिशु का कन्धा कन्धे के नचिले भाग के चिन्ह को पार न करें।

अगर घुटने गाड़ी के सीट के गद्दे पर आगे न मुड़ें तो बूस्टर सीट का प्रयोग जारी रखें।

जिन शिशुओं की आयु इस सीट के लिए उचित आयु से अधिक हो गई हो उनके लिए मात्र सीटबेल्ट के प्रयोग का सुझाव नहीं दिया जाता है। बड़ी बूस्टर सीट का प्रयोग करें।

INTRODUCTION

Debe utilizarse orientado hacia adelante con un arnés incorporado para un niño cuyos hombros sobrepasen el marcador inferior de la altura de los hombros (aproximadamente a los 6 meses de edad) hasta que sus hombros alcancen el marcador medio de la altura de los hombros (aproximadamente a los 4 años de edad).

Posteriormente debe utilizarse con un cinturón de seguridad de tres puntos hasta que los hombros del niño alcancen el marcador de altura superior (aproximadamente de 6 a 8 años de edad).

También se puede utilizar con el arnés para niños cuyo uso con este sistema de seguridad en el modo de asiento elevador esté aprobado.

Continúe utilizando este sistema de seguridad infantil hasta que el niño alcance dicho límite. El niño estará más seguro en un asiento elevador hasta que sus hombros alcancen el marcador de altura superior del asiento elevador.

No utilice este sistema de seguridad hasta que los hombros del niño no sobrepasen el marcador de altura inferior.

Si las rodillas del niño no se doblan en la parte delantera del cojín del asiento del vehículo siga utilizando un asiento elevador.

No se recomienda utilizar sólo un cinturón de seguridad para el niño que ya no quepa en este asiento. Utilice un asiento elevador más grande.

適用肩膀超過靠下的肩高標記的孩子（大於6個月大），作為前向式安全座椅與內建式安全帶一並使用，直至其肩膀達到中間的肩高標記（大約4歲大）。

然後同安全腰帶一並使用，直至孩子肩膀達到靠上的肩高度標記（大約6至8歲大）。

也可同與此墊高椅匹配的兒童安全背帶一並使用。

請讓您的孩子一直乘坐此安全座椅，直至其達到座椅的上限。孩子肩膀到達靠上的肩高標記之前，使用墊高椅是最安全的做法。

孩子肩膀超過靠下的肩高標記之前，切勿使用此座椅。

若孩子在汽車座椅邊無法自然曲膝，請繼續使用墊高椅。

孩子因長大超出墊高椅的上限時，不推薦僅僅使用安全帶。推薦使用更大尺寸的墊高椅。

INTRODUCTION

Magagamit lamang sa isang nakaharap pasulong na posisyon na may kasamang guwarnisyon ng isang bata na ang mga balikat ay lampas sa ibabang marka ng taas ng balikat (humigit-kumulang 6 na buwang edad) hanggang sa maabot ng kanilang mga balikat ang gitnang marka ng taas sa balikat (humigit-kumulang 4 na taong gulang).

Pagkatapos ay magagamit kasama ang isang lap-sash na seatbelt hanggang sa maabot ng mga balikat ng bata ang itaas na marka ng taas ng balikat (humigit-kumulang 6-8 taong gulang).

Maaari ring gamitin kasama ang guwarnisyon ng bata na naaprubahang gamitin sa pampigil ng bata na ito sa modang upuang booster.

Patuloy na gamitin ang pampigil sa bata na ito hanggang sa maabot ng bata ang limitasyong ito.

Ang mga bata ay pinakaligtas sa isang upuang booster hanggang sa maabot ng kanilang mga balikat ang itaas na marka ng taas ng balikat ng upuang booster.

Huwag gamitin ang pampigil sa bata na ito hanggang sa ang mga balikat ng bata ay lumampas sa ibabang marka ng taas ng balikat.

Kung ang mga tuhod ay hindi makaliko sa harap ng kutson ng upuan ng sasakyan ay patuloy na gamitin ang upuang booster.

Ang paggamit lamang ng seatbelt ay hindi inirerekomenda para sa mga bata na nakalakhan na ang upuang ito. Gumamit ng mas malaking upuang booster.

Da utilizzare nella posizione del senso di marcia con imbracatura interna da un bambino le cui spalle sono al di sopra del marcatore di altezza inferiore (circa 6 mesi di età) fino a quando le spalle raggiungono il marcatore di altezza centrale (circa 4 anni di età).

Dopo di che utilizzare con una cintura di sicurezza fasciante fino a quando le spalle del bambino raggiungono il marcatore di altezza superiore (circa 6 a 8 anni di età).

Può essere utilizzato anche con imbracatura del bambino approvata per l'uso con questo sistema di ritenuta in modalità seggiolino.

Continuare a utilizzare questa ritenuta per bambini fino a quando il bambino raggiunge questo limite. I bambini sono più sicuri in un seggiolino fino a che le loro spalle raggiungono il marcatore di altezza superiore del seggiolino.

Non utilizzare il seggiolino fino a quando le spalle del bambino sono al di sopra del marcatore di altezza inferiore.

Se le ginocchia non si piegano al limite del sedile del veicolo continuare ad utilizzare un seggiolino.

Usare soltanto la cintura di sicurezza non è raccomandato per i bambini che sono troppo grandi per questo sedile. Utilizzare un seggiolino più grande.

INTRODUCTION

Carefully read all the instructions for installation in this book. If in doubt about the method of installation, consult Britax childcare or agent or a child restraint fitting station authorized by a relevant transport authority or, in New Zealand, the agent for the vehicle or authorized child restraint fitter.

THIS RESTRAINT MUST BE ATTACHED TO A CHILD RESTRAINT UPPER ANCHORAGE POINT IN THE CAR. REFER TO CAR OWNER'S HANDBOOK FOR LOCATION OF UPPER ANCHORAGE POINTS. REFER TO A CHILD RESTRAINT FITTING STATION IF NO UPPER ANCHORAGE POINTS ARE IN THE MOTOR CAR. Refer to pages 68 to 71.

WHEN USED WITH IN-BUILT HARNESS:

TO BE USED WITH A LAP-SASH OR LAP ONLY SEATBELT IN THE BACK OF MOST CARS WITH FORWARD FACING SEATS.

WHEN USED AS A BOOSTER SEAT:

THIS RESTRAINT MUST BE USED IN CARS WITH FORWARD FACING SEATS WITH A LAP-SASH SEATBELT OR WITH A SEATBELT AND CHILD HARNESS.

Only the Safe-n-Sound™Protecta PLUS™ Child Harness Series 220/2013 is approved as suitable for use with this product.

When using a child harness with the seat it may be used in seating positions with either a lap or lap-sash seatbelt.

THIS BOOSTER SEAT MAY ONLY BE SUITABLE FOR USE WITH A CHILD HARNESS IN THE UPRIGHT POSITION. IN THE RECLINE POSITION, THE CAR'S SEATBELT MAY NOT BE LONG ENOUGH.

No child restraint can guarantee absolute protection from injury in every crash. However, to ensure that your child gets all the protection designed into the restraint PLEASE READ AND FOLLOW THESE INSTRUCTIONS EXACTLY and use only Safe-n-Sound recommended parts and accessories.

Always store the instruction book in the pocket provided on the side or the back of the cover.

Regional Road Rules may prohibit the use of a restraint in the front seat until the child is 4 years of age. Check your Regional Rules for exemptions.

PAGE

- 10 INTRODUCTION
- 12 WARNINGS
- 14 SHOULDER HEIGHT MARKERS
 - A GROWING CHILD
 - THE NEXT SEAT

TODDLER USE (WITH IN-BUILT HARNESS)

- 18 FEATURES
- 20 SUITABLE FOR USE
- 21 HOW TO SET-UP
- 25 HOW TO INSTALL
- 29 HOW TO USE
- 31 HOW TO REMOVE

CHILD USE (BOOSTER SEAT MODE)

- 32 FEATURES
- 34 SUITABLE FOR USE
- 35 HOW TO SET-UP
- 42 HOW TO INSTALL
- 46 HOW TO USE

CHILD USE (CHILD HARNESS)

- 48 CHILD HARNESS PREPARATION
- 52 HOW TO INSTALL CHILD HARNESS

CARE & MAINTENANCE

- 61 CARE AND MAINTENANCE
- 67 ACCESSORIES & FEATURES
- 69 INSTALLATION OF CAR UPPER ANCHORAGE FITTING
- 73 IN CASE OF ACCIDENT
- 76 WARRANTY



WARNINGS

WHEN USED WITH THE 'BUILT-IN' HARNESS

- Fit the restraint firmly to the car seat.
- Fit the harness firmly to the child.
- A loose restraint or harness is dangerous.
- When used in this mode the restraint must be fitted to the car with a lap or lap-sash seatbelt.

AS A BOOSTER SEAT (with or without a separately supplied Child Harness)

- DO NOT USE WITH JUST A LAP BELT. You must use with a lap-sash seatbelt or with a seatbelt and child harness.
- The lap part of the seatbelt must be firmly across the thighs and the sash belt fitted diagonally across the chest and on the shoulder.
- If used with a child harness, the lap belt must be adjusted firmly first and then the harness, so that the lap belt is not lifted off the child's lap when the harness is adjusted.
- Do not use with the integral harness when in booster mode. This built in harness must be stored.
- Use only with a lap-sash seatbelt or with an add-on accessory Child Harness and either a lap or lap-sash seatbelt.

GENERAL WARNINGS

- Supervision of children is needed because they may be able to undo the buckles and adjusters.
- Use the restraint exactly as shown in the instructions.
- Do not alter or modify this restraint.
- Repairs must only be done by the manufacturer or agent. Use only recommended parts and accessories.
- Do not allow the restraint to come into contact with polishes, oils, bleach and other chemicals.
- Destroy the restraint if it has been in a severe crash, even if no damage is visible.
- DO NOT USE THIS RESTRAINT WITHOUT THE COVER.
- This child restraint is not approved for use with any connectors that connect to the car's ISOFIX low anchorages.
- Always secure the loose end of the top tether strap. Do not use the child restraint where this strap may fall into a split in the seat back or off the side of the seat.
- Versatether top tether attachment clip is ONLY USE FOR ATTACHMENT OF CHILD HARNESS.
- **DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.**



IMPORTANT :


- Regularly check the restraint components, straps and other fitments for correct function and condition. Seek prompt repair.
- IF AN AIRBAG IS FITTED IN THE SEATING POSITION WHERE THE CHILD RESTRAINT IS TO BE FITTED, FOLLOW THE VEHICLE MANUFACTURERS WARNINGS AND INSTRUCTIONS.
- Protect all webbing from abrasion and cutting by sharp corners and edges.
- This restraint must be used in conjunction with a lap-sash seatbelt or lap seatbelt and a Child Harness in booster mode.
- The restraint should not be purchased or sold as a second hand item. It is recommended not to use child restraints older than 10 years as the protection in an accident may be reduced.
- THIS RESTRAINT IS NOT SUITABLE FOR USE WHERE THE TOP TETHER STRAP MAY FALL INTO A SPLIT IN THE SEAT BACK OR OFF THE SIDE OF THE SEAT.
- Seatbelt extenders are not recommended to be used if the seatbelt is not long enough to secure the child restraint. If seatbelts are too short then seek advice from a child restraint fitter and consider their recommendations before using a seatbelt extender. If you use a seatbelt extender then ensure that the seatbelt buckle does not contact the child.
- This restraint is fitted with a harness system that does not need to be removed to adjust the harness or remove the cover. Only disconnect when changing modes from toddler to booster. Follow instructions herein.
- Do not store in areas that may get hot, like in car boots, roof space, beside shed walls which get hot in summer. Do not place heavy items on top of the seat as this may distort the plastic

SHOULDER HEIGHT MARKERS

! IMPORTANT: Follow this advice.


Marker A Smaller Toddler - LOWER SHOULDER HEIGHT MARKER

Using the in-built harness, the child's shoulders must be in-line with this marker or above this marker. If the child's shoulders are below then the child should remain in their previous child restraint. Approx 6 months of age.

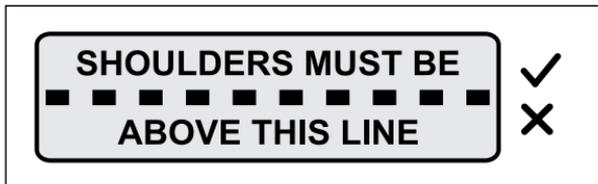


Marker B Larger Toddler - MIDDLE SHOULDER HEIGHT MARKER

When the child's shoulders reach this marker, convert the child restraint to booster seat mode and use either a lap-sash seatbelt or a child harness and lap-sash seatbelt or lap only seatbelt. Approx 4 years old.

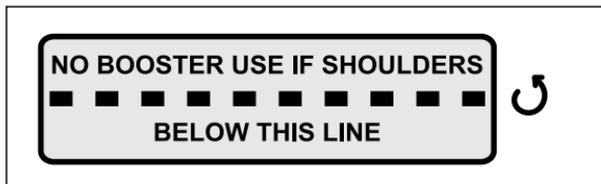


Marker C Larger Child - UPPER SHOULDER HEIGHT MARKER

When the child's shoulders reach this upper marker, or the child no longer fits in the child restraint, approx 6 to 8 years of age, then the child must be moved to the next form of child restraint, see next page.

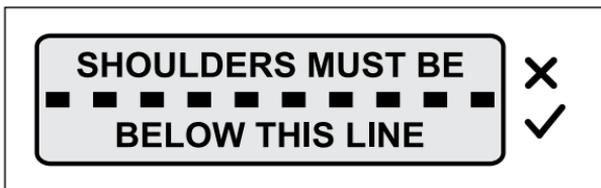

SHOULDER HEIGHT MARKERS AND A GROWING CHILD

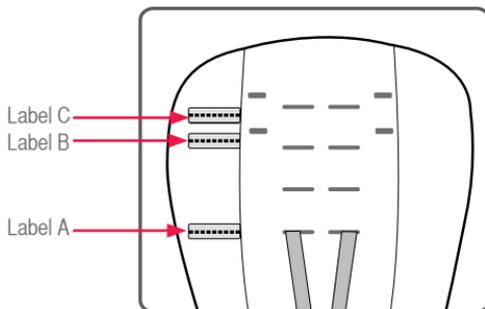

YOUNG TODDLER

Shoulders must not be below the lowest marker.
Use the in-built harness.



From approximately 6 months of age.

However, Britax recommends to keep your child in a rearward facing restraint for as long as possible (up to approx 12 months) until the neck muscles are able to support the head.

OLDER TODDLER

When shoulders are in-line with middle marker,
Change to Booster Seat mode.

From approximately 4 years of age.

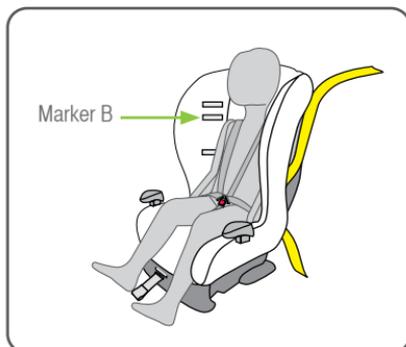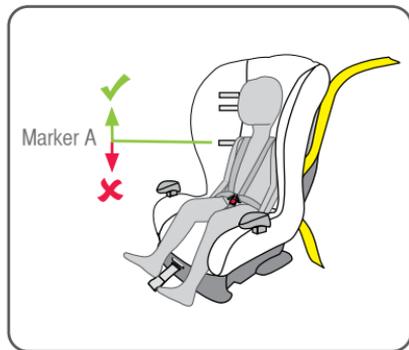


SHOULDER HEIGHT MARKERS AND A GROWING CHILD

OLDER CHILD

**AS A BOOSTER SEAT with
Lap sash seatbelt**


To approximately 6 - 8 years of age.

Shoulders above middle marker but below upper shoulder height marker.

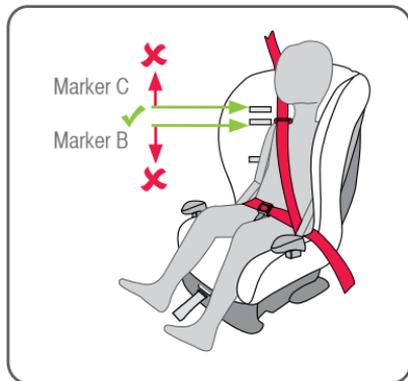

**AS A BOOSTER SEAT with
Child Harness and seatbelt**

To approximately 6 - 8 years of age.

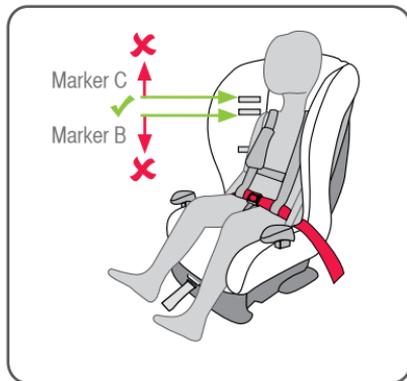

When your child's shoulders reach the upper shoulder height marker, they have outgrown this child restraint.

Change to the next type of booster seat or child restraint.

A child harness must be used if the car's seating position is fitted with a lap only seatbelt.

SHOULDER HEIGHT MARKERS AND THE NEXT SEAT

Next type of restraint that can be used in the car for your child.


When your child has outgrown the seat, you can either:

Use a booster seat suitable for children up to 8-10 years of age and a Child Harness suitable for use with the booster seat.




Or, use a booster seat suitable for children up to 8-10 years of age with the car's seatbelt.

For more information on suitable booster seats visit www.britax.com.au

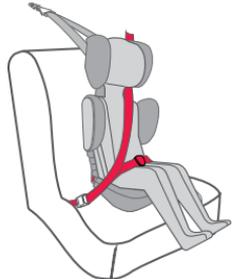


If a child's legs do not hang over the edge of the vehicle seat then they need to use a booster seat so that the seatbelt fits correctly and so the child does not slump. A lap seatbelt on the child's abdomen is dangerous.

NOTE: This child restraint includes a booster seat configuration for children 4 years to approximately 6 to 8 years.

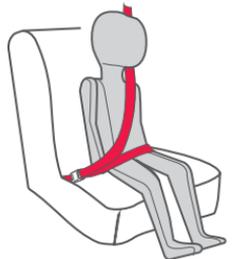


FEATURES

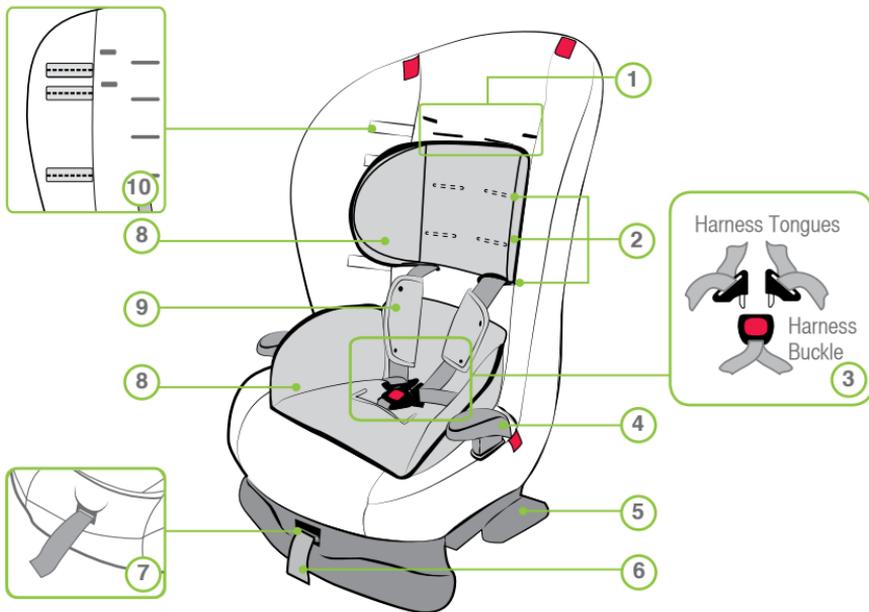

- | | |
|--|---------------------------------------|
| 1. Child Harness and Sash Guide Slots (Booster Mode) | 6. Harness Adjustment Strap |
| 2. Harness Slots (Toddler Mode) | 7. Harness Adjustment Lever |
| 3. Quick release Harness Buckle (Red Button) | 8. Head pillow and Insert (if fitted) |
| 4. Armrests | 9. Shoulder pads (if fitted) |
| 5. Recline Foot | 10. Shoulder Height Markers |

FEATURES

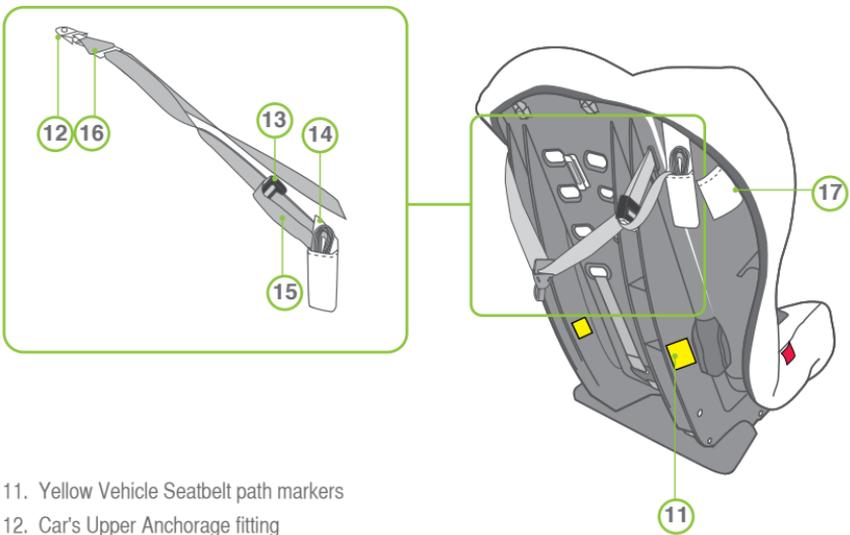

- 11. Yellow Vehicle Seatbelt path markers
- 12. Car's Upper Anchorage fitting
- 13. Top Tether Strap Adjuster
- 14. Top Tether Storage Pocket (attached to cover)
- 15. Adjustable Top Tether Strap
- 16. Attachment Clip
- 17. Instruction Book Storage Pocket (either side)

Features and style may change without notice.

NOTE: Not all features are supplied on some models. "If fitted" is used to indicate some of the features that may not be on the seat supplied.

SUITABLE FOR USE

For a toddler whose shoulders are above the lower shoulder height marker, use with the integrated harness (from approx 6 months of age).

Continue to use this child restraint with harness until the shoulders reach the middle shoulder height marker.

Children are at risk of serious injury if they move to booster seats too early.

The child should not sit in this forward facing child restraint until their neck muscles are able to support their head. Britax recommends that you keep your child in a rearward facing restraint for as long as possible (up to approx 12 months).

This child restraint uses a top tether strap in a vehicle seating position with a child restraint upper anchor fitting or anchorage point. If there is no anchor fitting see pages 69 to 72.


TO BE USED WITH A LAP SASH OR LAP ONLY SEATBELT IN THE BACK OF MOST CARS WITH FORWARD-FACING SEATS.

HOW TO SETUP

ADJUSTING SHOULDER HARNESS STRAPS HEIGHT

Correct fitment of the harness is very important as it restrains the child in the restraint. The harness must fit firmly around the upper torso of the child and be positioned so as to leave the child's arms and legs free. Adjust the shoulder straps so that they are just above the shoulders. See the next page.

1. Upper shoulder strap slots
2. Middle shoulder strap slots
3. Lower shoulder strap slots
4. Shoulder harness straps
5. Lap straps
6. Harness tongues and buckle
7. Crotch Straps
8. Harness adjustment strap
9. Shoulder Height Markers

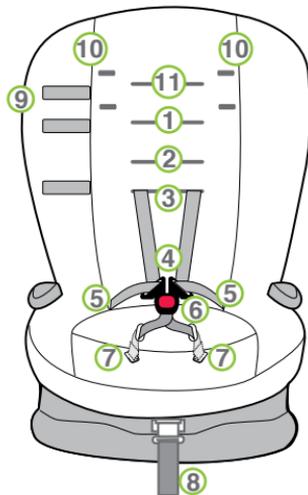


BOOSTER MODE ONLY

10. Sash Guide Slots
11. Child Harness slots

The shoulder straps must be in the slots which are nearest to the child's shoulders, but not more than 25mm below the child's shoulders.

NOTE: If child's shoulders touch the head pillow (if fitted), adjust the head pillow up to the next position.

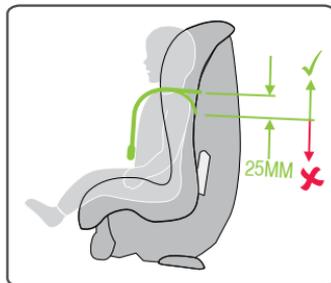

HOW TO SETUP


SETTING UP THE HARNESS

- Position the restraint on flat ground, supported from behind so that it will not tip over.
- Sit the child comfortably in position.
- Determine the desired shoulder strap position.
- Remove the child and adjust the shoulder straps using the following methods.

ADJUSTING THE BUCKLE POSITION

The Child restraint is supplied with the crotch straps set at the correct position for use with the built-in harness.

The buckle needs to be positioned as shown. If the buckle is too low it will be uncomfortable and should be lengthened. See page 24.

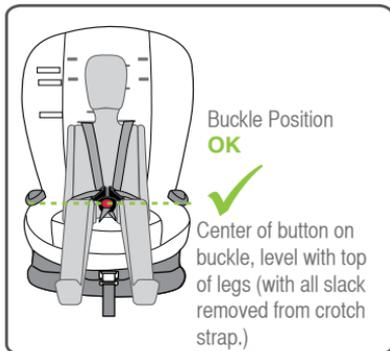

IMPORTANT :

You must adjust the crotch strap to the correct length for your child before installing the restraint as it cannot be adjusted in the car. The crotch strap should only be extended if the harness tongues are located low against your child's legs, thus creating discomfort.

Always return the crotch strap to its shorter length when using the seat with a smaller child.




The buckle should always be positioned low, near to the hips.

DO NOT attempt to remove the crotch strap from the adjuster. Adjustment is made by feeding the crotch strap through the adjuster as shown on the next page and does not need to be removed from the seat.

HOW TO SETUP

STEPS IN CHANGING SHOULDER STRAP SLOTS

- A. Disengage harness buckle. Fully lengthen the harness by pressing the Harness Adjustment lever and pulling the harness shoulder straps.
- B. At the rear of the restraint, remove one of the harness shoulder straps from metal strap connector (shown) by slipping strap through open slot.
- C. From the front of the seat remove the shoulder strap through the shoulder slot.
- D. Insert shoulder strap through a restraint slot which will position shoulder strap level with or above the child's shoulder. Ensure that the shoulder strap passes through matching slots in cover and restraint body.
- E. Ensure there are no twists in the harness strap and the buckle tongues face the correct way.
- F. Connect shoulder strap to metal strap connector at rear of restraint.
- G. Repeat for other shoulder strap. It is better to change one strap at a time so that the other strap will be a guide for re-assembly.

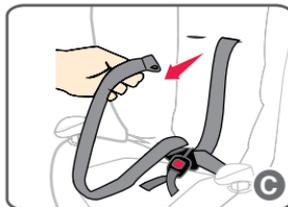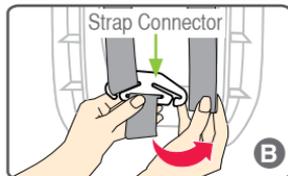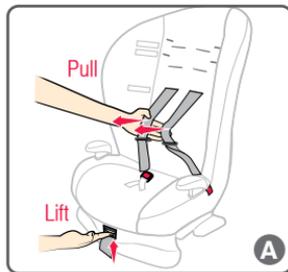**IMPORTANT :**

Do not use the restraint with harness shoulder straps set at different heights or fed through mismatching slots. Ensure harness straps are not twisted and that all straps are secure by pulling each harness strap.

HOW TO SETUP



ADJUSTING THE CROTCH BUCKLE HEIGHT

Buckle height adjustment is changed by threading the anchor plates into the respective slot as shown below. The centre of the buckle should be positioned approximately in line with top of the thighs.


The seat has the crotch straps fitted in the longest position when supplied, these may be adjusted to suit your child if necessary.

Use Position 1 for smaller children and Position 2 and 3 for larger children.


- Lift trim cover to reveal crotch strap slot.
- Turn the anchor plate and push through the slot as shown until the strap assembly is free from the seat.
- Insert anchor plates through restraint slots which will position the buckle at approximately thigh level (as shown). The buckle must not be positioned on the child's abdomen.

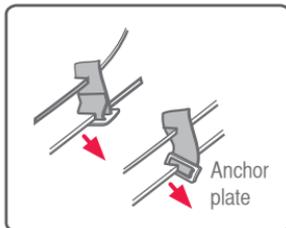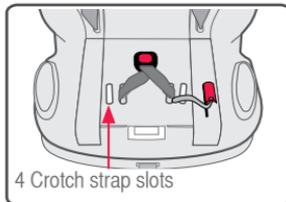


1. Shortest Length
for smaller child

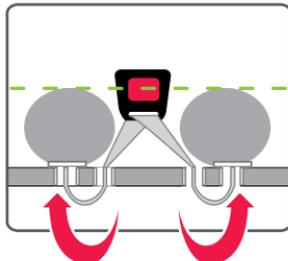

2. Mid Length
for mid size Child

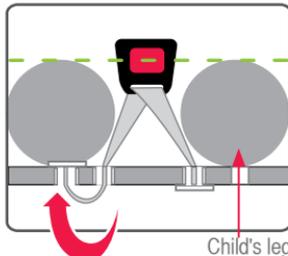

3. Longest Length
for larger child.

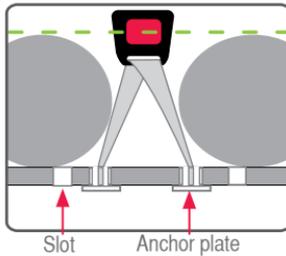

IMPORTANT :

When replacing cover, ensure none of the harness straps are twisted and that all straps are secure by pulling each harness strap.


HOW TO INSTALL

TODDLER USE
(WITH IN-BUILT HARNESS)

INSTALLING INTO VEHICLE (UPRIGHT OR RECLINED)

Determine whether an upright or reclined installation is preferred as shown below.

- A. For upright mode, rotate the foot backwards until it clicks into position.
- B. For reclined mode, rotate the recline foot forwards until it is under the front of the restraint.

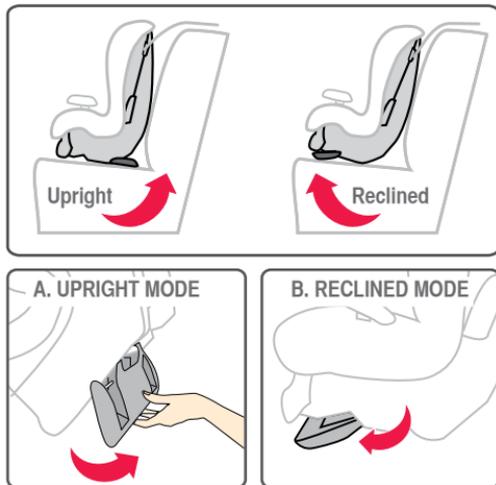


HOW TO INSTALL

- C. Position restraint centrally to the chosen vehicle seat position and forward facing.

Some vehicle seat fabrics (particularly velours) may be damaged by a child restraint used continuously. We recommend the use of the Britax Safe-n-Sound™ Messy Mat or other protection under and behind the seat to keep the vehicle seat in good condition.



Fully lengthen seatbelt and feed the seatbelt through the closest seatbelt path slot and pass across the seating surface through the opposite slot. Follow the yellow belt path label - **FORWARD-FACING BELT PATH** and engage the seatbelt tongue into the buckle and remove all slack.

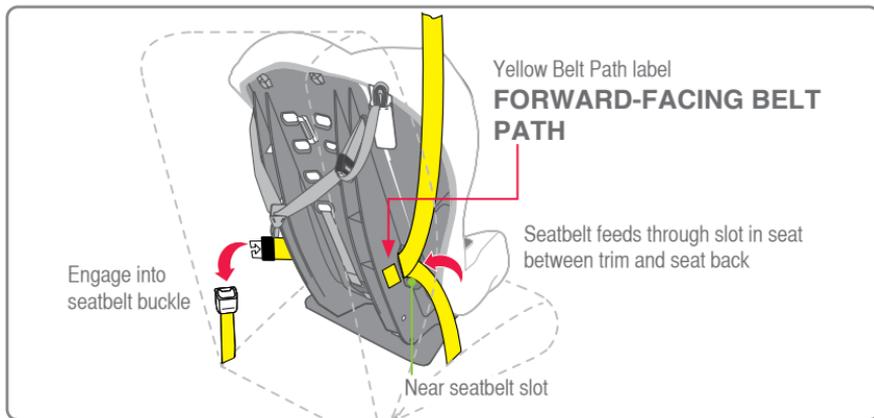

HOW TO INSTALL

TODDLER USE
(WITH IN-BUILT HARNESS)

- D. Push down on the restraint to compress it into the vehicle seat. Whilst compressed in the seat, pull on the lap portion to remove all slack from the belt. Pull the sash belt and allow excess belt to feed back into the retractor. Ensure all slack is removed from the lap and sash belt.
- E. The restraint should be held firmly against the vehicle seatback.
- F. Lengthen the top tether strap and fit the attachment clip on the upper anchorage strap to the anchor fitting as shown. Make sure to remove as many twists as possible from the upper anchorage strap.

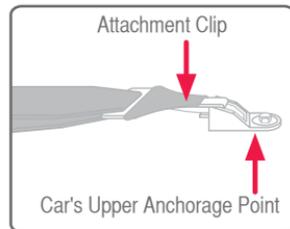
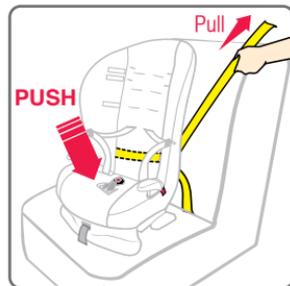


WARNING

Always attach the hook and remove slack

HOW TO INSTALL

- G. Tighten adjustable top tether strap by pulling adjustment strap to remove slack as shown below, but do not over-tighten causing the restraint base to lift off the vehicle seat.
- H. Fold up excess strap and use the top tether pocket to store excess strap behind seat in the pocket provided.

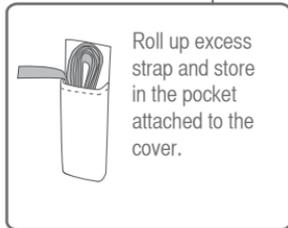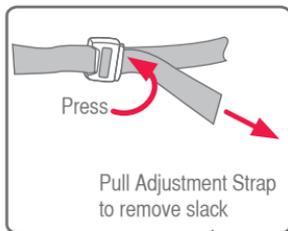

IMPORTANT :

Always ensure that the car seatbelt is firmly restraining the child restraint on the vehicle seat and ensure the slack is removed from the tether strap.

Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible by the child. Do not use the child restraint where this strap may fall into a split in the seatback or off the side of the seat.

Make sure cup holders (if fitted) do not interfere with closure of the car door.

ALWAYS ATTACH TOP TETHER HOOK AND REMOVE SLACK.





CAUTION:

CHILDREN CAN BE INJURED OR RESTRAINTS AND TOP TETHER STRAP DAMAGED BY UNSECURED CARGO IN A COLLISION. SECURE OR REMOVE HAZARDOUS CARGO BEFORE USING THIS CHILD RESTRAINT.

PLACING TODDLER IN THE RESTRAINT

- A. Ensure the shoulder straps are adjusted to the correct height for your child (see page 21). Loosen shoulder straps by lifting the harness adjuster and pull both shoulder straps evenly. Pull out the desired amount of slack. Place the two harness tongues into the Buckle Tongue Holder (if fitted). Move the harness buckle towards the harness adjuster for easier fitment next time you put the infant in the carrier.
- B. Place toddler in the restraint and feed each arm through the shoulder straps. Pull harness buckle up between child's legs.


! **IMPORTANT :**
Always adjust the height of the shoulder straps as the child grows.

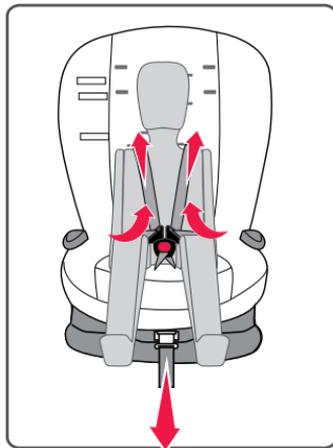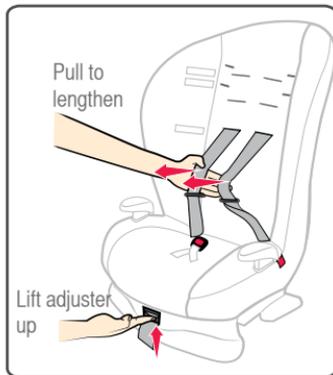

HOW TO USE

- C. Fit either harness tongue into the harness buckle followed by the other tongue. A click is heard when the last tongue is fully engaged.


Should the second tongue not engage - press the red button and reinsert the tongues. Ensure secure engagement by pulling harness straps. If the harness buckle does not engage correctly then it may require cleaning or seek replacement - refer to page 62. **The buckle tongues are fully engaged when both tongues are inserted and 'click' is heard.**

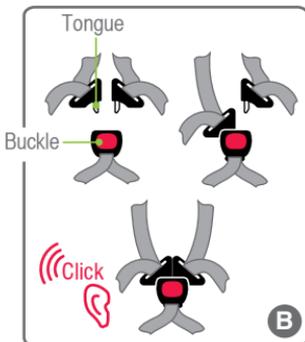

- D. Ensure slack is removed from harness lap strap by pulling shoulder straps then pull harness adjustment strap to adjust harness to a comfortable but firm fit. Ensure that any slack in harness straps is removed. Shoulder harness straps must fit firmly to the child. A loose harness could result in serious injury in an accident.

Do not use the restraint if straps do not tighten. Contact your local authorised service agent for repair.

Store instruction manual in pocket provided and tuck pocket under trim cover.

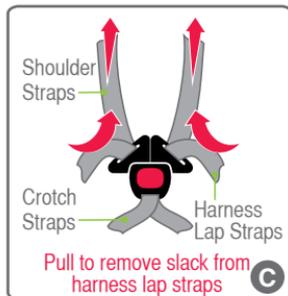

WARNING: DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.



CAUTION: A LOOSE HARNESS IS DANGEROUS.

Make sure that nothing is obstructing harness straps and that child's arms and legs are free with the straps in the correct location - see previous page.

Do not use the restraint if straps do not tighten and contact BRITAX Childcare Customer Service. Refer to back cover for contact details.

HOW TO REMOVE



TO REMOVE CHILD FROM RESTRAINT

Press the red harness buckle button, both harness tongues will be released. You may lengthen the harness by pressing the adjuster button or lifting the adjuster lever and pulling the shoulder straps. Move each shoulder strap to the child's side, remove the child.

If buckle tongue holders are provided, store the tongues in these.


TO REMOVE RESTRAINT FROM VEHICLE

- A. Disengage seatbelt tongue from buckle and remove from restraint.
- B. Fully press top tether strap adjuster button (A) while pulling top tether strap (B) to slacken as shown right. In some vehicles loosening of the top tether strap may be difficult. If so, try pushing the restraint against the vehicle seat back or slightly lifting the restraint to release the tension.
- C. Disengage the attachment clip from the car's upper anchorage point. The child restraint is now disconnected and can be removed from the car.

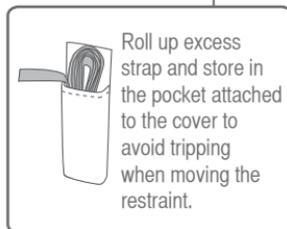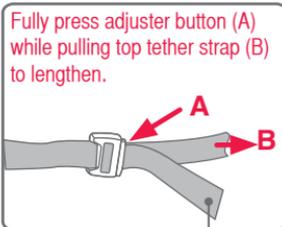


FEATURES

CHILD USE (BOOSTER SEAT MODE)

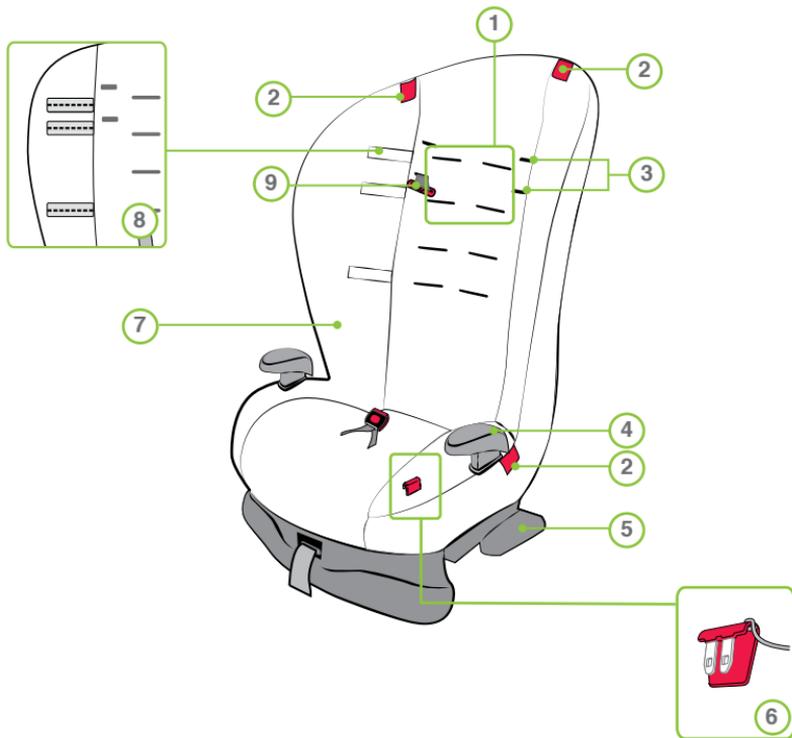

1. Child Harness Slots (Booster Mode)
2. Red Booster Seatbelt path labels
3. Sash Guide Slots (seatbelt)
4. Armrests
5. Recline Foot in upright position
6. SecureGuard™ Anti Submerging Device (with the harness buckle) Storage location is under the cover
7. Padded cover
8. Shoulder Height Markers
9. Sash Guide (in lower position)

FEATURES

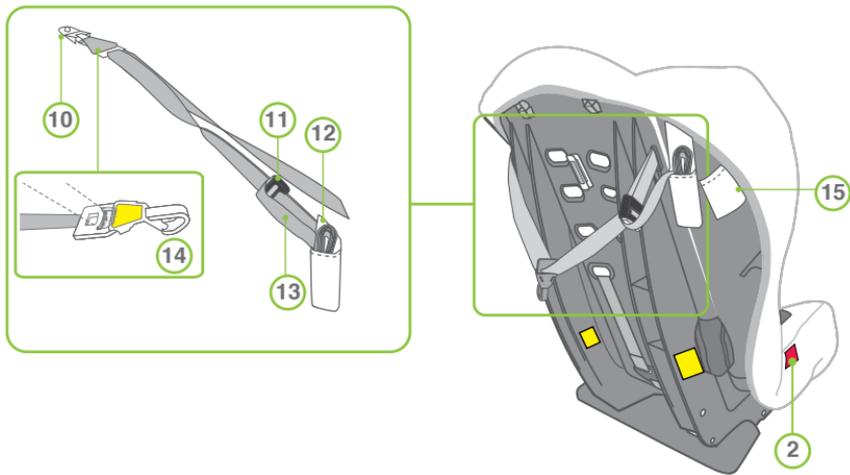

CHILD USE
(BOOSTER SEAT MODE)

- 10. Car's Upper Anchorage fitting
- 11. Top Tether Strap Adjuster
- 12. Top Tether Storage Pocket (attached to cover)
- 13. Adjustable Top Tether Strap
- 14. Top Tether attachment clip and VERSATETHER™ Catch
- 15. Instruction Book Storage Pocket

NOTE: Not all features are supplied on some models. Subject to change without notice. ("If fitted" is used to indicate additional features that may not be on all seats).

SUITABLE FOR USE

For a child whose shoulders have reached the middle shoulder height marker (approx 4 yrs old), convert the seat to booster mode. Use as a booster seat with the vehicle seatbelt or a child harness approved for use with this child restraint until your child's shoulders reach the upper shoulder height marker.

This child restraint uses a top tether strap in a vehicle seating position with a child restraint upper anchor fitting or anchorage point. If there is no anchor fitting see pages 69 to 72.

Children are safest travelling in a Booster Seat until their shoulders have reached the upper shoulder height marker of the Booster Seat.

THIS RESTRAINT MUST BE USED IN CARS WITH FORWARD-FACING SEATS WITH A LAP-SASH SEATBELT OR WITH A SEATBELT AND CHILD HARNESS.

Only the Safe-n-Sound™Protecta PLUS™ Child Harness Series 220/2013 is approved as suitable for use with this product. This seat is not suitable for use with any other child safety harness.

CHILD USE
(BOOSTER SEAT MODE)

HOW TO SETUP

CONVERTING THE TODDLER RESTRAINT INTO BOOSTER MODE

To use this child restraint as a booster seat the harness needs to be stored under the cover.

Disengage and remove the seatbelt from the restraint.


You will need to remove the upper anchorage strap from the anchor fitting when converting to a booster seat.

Upper anchorage strap must always be used in the booster position when re-installed.

If fitted, remove all comfort accessories from the restraint.

CHILD USE WITH SECUREGUARD™ DEVICE



The SecureGuard™ Device is found in a storage recess under the cover, as shown and is connected to the buckle to form the SecureGuard™ Device.

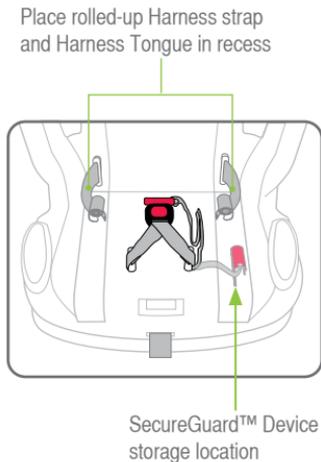

HOW TO SETUP

STORING THE HARNESS


- A. Disengage harness buckle. Fully lengthen the harness by pressing the Harness Adjustment lever and pulling the harness shoulder straps.
- B. At the rear of the restraint, remove both harness shoulder straps from metal strap connector (shown) by slipping strap through open slot.
- C. Pull the shoulder straps through slots in the seat back.
- D. Remove the elastic loops holding the cover in place at the lower front of the seat. Lift the cover to expose the storage inserts in the seat base.
- E. Feed the straps with harness tongues through the bottom rear of the seat cover. Roll up each harness strap with harness tongue and place into the left and right rear recess in the seat base (underneath the cover).

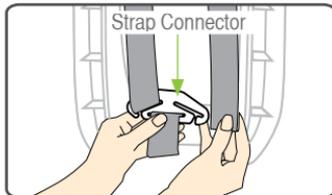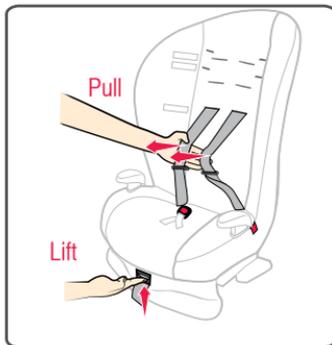


CHILD USE
(BOOSTER SEAT MODE)

HOW TO SETUP

- F. Remove SecureGuard™ Device from storage recess and engage into harness buckle.
- G. Adjust the crotch strap length if necessary. See page 39.
- H. Replace cover and re-attach elastic loops at the front of the cover to the child seat.

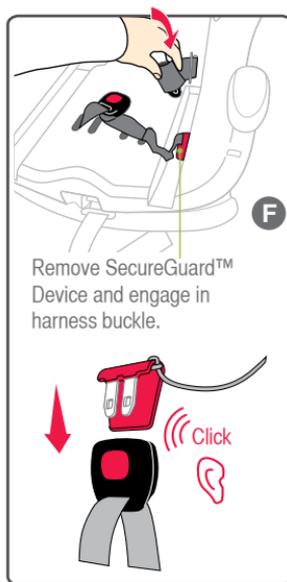

- I. Extend and roll up the harness adjustment strap and metal strap connector, then store inside the recline foot.
- J. Store shoulder pads (if fitted) in a safe place, for future use.

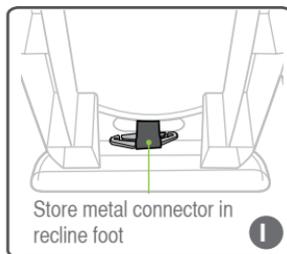

HOW TO SETUP

ADJUSTING THE SECUREGUARD™ DEVICE POSITION



IMPORTANT:


The SecureGuard™ Device ensures that the child does not slump and ensures the lap belt is always positioned on the child's hips and thighs. If the seatbelt rides up onto the stomach then a child can be seriously injured in a crash. To adjust buckle height, see page 39. You must adjust the crotch strap to the correct length for your child before installing the restraint as it cannot be adjusted with the child seated.

The crotch strap should only be extended if the buckle and SecureGuard™ Device are located too low against your child's legs, causing discomfort.


Always return the crotch strap to its original shorter length when using the seat with a smaller child.

The buckle and SecureGuard™ Device should always be positioned low down on your child's body.

- Sit the restraint against a wall for stability and get the child to sit comfortably in position.
- Determine the correct buckle position. The centre of the buckle needs to be level with the top of the legs.

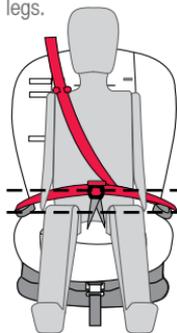

SecureGuard™ Device
Position
TOO HIGH

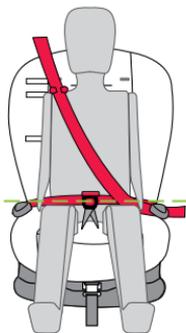

SecureGuard™ Device
Position
OK

Center of buckle button,
level with top of legs,
all slack removed from
crotch strap.

- Remove the child and adjust the buckle strap length as on page 39.



IMPORTANT: ALWAYS USE THE SECUREGUARD™ DEVICE



HOW TO SETUP

ADJUSTING THE SECUREGUARD BUCKLE HEIGHT


Adjust the SecureGuard™ Device height by re threading the anchor plates into other slots in the seat shell. The seat has the crotch straps fitted in the longest position when supplied. Adjust the height to position the lap strap on the hips and thighs.

- Lift trim cover to reveal crotch strap slot (see page 37).
- Turn the anchor plate and push through each slot as shown until the strap assembly is free from the seat.
- Insert anchor plates through restraint slots which will position the lap strap level with the child's thighs. The SecureGuard™ Device must not be positioned on the child's abdomen.


Use Position 1 for smaller children and Position 2 and 3 for larger children.

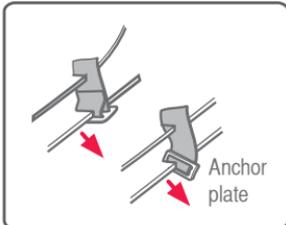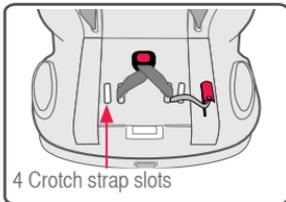


1. Shortest Length
for smaller child

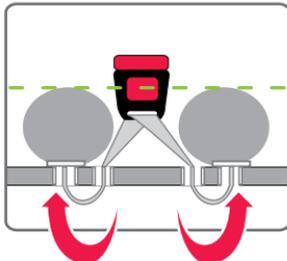

2. Mid Length
for mid size Child

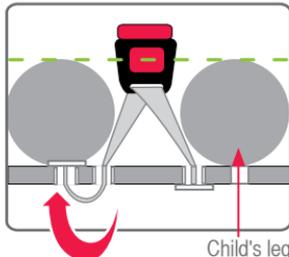

3. Longest Length
for larger child.

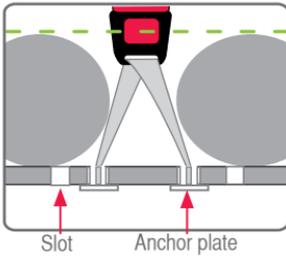

CHILD USE
(BOOSTER SEAT MODE)




IMPORTANT :

When replacing cover, ensure none of the harness straps are twisted and that all straps are secure by pulling each harness strap.

HOW TO SETUP

FOR USE WITH VEHICLE SEATBELT SETTING UP THE SASH GUIDE

- A. Determine the correct height for sash guide.
- B. Unhook the elastic loops at the top rear of the restraint, then pull the cover forward to reveal the sash guide which is attached to a strap at the back of the seat cover.
- C. Fit the sash guide through the sash guide slot of the cover then refit the cover.


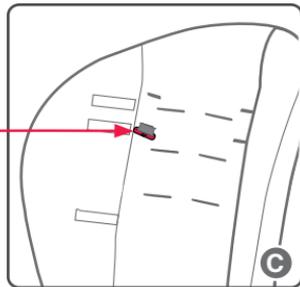


Thread the sash guide
through the chosen slot
in the seat cover

HOW TO SETUP

- D. The sash guide should be located just above the child's shoulders.
The sash guide must be used to position the sash portion of the lap-sash seatbelt across the child's shoulders and chest. Choose the sash guide slot nearest to, but above the shoulder height of the child.

Adjust the sash guide so that it positions the sash belt over the chest and the front of the shoulder. Do not over tighten.

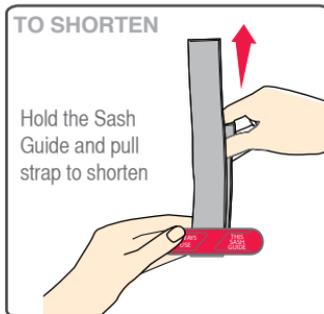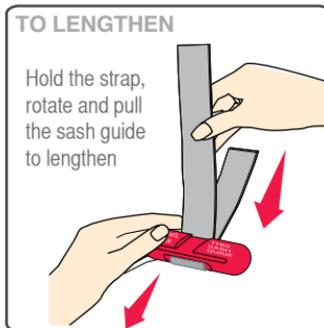

**CHILD USE
(BOOSTER SEAT MODE)**






IMPORTANT : ALWAYS USE THE SASH GUIDE.

HOW TO INSTALL


INSTALLING INTO VEHICLE (UPRIGHT OR RECLINED)

Determine whether an upright or reclined installation is preferred as shown below.

- A. For upright mode, rotate the foot backwards until it clicks into position.
- B. For reclined mode, rotate the recline foot forwards until it is under the front of the restraint.

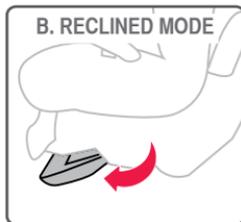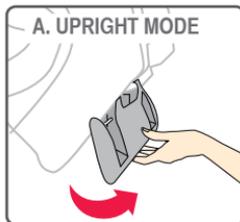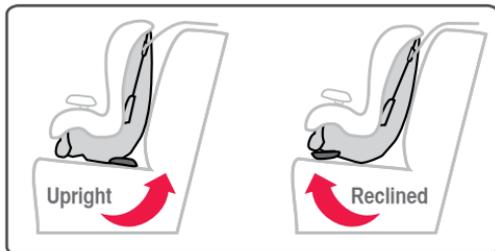

- C. Lengthen the top tether strap and fit the attachment clip on the upper anchorage strap to the anchor fitting as shown. Make sure to remove as many twists as possible from the upper anchorage strap.

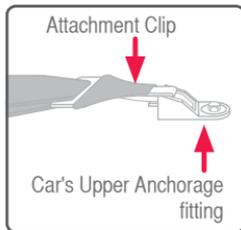



HOW TO INSTALL

- D. Tighten adjustable top tether strap by pulling adjustment strap to remove slack as shown below, but do not over-tighten causing the restraint base to lift off the vehicle seat.
- E. Fold up excess strap and use the top tether pocket to store excess strap behind seat away from child's reach.



WARNING

Always attach the hook and remove slack

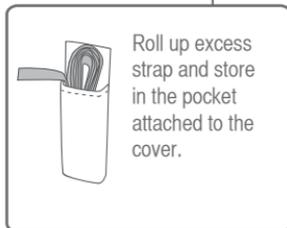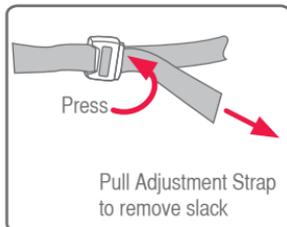

CHILD USE
(BOOSTER SEAT MODE)



IMPORTANT :

Always ensure the slack is removed from the tether strap.

Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible by the child. Do not use the child restraint where this strap may fall into a split in the seatback or off the side of the seat.

Make sure cup holders (if fitted) do not interfere with closure of the car door.



CAUTION:



CHILDREN CAN BE INJURED OR RESTRAINTS AND TOP TETHER STRAP DAMAGED BY UNSECURED CARGO IN A COLLISION. SECURE OR REMOVE HAZARDOUS CARGO BEFORE USING THIS CHILD RESTRAINT.

HOW TO INSTALL

- F. Sit the child on the seat.
- G. If the seatbelt buckle is adjustable, adjust the buckle as low as possible away from the child.
- H. Position the lap-sash belt over the child ensuring the lap portion is positioned on the child's thighs. The seatbelt should follow the red Seatbelt path labels marked **-BOOSTER SEATBELT PATH**. Engage seatbelt buckle and tongue ensuring there are no twists in the belt.

Ensure you have engaged the SecureGuard™ Device into the harness buckle.

If the lap belt is not on the child's thighs, shorten the length of the crotch strap, see page 38. Fit the SecureGuard™ Device over the lap belt as shown. The SecureGuard™ Device must be used at all times in Booster mode.

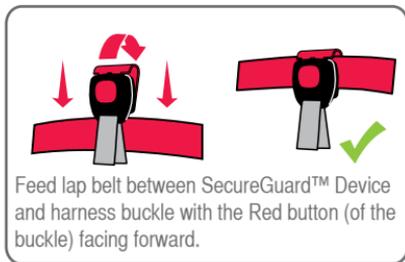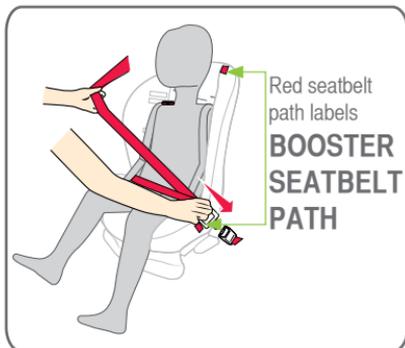

IMPORTANT:



The SecureGuard™ Device must be used when the child is using the Booster Seat.
Always ensure the seatbelt is across the child's thighs and across the chest.

HOW TO INSTALL

- I. Place the sash belt across the child's chest and through the sash guide.

The Sash Guide is used to position the sash portion of the lap-sash seatbelt across the child's shoulders and chest.

- J. Adjust the lap portion of the seatbelt firmly across the child and restraint, feed the slack back into the retractor, ensure the sash belt is positioned on the child's shoulders.

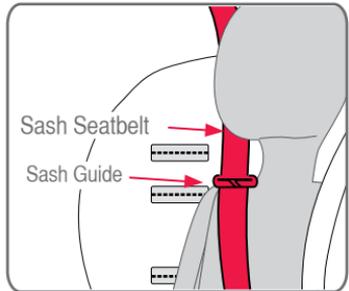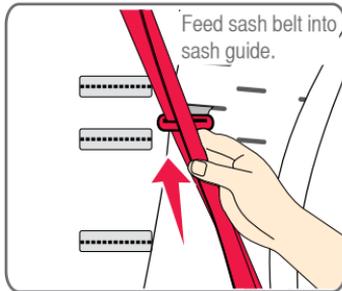

CHILD USE
(BOOSTER SEAT MODE)



**IMPORTANT: A SASH BELT UNDER THE ARM OR BEHIND THE BACK IS DANGEROUS.
ALWAYS USE THE SASH GUIDE.**




WARNING: DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.

HOW TO USE

CHECKLIST - BOOSTER MODE SETUP

- Centre of button on buckle, level with top of thighs.
- Lap belt firmly on hips/thighs.
- SecureGuard™ Device fitted to lap belt.
- All slack removed from crotch strap when buckle is in the correct position.
- Sash belt is fitted through sash guide

CHILD USE
(BOOSTER SEAT MODE)

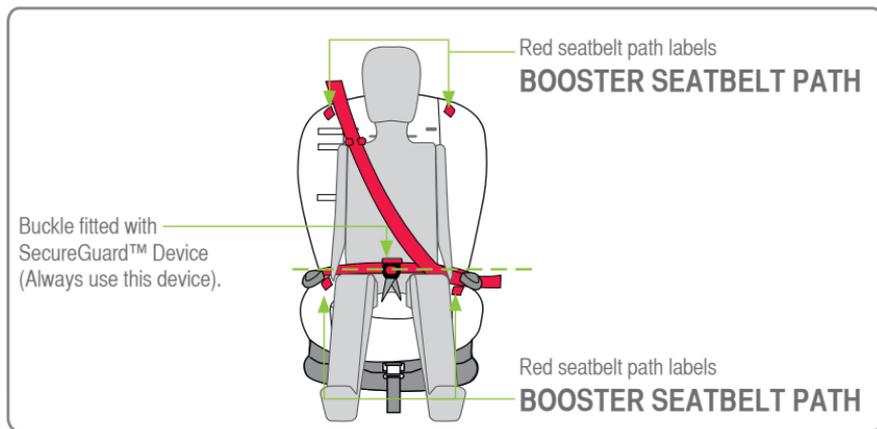

NOTE: Stop using this Booster Seat if the child's shoulders are above the Upper Shoulder Height Marker.





IMPORTANT: ALWAYS USE THE SECUREGUARD™ DEVICE

HOW TO USE

TO STORE SASH GUIDE

When sash guide is not in use, hook the sash guide at the back of the cover to the elastic loop.

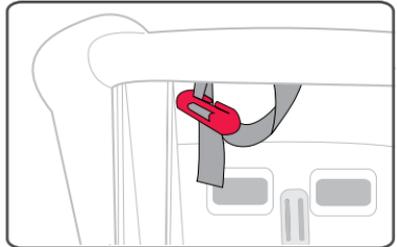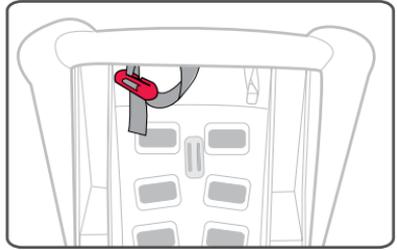

TO REMOVE CHILD

Disengage seatbelt tongue and buckle, remove the lap portion of seatbelt from the SecureGuard™ Device and remove belt from child.

When booster is not being used, secure in position, by engaging seatbelt over the booster seat.


CHILD USE
(BOOSTER SEAT MODE)

CHILD HARNESS PREPARATION

INSTALLING SAFE-N-SOUND PROTECTA PLUS™ CHILD HARNESS WITHOUT EXTENSION STRAP INTO VEHICLE


Hook the Child Harness attachment clip (1) onto booster seat VERSATETHER™ Catch (2A). Then hook booster seat attachment clip (2B) onto vehicle anchor fitting (3). Ensure that none of the straps are twisted or passing over any sharp edges.

CHILD USE
(BOOSTER SEAT MODE WITH CHILD HARNESS)

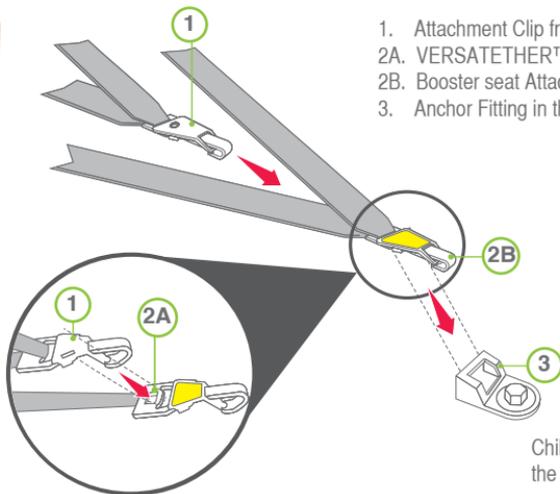

1. Attachment Clip from Child Harness.
- 2A. VERSATETHER™ Catch.
- 2B. Booster seat Attachment Clip.
3. Anchor Fitting in the car.


Child Harness Attachment Clip attaches to the VERSATETHER™

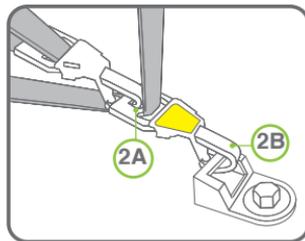

CHILD HARNESS PREPARATION

INSTALLING SAFE-N-SOUND PROTECTA PLUS™ HARNESS WITH EXTENSION STRAP INTO VEHICLE

An adjustable extension strap is supplied with the Child Harness. Hook the Safe-n-Sound Protecta PLUS™ Harness clip first onto the extension strap catch, then hook the extension strap clip onto the VERSATETHER™ Catch on the Booster Seat top tether strap as shown below. Ensure that none of the straps are twisted or catching on sharp edges. Adjust the Booster Seat top tether strap (refer to page 43) first then remove excess slack from the extension strap by pulling the adjuster strap as illustrated below.

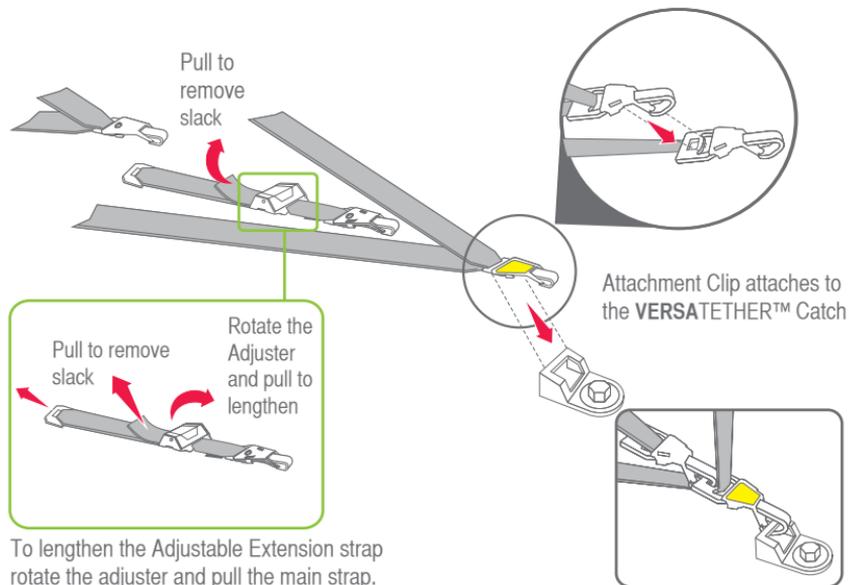

WARNING

Always attach the hook and remove the slack.

VERSATETHER™
COMPATIBLE


CHILD USE
(BOOSTER SEAT MODE WITH CHILD HARNESS)

CHILD HARNESS PREPARATION


INSTALLING CHILD HARNESS INTO SEAT

- A. Lengthen the Child Harness using the adjuster under the cover (see the Child Harness instructions for the adjustment method). Press the Adjuster button (1) and pull the shoulder strap (2).

CHILD USE
(BOOSTER SEAT MODE WITH CHILD HARNESS)

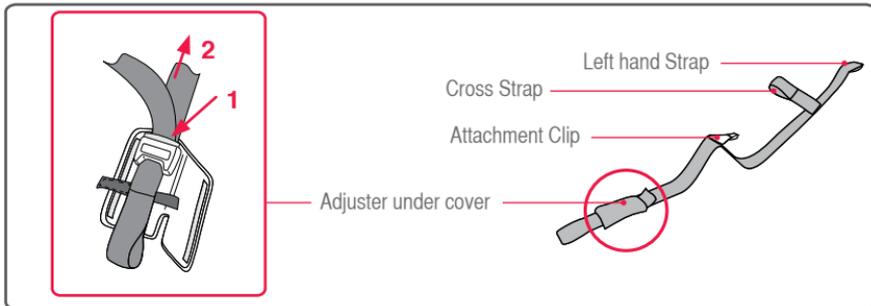

- B. Feed the left hand Harness Strap & Cross Strap through the shoulder slots that are just above the child's shoulders. Make sure that the Attachment Clip also feeds through to the back of the restraint.

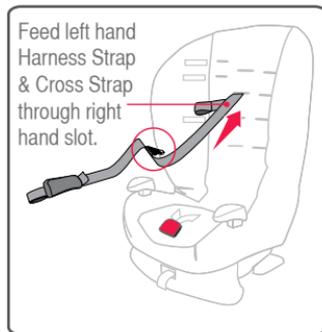

CHILD HARNESS PREPARATION

- C. Pull the left hand Harness Strap & Cross Strap back through the opposite shoulder slot. Hook the Child Harness Attachment Clip onto the VERSATETHER™ Catch and ensure that the straps are equal in length.




IMPORTANT:

Always adjust the height of the shoulder straps as the child grows.

VERSATETHER™ is only intended for use in attaching a child harness.

Hook the Attachment Clip onto VERSATETHER™ Catch.

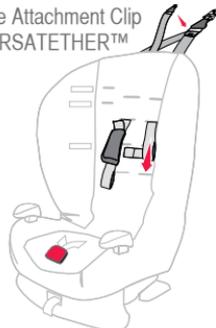

Pull left hand harness strap through the opposite slot until the straps are of equal length.

CHILD USE
(BOOSTER SEAT MODE WITH CHILD HARNESS)

HOW TO INSTALL CHILD HARNESS

INSTALLATION METHOD

If the seating position has a lap-only seatbelt then no other vehicle seatbelt preparation is required.

If the seating position has a lap-sash seatbelt then it **MUST** be converted into a lap belt by fitting a Gated 3 bar slide, see page 53.

The top tether must be correctly fitted for all installations.



CAUTION:

ALWAYS FOLLOW THE CHILD HARNESS INSTRUCTIONS.



IMPORTANT :

The SecureGuard™ Device **MUST ALWAYS** be used when the child is using the booster seat with the child harness as it ensures the lap belt is correctly positioned on the child's hips.

A loose or poorly positioned lap belt can move up into the abdomen and cause serious injuries in a crash.

NOTE: Some vehicle seatbelts are too short and you may experience some difficulty fitting the converted lap-sash around your child. If so, adjust the gated slide nearer to your child, ideally under the armrest and lap belt recess area (ensure the slide does not touch your child). This should provide more belt length to fit your child, but if the belt still will not fit, try another location in the vehicle. If the vehicle belts are still too short, then contact the vehicle manufacturer for advice on longer seatbelts.

HOW TO INSTALL CHILD HARNESS

CONVERTING A LAP-SASH SEATBELT FOR USE WITH THE CHILD HARNESS.

With the booster seat installed in the vehicle, sit the child in the seat. Fit the vehicle lap sash belt into the vehicle buckle and position the lap strap over the child's hips and thighs. Ensure all slack is removed from the lap strap.

Locate the gated slide for the next step.

Take the sash strap away from the child's chest and place together with the lap strap across the hips and thighs. Engage the straps into the gated slide with the hollow side towards the booster seat.



The gated slide should be positioned outside of the seat armrest. Ensure it does not touch the child. It should guide the sash belt back to the retractor away from the child.

Ensure all lap belt slack is removed before fitting gated slide.

For further details on fitting the gated slide, see page 54 to 55.

Check and adjust the crotch buckle height to suit the child. With the SecureGuard™ Device hooked over the lap belt, the lap belt should sit within the red clip and should not be able to lift up into the abdomen region of the child.

Both the converted lap/sash seatbelt and SecureGuard™ Device are now setup. Proceed to page 56 to fit the child harness to the child in readiness of vehicle travel.

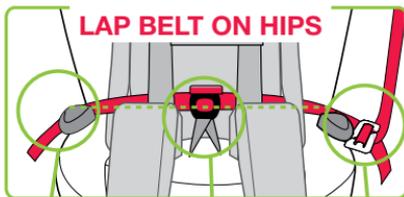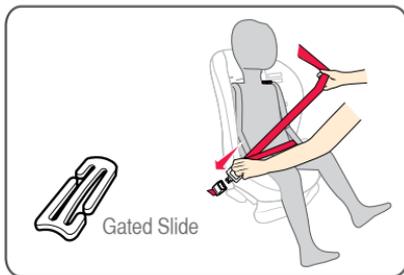

Behind armrest



SecureGuard™ Device fitted



Gated slide away from child

Remove All slack from lap belt and gated slide for a firm, comfortable fit.

CHILD USE
(BOOSTER SEAT MODE WITH CHILD HARNESS)

HOW TO INSTALL CHILD HARNESS

FITTING THE GATED SLIDE TO THE LAP-SASH SEATBELT

NOTE: TO ENSURE CORRECT CONVERSION OF LAP-SASH SEATBELT TO LAP SEATBELT FOLLOW THESE STEPS.

- A. Hold the lap and sash straps together and fold as shown. Slide the inner strap into the Gated Slide followed by the outer strap.





IMPORTANT :

Face the hollow side of the Gated Slide and the inner strap towards the child. Do not use Gated Slide for any other purpose.

- B. The two straps should slide freely in the Gated Slide slot.



- C. Repeat previous step A for the other slot in the Gated Slide.

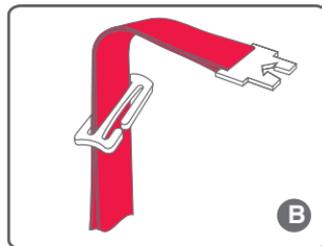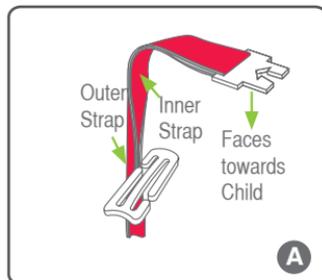

HOW TO INSTALL CHILD HARNESS

D. Feed the straps through the gated slide to remove any slack. This has now converted the lap-sash seatbelt so it will act like a lap only seatbelt.

E. Ensure all slack is removed from the converted lap belt.

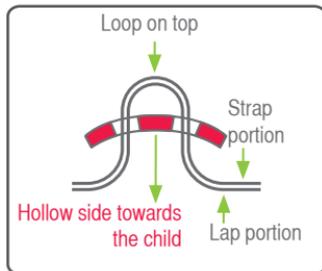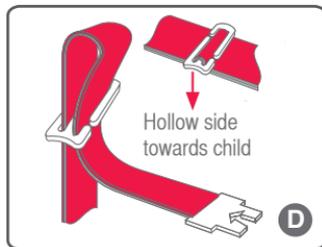

CHILD USE
(BOOSTER SEAT MODE WITH CHILD HARNESS)



CAUTION :

When using a gated slide, ensure that all belt slack is removed from the lap-belt and the child is completely yet firmly restrained around the hips and thighs.



IMPORTANT :

The Gated Slide must be removed from the seatbelt if the booster seat and child harness are no longer used in the car so that other users can use the seatbelt as a lap-sash seatbelt.

A seatbelt extender should not be used if the seatbelt is not long enough to secure the child. If a seatbelt extender is used then the buckle must not be in contact with the child.


HOW TO INSTALL CHILD HARNESS

USING LAP ONLY SEATBELT OR CONVERTED LAP-SASH SEATBELT WITH THE CHILD HARNESS

Install the Child Harness to the booster seat and anchorages as detailed previously (page 48-51). Install the booster seat into the vehicle. Ensure the top tether strap is attached to the vehicle upper anchorage and adjusted correctly. With the vehicle seatbelt converted (if necessary) ready for use, thread the lap seatbelt through the Child Harness strap loops.

NOTE: Seatbelt extenders should not be used if the seatbelt is not long enough to fit around the child. If a seatbelt extender is used then the seatbelt buckle must not be in contact with the child.

Use the child harness as detailed on page 57-60.

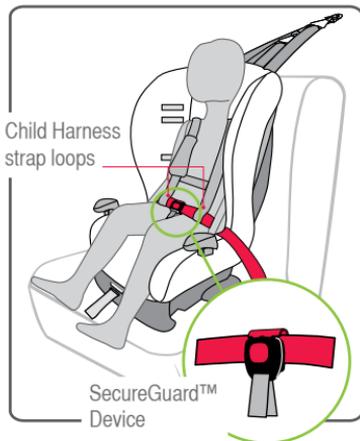


HOW TO INSTALL CHILD HARNESS

USING THE CHILD HARNESS

Connect the Harness to the VERSATETHER™ Catch on the booster seat detailed on page 48 to 49.

- A. With the child seated, place the Child Harness straps over each shoulder.
- B. Feed the right hand strap (loop end) into the cross strap loop to connect the two sides.
- C. Feed the adult belt (lap belt or converted lap/sash) through the harness strap loops, ensuring that the cross strap loop does not disconnect. Ensure there are no twists in the Child Harness, cross strap and seatbelt.

1. Vehicle Upper Anchorage Fitting
2. VERSATETHER™ Catch on Booster Seat
3. Child Harness Attachment Clip
4. Right Hand Harness Strap
5. Adjuster (under cover)
6. Harness Strap Loop
7. Cross Strap Loop
8. Cross Strap

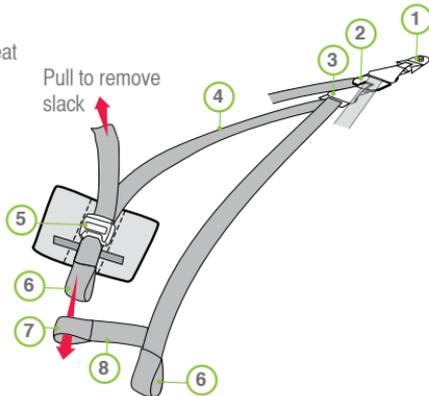

CHILD USE
(BOOSTER SEAT MODE WITH CHILD HARNESS)

HOW TO INSTALL CHILD HARNESS

D. Hook the SecureGuard™ Device over the lap belt and engage the vehicle seatbelt tongue to the buckle. Check and adjust the seatbelt to sit firmly but comfortably around the child's pelvis. The seatbelt buckle should be located just below the child's hip to ensure a firm yet comfortable fit.

E. If a child harness extension strap is used, adjust this before removing slack from the child harness. Ensure to keep it as short as possible while allowing the child harness to be adjusted to suit the child.



F. With the lap belt (or converted lap/sash) and SecureGuard™ adjusted to be a firm fit on the child's thighs, adjust the Child Harness to remove all slack in the shoulder straps. Once adjusted, further adjustments are necessary only to accommodate the growth of the child.

G. Finally, roll up the free end of the harness adjuster strap, place it on the top of the adjuster and secure using the storage strap. Close the cover pad.

Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible by the child.

H. Lengthen the harness at any time by fully pressing the Adjuster Button (1) whilst pulling the shoulder strap (2) upwards.

Refer to child harness fitting instructions for further details.

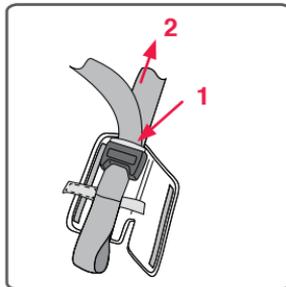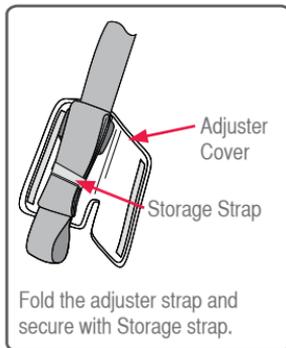



HOW TO INSTALL WITH A CHILD HARNESS

TO REMOVE CHILD FROM HARNESS AND SEAT

- I. Disengage seatbelt tongue from buckle, remove the lap belt from the SecureGuard™ Device and remove from the Child Harness strap loops.
- J. Alternatively lift the child harness straps over the child's head.
- K. Remove child harness from child.

NOTE: It may be easier to unthread the vehicle seatbelt out of the loops before lifting the child harness over the child's head.
Do not use this child restraint if the child's shoulders reach the Upper Shoulder Height Marker.

Lift child harness strap over child's head

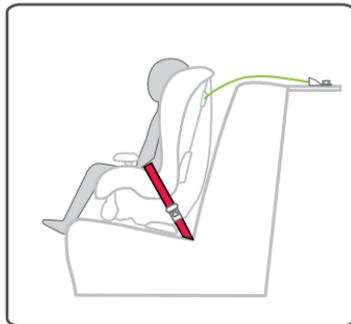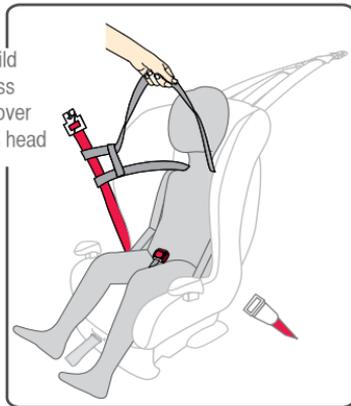

CHILD USE
(BOOSTER SEAT MODE WITH CHILD HARNESS)


HOW TO INSTALL CHILD HARNESS

RESTORING THE RESTRAINT

RESTORING THE RESTRAINT FOR TODDLER USE

- A. Completely remove the child harness and gated slide (if used) from the car seat. Remove the adjustable extension strap (if used) from the VERSATETHER™ catch. Store the SecureGuard™ Device in the seatbase location provided. Store the child harness product in a cool, dry place until next required.
- B. Remove the built-in harness from the storage recess under the cover. Feed crotch strap and shoulder straps through seat cover and shoulder strap slots in the seatback.
- C. Engage harness tongues into buckle. Ensure there are no twists in the straps.
- D. Attach to metal strap connector as shown right.

NOTE: When child harness is no longer being used, disconnect the gated slide so that the seatbelt can be correctly used as a lap-sash seatbelt by other users.

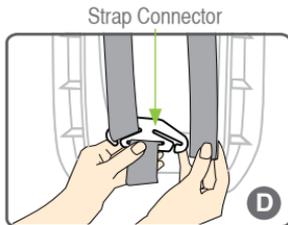

CARE & MAINTENANCE

REGULAR CARE OF THIS RESTRAINT:

Please check the following items regularly to ensure the safety of your child:

- A. Check the webbing of the straps for fraying,
- B. Check there are no cracks in moulding,
- C. Check the harness adjuster is operating and is clamping the webbing,
- D. Ensure the buckle is free of fluff, liquid or other matter that may enter the buckle slots. Clean the buckle if it is sluggish to engage. See next page.
- E. If any part of the restraint is cracked or broken, seek repair immediately - contact Customer Service 1300 303 330

CLEANING CAR SEAT

HARDWARE: Use only mild soap to clean all metal and plastic parts of your child's restraint, using a damp sponge or cloth. Do not use chemicals or cleaning agents. Do not try and place any hardware into a washing machine.

STRAPS/HARNESS: We recommend spot cleaning straps and harness with a damp sponge or cloth using only cold or warm water. Never place any straps or harness into a washing machine or tumble dryer.

CARE & MAINTENANCE



BUCKLE OPERATION

To ensure the buckle remains operational, the inside of the buckle must be kept free of liquids, sand, dirt, fluff, food or similar substances. If the buckle is not operating or you do not hear a strong audible click when second tongue is inserted, the buckle needs to be washed or replaced. Contact Customer Service for assistance.

TO CLEAN HARNESS BUCKLE:

If sticky liquids such as baby formula, fruit juice, etc. get inside your harness buckle, it may become sluggish. An indication of a sluggish harness buckle is that you cannot hear a click when engaging the harness tongues. To restore the harness buckle to good working order it needs to be cleaned as follows:

- Remove the harness buckle from the restraint: From the underside of the restraint pull each crotch 3-bar slide then turn the 3-bar slide and push through each slot.
- Place the harness buckle under warm (max. 40 degrees Celsius) running water as shown below. Let the water run through the mouth of the buckle for five minutes. Check the harness buckle is clean by engaging the harness tongues and buckle several times until you hear a click.
- If you still cannot hear a strong audible click then repeat the cleaning process several times.
- Refit the harness buckle to the restraint ensuring the red button facing outwards and the 3-bar slide is fed through the same slots.

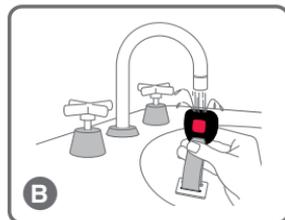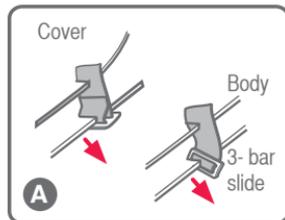

If the harness buckle cannot be returned to its original working condition then contact BRITAX Customer Service for assistance.

CARE & MAINTENANCE

TO CLEAN THE COVER

The restraint has a flame retardant cover which is removable for cleaning. Cleaning instructions are on the care label attached to the cover. When washing cover engage hook & loop strips together to eliminate other garments being caught. Ensure to keep strips free of lint to work effectively.

The cover has been designed to protect your child when seated in the restraint. Care should be taken if children either eat or drink while in the restraint as some food or drink products may cause damage or marking to the cover. Wash or clean immediately.

Do not pull sticky items from covers as the cover may be damaged - soak in water and gently remove.

To keep your product looking its best, take care when using while wearing jewelry or other items that could snag.




VERY IMPORTANT:

Only replace the cover with BRITAX Safe-n-Sound supplied replacement cover with identical shoulder height markers or a replacement cover meeting AS/NZS 8005.

CARE & MAINTENANCE

TO REMOVE COVER:

You do not have to remove the complete shoulder harness assembly from the restraint. However, you need to disconnect the shoulder harness straps from the metal strap connector at the back of the restraint (refer to page 36). Then follow the sequence below A to G to remove the cover.

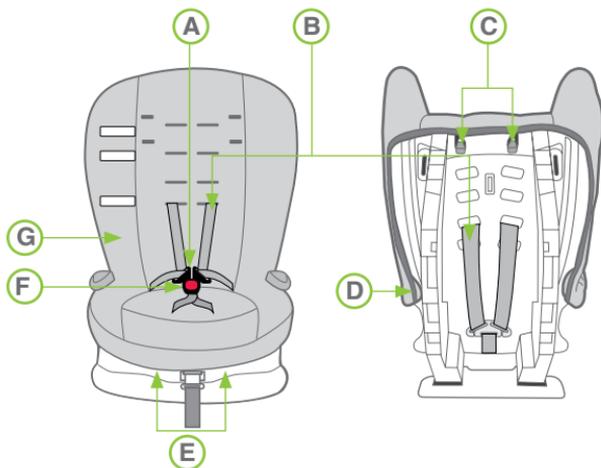

- A. Disengage harness tongues from harness crotch buckle.
- B. Disconnect the shoulder harness straps from the metal strap connector at the back of the restraint. Feed the shoulder and lap harness straps through the slots in the restraint.
- C. Unhook elastic loops.
- D. Release fabric overhang.
- E. Undo elastic loops from under restraint.
- F. Feed crotch buckle through slot in cover.
- G. Peel cover away from shell.

CARE & MAINTENANCE

TO REPLACE COVER:

- A. Fit cover over restraint starting at top. Attach elastic loops.
- B. Align cover over restraint.
- C. Feed shoulder harness straps through matching cover slots on the restraint and re-attach to metal strap connector at the back of the seat.
- D. Feed crotch buckle through slot in cover.
- E. Refit fabric overhang around sides and front of shell.
- F. Re-attach plastic clips at the front of the seat.
- G. If refitting for booster seat mode fit the cover with the harness in a stored position.

If you are not sure of the slot to be used for the harness then refer to the shoulder slot positioning on page 21.

CARE & MAINTENANCE

Use of aftermarket accessories, and/or, accessories not provided with this child restraint can reduce the safety of the child restraint and may cause injury or death. Always follow the instructions covering the use of accessories in this section or the instructions provided with accessory. If an aftermarket accessory is used that is not recommended by Safe-n-Sound then ensure that the accessory is for this restraint, compliant with AS/NZS 8005 and stated as suitable for use with this child restraint. The following instructions apply to accessories that may be supplied with this restraint at point of purchase. If not, a variety of Safe-n-Sound accessories are available from various retailers of Safe-n-Sound products. The following instructions apply to accessories that may be supplied with this restraint at point of purchase. If not, a variety of accessories are available from various retailers of Safe-n-Sound products.

SHOULDER PADS (IF FITTED)

Shoulder pads are designed to provide extra comfort for child and are easily fitted to the shoulder harness straps by:


- Pull apart fasteners and remove shoulder pads from harness.
- Re-fit shoulder pads to harness and attach fasteners for use.

PADED INSERT (IF FITTED)

The Padded Insert is designed to provide support for a younger child. Discontinue use when it becomes tight fit or creates discomfort. Simply place the padded insert on the restraint between Harness straps and the restraint back. Ensure padded insert is lined up with or below the shoulder straps.

COVER (STYLE MAY VARY)

The cover has been designed to protect your child when seated in the restraint. Care should be taken if children either eat or drink while in the restraint as some food or drink products may cause damage or marking to the cover.

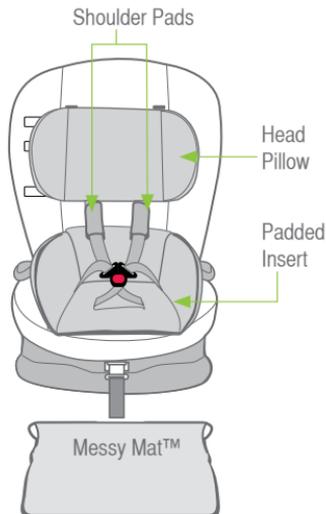

ACCESSORIES & FEATURES


EZ BUCKLE SYSTEM

(WHERE FITTED)

EZ Buckle system retains the harness buckle in a forward position and prevents the child from sitting on the buckle when boarding. Aids in opening harness and placing child in the seat.

- A. Feed EZ Buckle system through slot in front of crotch buckle slot.
- B. Feed Crotch buckle through slot in EZ Buckle system as shown.

Ensure that the EZ Buckle system is behind the buckle- i.e. the buckle is in front.


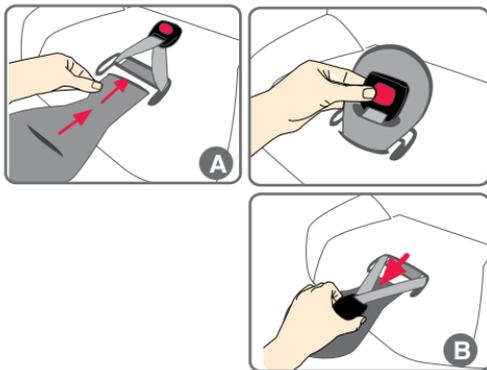


HEAD PILLOW/HEAD LINER


(IF FITTED)

The head pillow is designed to provide extra comfort in a harness booster mode only.

Position the head pillow level with the top of the child's shoulders. Ensure the upper strap is always through the restraint slots and the lower strap threaded through the slot above the harness straps slots (see illustrations).

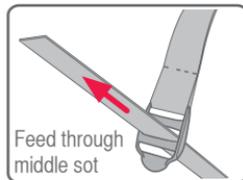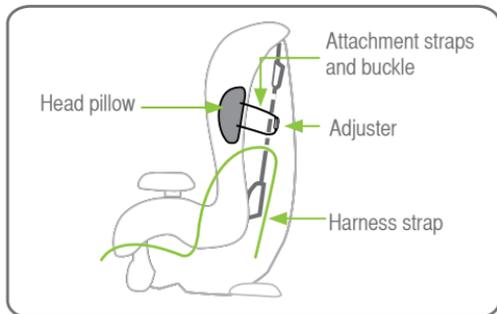

Feed through middle slot

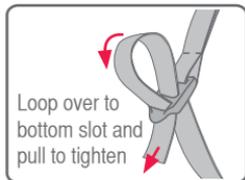

Loop over to bottom slot and pull to tighten

ACCESSORIES & FEATURES


MESSY MAT™ SEAT PROTECTOR INSTRUCTIONS (IF SUPPLIED)

Place ribbed or pocket end of the Messy Mat seat protector on edge of car seat, smooth back toward seat join ('A') and fit in any excess Messy Mat into the join of the car seat ('A').



CAUTION:

The pocket is only for small, light items. DO NOT overload the pocket with heavy, bulky items as this may damage the pocket or cause passengers to trip over them.

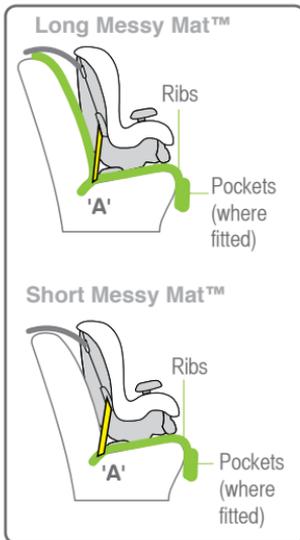

INSTALLATION OF CAR UPPER ANCHOR FITTING

Consult the vehicle owner's handbook for location of anchorage fittings or anchorage points and the possible use of spacers. Some vehicles may have an anchor fitting fitted by the vehicle manufacturer. If anchorage points cannot be found refer to car manufacturer or local child restraint fitting station or traffic authority for preferred position of upper anchorage point.

TOP TETHER STRAP



IMPORTANT:

THE ATTACHMENT CLIP COVER MUST ALWAYS BE USED AS IT PREVENTS THE RISK OF INCORRECT FITMENT OF THE ATTACHMENT CLIP TO THE UPPER ANCHORAGE POINT. ALWAYS ENSURE THAT THE ATTACHMENT CLIP IS CORRECTLY ENGAGED TO THE UPPER ANCHORAGE POINT AND NOT HOOKED OR FITTED TO ANY OTHER OBJECT BEFORE EACH USE OF THE RESTRAINT. THIS IS ESPECIALLY IMPORTANT IN VEHICLES SUCH AS STATION WAGONS, VANS, HATCH BACKS OR VEHICLES WITHOUT A FIXED PARCEL SHELF, SINCE THE ANCHOR POINT IS USUALLY NOT VISIBLE.


IMPORTANT INSTALLATION NOTE:

In some vehicles the upper anchorage point in the rear vertical panel can only be installed in one way. Please refer to vehicle owner's handbook or a child restraint fitting station for correct method.

INSTALLATION OF CAR UPPER ANCHOR FITTING

Extension Straps

Length 300mm (Use Britax Safe-n-Sound part 0035 or 0291).
Length 600mm (Use Britax Safe-n-Sound part 0036 or 0290).
Available from all major child restraint retailers.

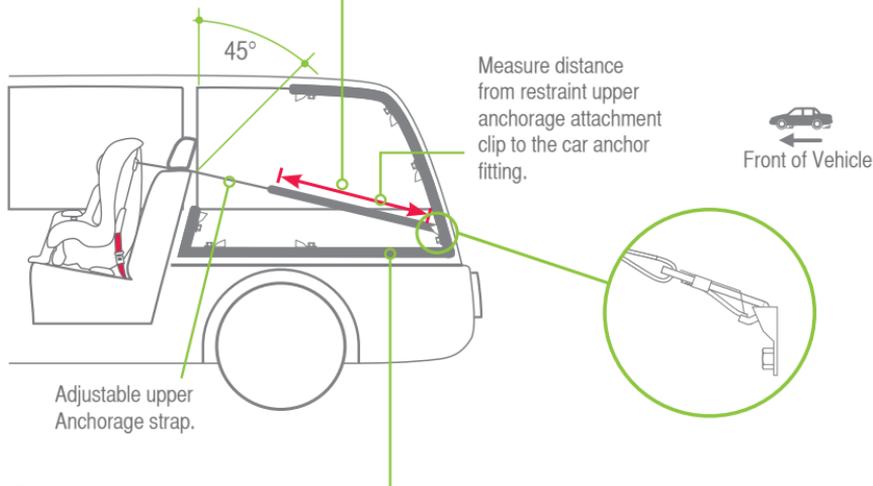

The shaded areas of this diagram illustrate the possible locations of the upper anchorage point (car anchor fitting). Within each shaded area is an upper anchorage point showing the correct way to install the fitting. Ensure the upper anchorage point is aligned as illustrated unless stated otherwise in the vehicle owner's handbook.

INSTALLATION OF CAR UPPER ANCHOR FITTING

IF THE CAR IS FITTED WITH CHILD RESTRAINT UPPER ANCHORAGE POINT

Locate the upper anchorage point behind the rear seating position. (Consult the car owners handbook for the location of the upper anchorage point). The upper anchorage point should be directly behind and central to the restraint. Remove thread plug from the parcel shelf/floor/roof, etc. and install attachment bolt and fitting as shown in Fig 1.


CAUTION: DO NOT OVERTIGHTEN ATTACHMENT BOLT. OVERTIGHTENING MAY FRACTURE OR BREAK BOLT. MAXIMUM TORQUE IS 20 Nm(14.75 ft.lb.)

Note: Minimum of five full turns of attachment bolt is required before tightening force is applied.

IF THE CAR IS NOT FITTED WITH CHILD RESTRAINT UPPER ANCHORAGE POINTS

For Sedans only - Drill 9mm diameter hole in the parcel shelf on the centre line of the seating position as shown in Fig 3. Before drilling the hole, check the underside for accessibility. Install the attachment bolt as shown in Fig 2. It is recommended that this installation be carried out by a child restraint fitting station or licenced motor mechanic.

For vehicles other than Sedans - In Australia, consult your nearest child restraint fitting station or traffic authority for vehicle inspection to find the best, correct position for the placement of the upper anchorage point, and for the correct attachment bolt length and use of spacers. In New Zealand, consult the agent for the vehicle. Note to Queensland purchasers: The installation of anchorage points must be approved by authorised officers appointed by Queensland Transport. Authorised officers can be sourced from all Queensland Transport Customer Service and Queensland Ambulance Service Centres.

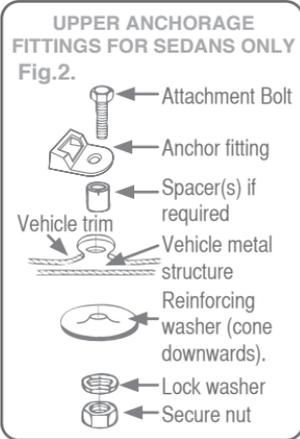

INSTALLATION OF CAR UPPER ANCHOR FITTING

ONLY USE A 5/16 UNC GRADE 5 BOLT. IF THE BOLT IS NOT THE CORRECT LENGTH THE CAR MANUFACTURER'S HAND BOOK CAN PROVIDE ADVICE ON THE CORRECT LENGTH BOLT.



WARNING

CHILD RESTRAINTS MUST NOT BE ATTACHED TO UNSOUND METAL OR TO WOOD, OR SYNTHETIC STRUCTURES. WHEN DRILLING 9 MM HOLE DO NOT DRILL THROUGH FUEL LINES, FUEL TANKS, ELECTRICAL WIRING, OR RADIO SPEAKERS. WEBBING STRAPS MUST BE PROTECTED FROM SHARP CORNERS AND EDGES. THE ANCHOR FITTING MUST BE USED ONLY AS DESCRIBED ABOVE. IT MUST NOT BE HOOKED ONTO ANY OTHER OBJECT.



NOTE: Marking on the top of a Grade 5 Bolt. Do not use any bolt without these marks.



Front of Vehicle

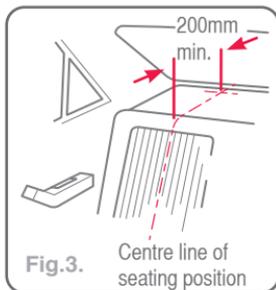


Fig.3.

Centre line of seating position

CAR INSTALLATION ACCESSORIES

(From retailers of Britax Safe-n-Sound products)

EXTRA ANCHOR KITS: Available for using the restraint in additional cars.

Re-order no: 0038 or 0289

EXTENSION STRAPS: May be required for cars without a fixed parcel shelf.

Re-order no: 0035 or 0291 (length 300mm) or
0036 or 0290 (length 600mm)

GATED 3-BAR SLIDE (Locking clip): For converting lap-sash seatbelt to lap belt, for use with a Child Harness. May be required for a second car.

Re-order no: 0210 or 0283

IN CASE OF CRASH

If your restraint has been involved in a severe crash, you should destroy the restraint even if no damage is obvious. Some insurance companies offer vehicle insurance which covers or partially covers the replacement of your child restraint. Contact your insurance company for further details. Your insurance company may require you to keep the child restraint for assessment, **but do not use the child restraint after a severe crash**. To assist you in making an accident insurance claim cut the following statement and include it with your claim.

NOTICE TO INSURANCE COMPANY CHILD RESTRAINT INVOLVED IN AN ACCIDENT

All Britax Safe-n-Sound child restraints are manufactured to Australian/New Zealand Standards AS/NZS1754-2013 which require us to advise users of child restraints to "Destroy the entire restraint if it has been in use in a severe crash, even if no damage is obvious". The joint Australian/New Zealand Standards committee CS/85, advise that this statement applies whether a child was in the child restraint or not. A severe crash, we consider as being one where the main body structure of the vehicle is distorted.

There is no method of determining if the restraint has been damaged and we concur with the Australian/New Zealand Standards in recommending destruction of the child restraint.

This notice is to advise you of the requirements of the Australian/New Zealand Standards and our obligation in complying with the standards.

Please assist the owner of this restraint in their claim.

Britax Childcare Pty. Ltd.

(Incorporated in Victoria)

A.B.N 55 006 773 600

Head office and registered address:

Level 4, 650 Lorimer Street, Port Melbourne, VIC, 3207

P.O. Box 5119 Garden City, VIC, 3207

Telephone: 1300 303 330

New Zealand Office:

Britax Childcare NZ Limited.

PO Box 100-247 Auckland 9

Telephone: 0508 688 822



IN CASE OF CRASH

CRASH EXCHANGE

We would never want you to experience an accident, but unfortunately accidents do happen. If you experience an accident you may be eligible for a free replacement.

The Britax Safe-n-Sound Crash Exchange Program is a voluntary program designed to ensure that our children are safe and that any seat that may have experienced a severe crash is taken out of the market.

There is no method of determining if the restraint has been damaged in a severe crash, so the restraint should be destroyed as the crash may reduce the child restraints ability to perform.

Since its inception in 2006, the Crash Exchange program has helped 100's of families ensure that their children have new restraints and that the restraints are not sold second hand placing others at risk.

Our Crash Exchange Terms and Application form are accessible on our website. Please visit www.britax.com.au for further information.



AUSTRALIA

Britax Childcare Pty. Ltd.
A.B.N 55 006 773 600

Head office and registered address:

Level 4, 650 Lorimer Street, Port Melbourne, VIC, 3207
P.O. Box 5119 Garden City, VIC, 3207

Customer Service 1300 303 330

Email au-custserv@britax.com

www.britax.com.au

NEW ZEALAND

Britax Childcare (NZ) Ltd.

Customer Service 0508 688 822

Email nz-custserv@britax.com

www.britax.com.nz

INTERNATIONAL ENQUIRIES

Contact your local Distributor



Scan QR code for
Installation and how to use.

britax
safe·n·sound

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonable foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be acceptable quality and the failure does not amount to a major failure.

For the full terms of the Warranty refer to the Britax website www.britax.com.au/service-support/warranty

The Safe-n-Sound, Versa-Tether, SecureGuard & Protecta Plus trademarks are the property of BRITAX Childcare Pty. Ltd. (Australia).

The BRITAX trademark are the property of Britax Childcare Holdings Ltd, UK.

We reserve the right to alter this product without notice.

© 1995-2018 BRITAX Childcare Pty. Ltd. This product is covered by Australian and overseas patent applications.

Patents pending.