



**IMPORTANT: KEEP THIS BOOKLET IN THE PLACE PROVIDED
ON THE CHILD RESTRAINT**

 
 
 
 
 
 
Child Booster Seat

INSTRUCTION BOOK





Series No. BL4050A-020133

baby 
loveTM

SEATBELT QUICK SETUP

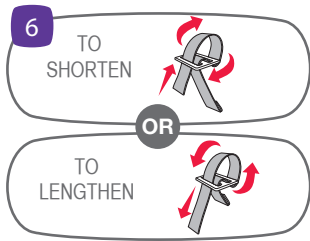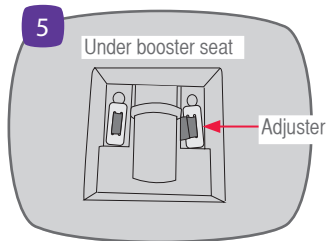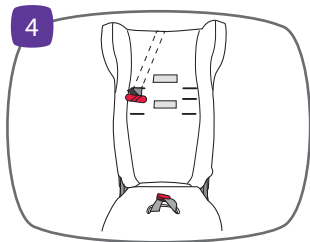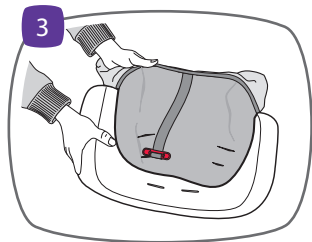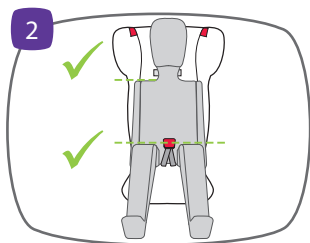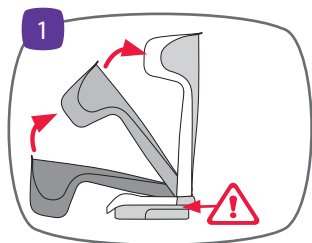

SEATBELT QUICK SETUP

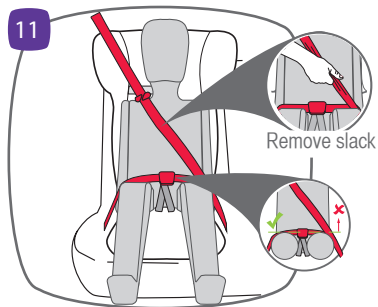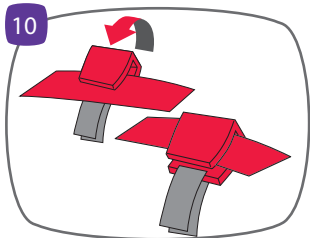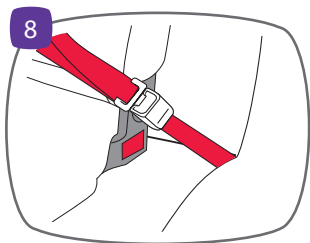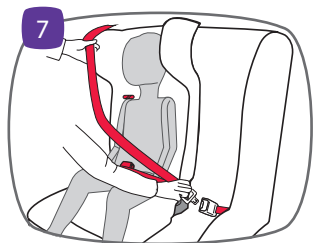    



INTRODUCTION

To be used with a lap-sash seatbelt by a child whose shoulders are above the lower shoulder height marker (approximately 4 years of age) until the child's shoulders reach the upper shoulder height marker (approximately 6 to 8 years of age).

Continue to use this booster seat until the child reaches this limit. Children are safest in a booster seat until their shoulders reach the upper shoulder height marker of the booster seat.

Do not use this booster seat until child's shoulders are above the lower shoulder height marker.

If the knees do not bend in front of the vehicle seat cushion continue to use a booster seat.

Just using a seatbelt is not recommended for children that have outgrown this seat.

Use a larger booster seat.

用于肩膀超过靠下肩高标记的儿童（大约4岁的儿童），配备安全带一起使用，直到儿童的肩膀达到靠上的肩高标记（约6-8岁的儿童）。

在儿童达到垫高椅上限之前必须持续使用垫高椅。在儿童肩膀达到垫高椅靠上的肩高标记之前最安全的做法是使用垫高椅。

在儿童肩膀未超过靠下的肩高标记之前不得使用垫高椅。

如果儿童在车辆弹性座垫前无法自然屈膝则需要继续使用垫高椅。

不建议个子比该座椅大的儿童只使用安全带，要使用较大的垫高椅。

केवल उस शिशु द्वारा लेप-सेश सीटबेल्ट के साथ प्रयोग किया जाना चाहिए जिसके कन्धे कन्धे के नचिले भाग से ऊपर आ गए हों (लगभग 4 वर्ष की आयु पर) और तब तक जब तक कि शिशु के कन्धे कन्धे के ऊपरी भाग के चनिह तक न पहुँच जाएँ (लगभग 6 से 8 वर्ष की आयु पर)।

बूस्टर सीट को तब तक प्रयोग करते रहें जब तक कि शिशु सीमा तक न पहुँचें। शिशु बूस्टर सीट में तब तक सबसे अधिक सुरक्षित होते हैं जब तक कि उनके कन्धे बूस्टर सीट के कन्धों के उपरी चनिह तक न पहुँचें।

बूस्टर सीट का प्रयोग तब तक न करें जब तक कि शिशु के कन्धे बूस्टर सीट पर कन्धों के नचिले चनिह को पार न करें।

अगर घुटने गाड़ी के सीट के गद्दे पर आगे न मुड़े तो बूस्टर सीट का प्रयोग जारी रखें।

जिन शिशुओं की आयु इस सीट के लिए उचित आयु से अधिक हो गई हो उनके लिए मात्र सीटबेल्ट के प्रयोग का सुझाव नहीं दिया जाता है। बड़ी बूस्टर सीट का प्रयोग करें।

INTRODUCTION

Được sử dụng với dây nịt an toàn quàng qua vai của em nào có vai ở trên vạch ghi độ cao của vai ở dưới cùng (khoảng 4 tuổi) cho đến khi vai của em cao tới vạch ghi độ cao của vai ở trên cùng (khoảng 6-8 tuổi).

Hãy tiếp tục sử dụng ghế trẻ em (booster) này cho đến khi em cao tới giới hạn này. Trẻ em được an toàn nhất trong ghế trẻ em (booster) cho đến khi vai của em cao tới vạch ghi độ cao ở trên cùng của ghế trẻ em.

Không sử dụng ghế trẻ em (booster) này cho đến khi vai của em ở trên vạch ghi độ cao của vai ở dưới cùng.

Nếu đầu gối không co lại đằng trước đệm ghế xe, hãy tiếp tục sử dụng ghế trẻ em (booster).

Chỉ sử dụng dây nịt an toàn nào không được đề nghị cho trẻ em lớn hơn ghế này. Hãy sử dụng ghế trẻ em rộng hơn.

يتم استخدامه مع حزام أمان الكتف و الخصر للطفل الذي تجاوز كتفيه علامة ارتفاع الأكتاف السفلية (تقريبًا في عمر 4 سنوات) حتى يصل كتفي الطفل إلى علامة ارتفاع الأكتاف العلوية (تقريبًا في عمر 6) إلى 8 سنوات.

استمر في استخدام مقعد الأمان المرتفع هذا لحين وصول الطفل إلى هذا الحد. يكون الأطفال أكثر أمانًا في مقعد أمان مرتفع حتى تصل أكتافهم إلى علامة ارتفاع الأكتاف العلوية لمقعد الأمان المرتفع.

لا تستخدم مقعد الأمان المرتفع هذا إلا عندما يكون كتفي الطفل أعلى من علامة ارتفاع الأكتاف السفلية.. إذا كانت الركبتين لا تنتهيان أمام وسادة كرسي السيارة، استمر في استخدام مقعد أمان مرتفع لا توصي بمجرد استخدام حزام الأمان للأطفال الذين كبر حجمهم عن هذا المقعد. استخدم مقعد أمان مرتفع ذو مقاس أكبر.

Na χρησιμοποιείται με ζώνη ασφαλείας τριών σημείων από ένα παιδί του οποίου οι ώμοι είναι πάνω από το χαμηλότερο δείκτη ύψους του ώμου (περίπου 4 ετών) μέχρι οι ώμοι του παιδιού να φτάνουν στον ανώτερο δείκτη ύψους του ώμου (περίπου 6 έως 8 ετών).

Συνεχίστε να χρησιμοποιείτε αυτό το βοηθητικό κάθισμα μέχρι το παιδί να φτάσει σε αυτό το όριο. Τα παιδιά είναι ασφαλέστερα σε ένα βοηθητικό κάθισμα μέχρι οι ώμοι τους να φθάνουν στον ανώτερο δείκτη ύψους ώμου του βοηθητικού καθίσματος.

Μην χρησιμοποιείτε αυτό το βοηθητικό κάθισμα μέχρι οι ώμοι του παιδιού να είναι πάνω από τον χαμηλότερο δείκτη ύψους των ώμων.

Αν τα γόνατα δεν λυγίζουν μπροστά από το μαξιλάρι καθίσματος του οχήματος, συνεχίστε να χρησιμοποιείτε ένα βοηθητικό κάθισμα.

Η χρήση μόνον μιας ζώνης ασφαλείας δεν συνιστάται για παιδιά που έχουν ξεπεράσει σε ύψος αυτό το κάθισμα. Χρησιμοποιήστε ένα μεγαλύτερο βοηθητικό κάθισμα.



INTRODUCTION

應與安全腰帶一同使用，適用於肩膀超過靠下的肩高標記的孩子（大約4歲大），直至其肩膀達到靠上的肩高標記（大約6至8歲大）。

讓您的孩子一直乘坐墊高椅，直至其達到墊高椅的上限。在孩子肩膀達到墊高椅靠上的肩高度標記之前，使用墊高椅是最安全的做法。

在孩子肩膀超過靠下的肩高標記前，切勿使用此墊高椅。

若孩子在汽車座椅邊無法自然曲膝，請繼續使用墊高椅。

孩子因長大超出墊高椅的上限時，不推薦僅僅使用安全帶。請使用更大尺寸的墊高椅。#

Debe utilizarse con un cinturón de seguridad de tres puntos para un niño cuyos hombros sobrepasen el marcador de altura inferior (aproximadamente a los 4 años de edad) hasta que los hombros del niño alcancen el marcador de altura superior (aproximadamente de 6 a 8 años de edad).

Siga utilizando este asiento elevador hasta que el niño alcance dicho límite. El niño estará más seguro en un asiento elevador hasta que sus hombros alcancen el marcador de altura superior del asiento elevador.

No utilice este asiento elevador hasta que los hombros del niño no sobrepasen el marcador inferior.

Si las rodillas del niño no se doblan en la parte delantera del cojín del asiento del vehículo siga utilizando un asiento elevador.

No se recomienda utilizar sólo un cinturón de seguridad para el niño que ya no quepa en este asiento. Utilice un asiento elevador más grande.



INTRODUCTION

Da usare con una cintura di sicurezza fasciante da un bambino le cui spalle superano il marcatore di altezza inferiore (circa 4 anni di età) fino a quando le spalle del bambino raggiungono il marcatore di altezza della spalla superiore (circa 6 a 8 anni di età).

Continuare a utilizzare questo seggiolino fino a quando il bambino raggiunge questo limite. I bambini sono più sicuri su un seggiolino finché le loro spalle raggiungono il marcatore di altezza superiore del seggiolino.

Non utilizzare il seggiolino fino a quando le spalle del bambino sono al di sopra del marcatore di altezza inferiore.

Se le ginocchia non si piegano al limite del sedile del veicolo continuare ad utilizzare un seggiolino.

Usare soltanto la cintura di sicurezza non è raccomandato per i bambini che sono troppo grandi per questo sedile. Utilizzare un seggiolino più grande.

Gamitin kasama ang isang lap-sash na seatbelt ng isang bata na ang mga balikat ay lampas na sa ibabang marka ng taas ng balikat (humigit-kumulang 4 na taong gulang) hanggang sa maabot ng mga balikat ng bata ang itaas na marka ng taas sa balikat (humigit-kumulang 6-8 taong gulang).

Patuloy na gamitin ang upuang booster na ito hanggang sa maabot ng bata ang limitasyong ito. Ang mga bata ay pinakaligtas sa isang upuang booster hanggang sa maabot ng kanilang mga balikat ang itaas na marka ng taas ng balikat ng upuang booster.

Huwag gamitin ang upuan booster na ito hanggang sa ang mga balikat ng bata ay lumampas sa ibabang marka ng taas ng balikat.

Kung ang mga tuhod ay hindi makaliko sa harap ng kutson ng upuan ng sasakyan ay patuloy na gamitin ang upuang booster.

Ang paggamit lamang ng seatbelt ay hindi inirerekomenda para sa mga bata na nakalakhan na upuang ito. Gumamit ng isang mas malaking upuang booster.



INTRODUCTION

Carefully read all the instructions for installation. If in doubt about the method of installation, consult Babylove or agent or a child restraint fitter or, in New Zealand, consult the agent for the vehicle.

THIS RESTRAINT MUST BE USED IN CARS WITH FORWARD-FACING SEATS WITH A LAP-SASH SEATBELT. THIS BOOSTER SEAT IS NOT SUITABLE FOR USE WITH A CHILD HARNESS.

No child restraint can guarantee absolute protection from injury in every crash. However, to ensure that your child gets all the protection designed into the restraint PLEASE READ AND FOLLOW THESE INSTRUCTIONS EXACTLY.

This child restraint is not suitable for use on an aircraft.

Always store the instruction book in the pocket provided on the side of the cover.



INDEX

PAGE

- 10 WARNINGS
- 12 SHOULDER HEIGHT MARKERS AND A GROWING CHILD
- 13 SHOULDER HEIGHT MARKERS
- 14 SHOULDER HEIGHT MARKERS AND THE NEXT STEP
- 15 FEATURES
- 16 HOW TO SETUP
- 20 HOW TO USE
- 25 CARE AND MAINTENANCE
- 27 ACCESSORIES
- 28 IN CASE OF CRASH
- 32 WARRANTY




WARNINGS

- Use the restraint exactly as shown in the instructions.
- Supervision of children is needed because they may be able to undo the buckles.
- DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.
- Do not alter or modify this restraint.
- Repairs must only be done by the manufacturers or agent.
- Do not allow the restraint to come into contact with polishes, oils, bleach and other chemicals.
- Destroy the restraint if it has been in a severe crash, even if no damage is visible
- DO NOT USE THIS RESTRAINT WITHOUT THE COVER.
- DO NOT USE WITH JUST A LAP BELT. You must use with a lap-sash seatbelt.
- The lap part of the seatbelt must be firmly across the thighs and the sash belt fitted diagonally across the chest and on the shoulder.
- Regularly check the condition of the restraint components, straps and other fitments for correct function and condition. Seek prompt repair.
- IF AN AIRBAG IS FITTED IN THE SEATING POSITION WHERE THE CHILD RESTRAINT IS TO BE FITTED, FOLLOW THE VEHICLE MANUFACTURERS WARNINGS AND INSTRUCTIONS.
- The child in the seat must not slump or slouch such that the lap belt is on the abdomen. The lap belt on the abdomen is dangerous. **The lap belt positioning device - SecureGuard™ must always be used.**
- This child restraint is not approved for use with any connectors that connect to the car's ISOFIX low anchorages.

 **IMPORTANT :**

 - The restraint should not be purchased or sold as a second hand item. It is recommended not to use child restraints older than 10 years as the protection in an accident may be reduced.
- Seatbelt extenders are not recommended to be used if the seatbelt is not long enough to secure the child restraint. If seatbelts are too short then seek advice from a child restraint fitter and consider their recommendations before using a seatbelt extender. If you use a seatbelt extender then ensure that the seatbelt buckle does not contact the child.
- Do not use in a front seat, unless your child is over 4 years of age or in accordance with the applicable Road Rules in your region.
- Do not use on any vehicle seat which faces sideways or rearwards.
- Use of aftermarket accessories (i.e. items not provided in the box with the child restraint), can reduce the safety provided by the child restraint and may cause injury or death.
- Use a towel or seat protector (messy mat) to protect the vehicle seat. Protection of both underneath or behind the booster seat may be required.
- This booster seat is not suitable for use with an accessory child harness.

SHOULDER HEIGHT MARKERS AND A GROWING CHILD

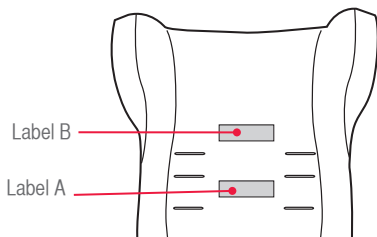

Height label will be behind the child's neck.

SMALLER CHILD

Shoulders must not be below the Lower Shoulder Height Marker.

From approximately 4 years of age.

 
 


Front of Vehicle

TALLER CHILD

Shoulders must not be above the Upper Shoulder Height Marker.


To approximately 6 to 8 years of age.

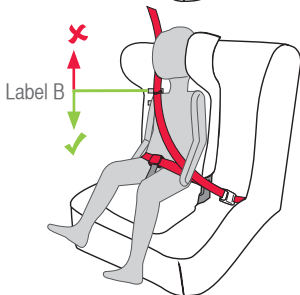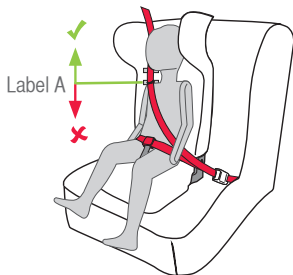

SHOULDER HEIGHT MARKERS


 **IMPORTANT: Follow this advice.**

 LOWER SHOULDER HEIGHT MARKER : Label A

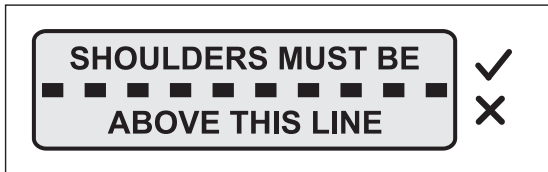

The child's shoulders must be in-line or above this marker. Approximately 4 years of age. If the child's shoulders are below then the child should remain in their previous child restraint.

 UPPER SHOULDER HEIGHT MARKER : Label B

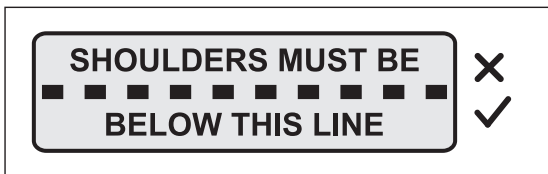


When the child's shoulders reach this upper marker, or the child no longer fits in the child restraint, approximately 6 to 8 years of age, then the child must be moved to the next form of child restraint, see next page.

The child restraint is unsuitable for the occupant when the shoulders are below the lower marker or above the upper height marker. The child needs to be moved into the next form of restraint when they reach the top shoulder height.



SHOULDER HEIGHT MARKERS AND AND THE NEXT STEP

NEXT TYPE OF RESTRAINT THAT CAN BE USED IN THE CAR FOR
YOUR CHILD.

 When your child has outgrown the seat, you can then use either restraint methods as follows:

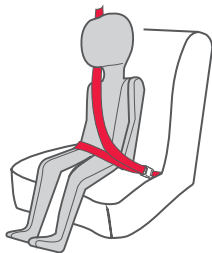


  Just the car's lap-sash seatbelt.
Lower leg must hang over the
edge of the seat cushion.

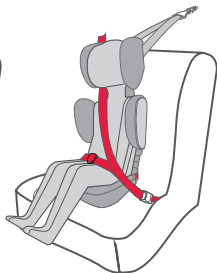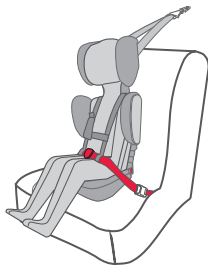

Or you can use a larger
booster seat with a lap-sash
seatbelt or a child harness
and seatbelt suitable for
children up to 8-10 years of
age or until they no longer fit
the booster seat.

 FEATURES

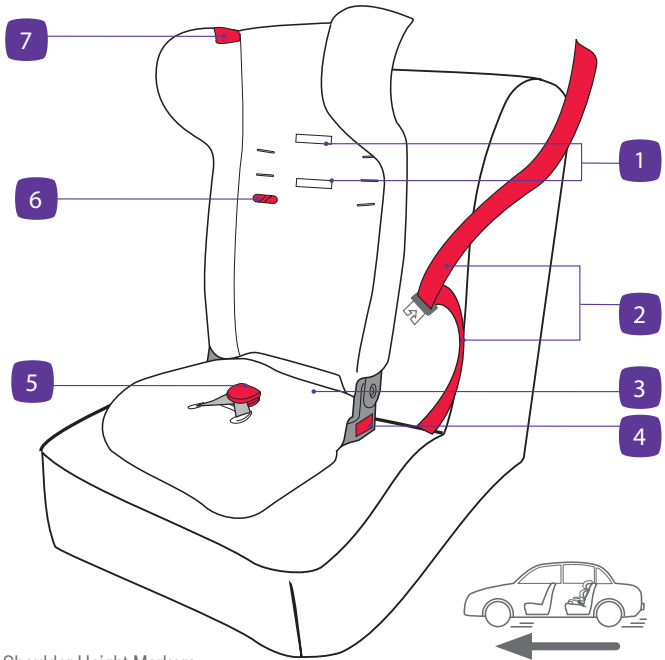

1. Shoulder Height Markers
2. Car seatbelt
3. Padded cover for comfort
4. **BOOSTER SEATBELT PATH** label (each side, for lap belt)
5. SecureGuard™ Anti-Submarining Device
6. Sash Guide
7. **BOOSTER SEATBELT PATH** label (each side, for sash belt)

HOW TO SETUP

UNFOLDING THE BOOSTER SEAT

If the seat is in a folded position, grip the Booster seat back and seat base and unfold till you hear it lock into position. Check that the seat has locked into position.

 


CAUTION:

DO NOT PLACE FINGERS IN BETWEEN SEAT BACK & SEAT BASE WHEN FOLDING OR UNFOLDING.


FOLDING THE BOOSTER SEAT

To store the booster seat, push to fold the seat forward. The booster seat can be folded for compact storage.

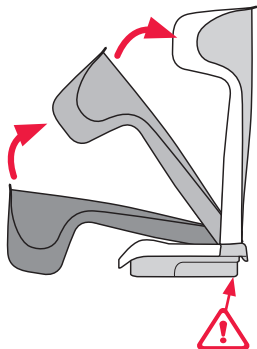


ADJUSTING THE BACKREST

 The back rest pivots freely so as to match the car seat back angle. Move the restraint back until it is touching the car's seat back. If the vehicle seat back angle is adjustable put it in the normal upright mode.

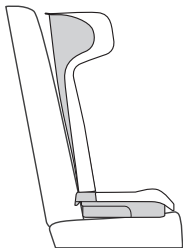

Normal backrest angle

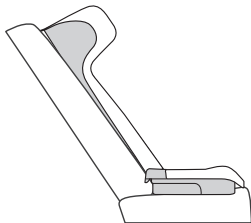 

Backrest angle too reclined

HOW TO SETUP

ADJUSTING THE SECUREGUARD™ DEVICE

The crotch strap can be adjusted so that it fits the seatbelt correctly to the child. The crotch strap length adjuster can be found under the seat.

- A. Adjust the crotch straps for the SecureGuard™ Device so that the Lap portion of the seatbelt is sitting on the child's thighs and the clip prevents the lap belt rising on the abdomen. Ensure the SecureGuard™ Device does not push into your child's thighs as this may cause discomfort.

 
ALWAYS USE THE SECUREGUARD™ DEVICE

- B. To change the length of the crotch strap, thread through the adjuster in the direction of the arrows shown below.


TO SHORTEN




TO LENGTHEN

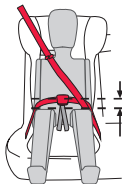

SecureGuard™ Device position
TOO HIGH

 

 SecureGuard™ Device position
OK
Bottom edge of SecureGuard™ Device, level with top of legs (with all slack removed from crotch strap).

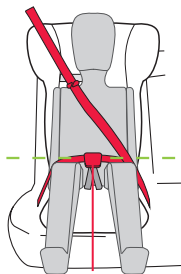

Lower edge of SecureGuard™ Device, level with top of thighs.

! IMPORTANT :

You must adjust the crotch strap to the correct length for your child before installing the restraint as it cannot be adjusted in the car.

 
 
Always return the crotch strap to its original shorter length when using the seat with a smaller child. The SecureGuard™ Device must always be positioned so that the lap belt is kept on the child's thighs - it will not connect correctly with the seatbelt if it is too high. **DO NOT** attempt to remove or dismantle the crotch strap and SecureGuard™ Device.





HOW TO SETUP

ADJUSTING THE SASH GUIDE POSITION

- A. The sash guide needs to be positioned in-line with or just above the child's shoulders.
- B. Remove trim at the top rear of the restraint, then pull the cover forward to reveal the sash guide which is attached to a strap at the back of the seat cover.
- C. Align the sash guide with the slot just below the child's shoulder and on the same side as the sash belt is connected to the car. Thread the sash guide through the slot in the seat cover and refit the seat cover to the restraint. Smaller children will generally use the lowest slot.

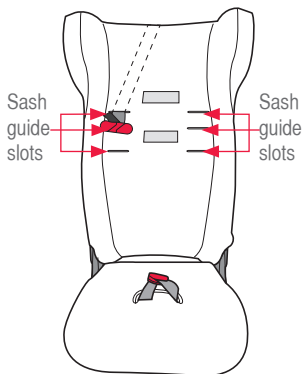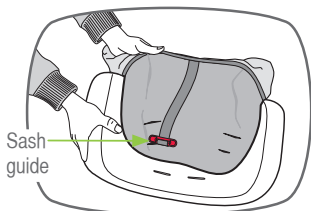

  Thread the sash guide through the chosen slot in the seat cover.

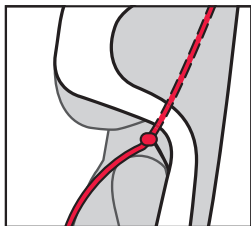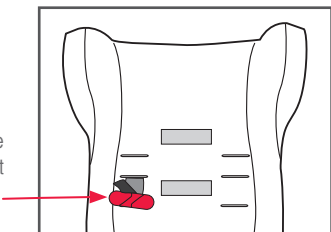


HOW TO SETUP

The sash guide should be used to correctly position the sash portion of the lap-sash seatbelt across the child's shoulder and chest.

Feed the adjusting strap into the slot on the cover that is just below the child's shoulder. Adjust the height of the sash guide so that the guide is above the child's shoulder.


To Lengthen

 Hold the strap, rotate and pull the sash guide to lengthen

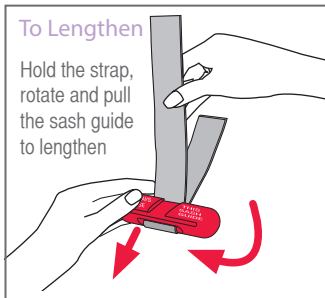

To Shorten

 
Hold the sash guide and pull strap to shorten

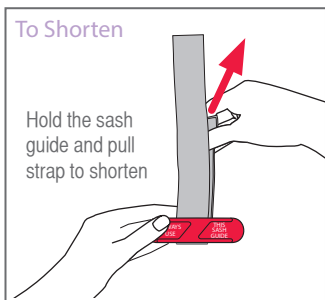

HOW TO USE

WITH LAP-SASH Seatbelt

 - A. Place the booster seat in the desired seating position.
- B. Seat the child in the seat. The child's shoulders must be between the lower and upper shoulder height markers.
- C. Pull the seatbelt out fully and place the lap belt over the child's hips and thighs, across the red **BOOSTER SEATBELT PATH** label, engage seatbelt buckle and tongue, ensuring there are no twists in the belt. If the seatbelt buckle is adjustable, adjust the buckle as low as possible away from the child.

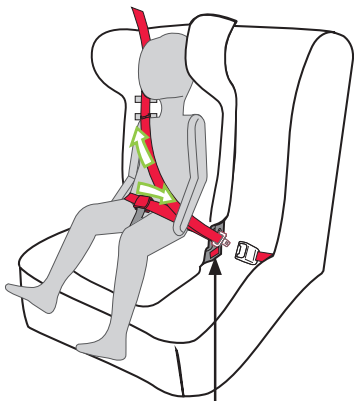


**BOOSTER SEATBELT
PATH** label

HOW TO USE

- D. Feed the sash-belt across the child's chest and through the sash guide. The sash guide should be used to correctly position the sash portion of the lap-sash seatbelt over the child's shoulder and across the chest. Continue to adjust the height of the sash guide so that the guide is above the child's shoulder as the child grows. To adjust the height and position of the sash guide see page 18 and 19.

  **IMPORTANT: ALWAYS USE THE SASH GUIDE
ALWAYS USE THE SECUREGUARD™ DEVICE.**

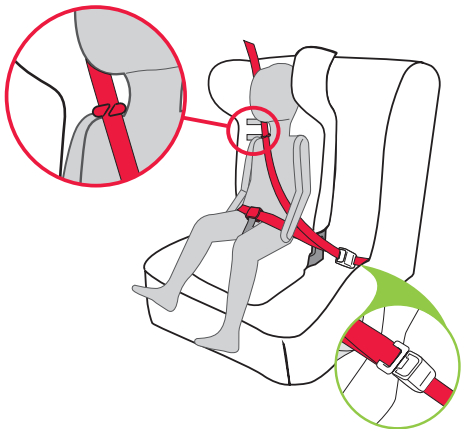




HOW TO USE

- E. Hook the SecureGuard™ Device over the lap part of the seatbelt with the lap belt positing logo facing forward. The SecureGuard™ Device must be used at all times to prevent the child slumping (sliding forward at base of seat) as the lap belt on the abdomen is dangerous in the event of a crash.

 **IMPORTANT: ALWAYS USE THE SECUREGUARD™ DEVICE.**

 - F. Tighten the lap belt and the sash belt if using an Inertia reel retractor seatbelt, adjust lap portion of the seatbelt firmly around the child and child booster seat, place the sash over the top of the seat where the red **BOOSTER SEATBELT PATH** label is. Then let the slack sash portion retract up into sash retractor.

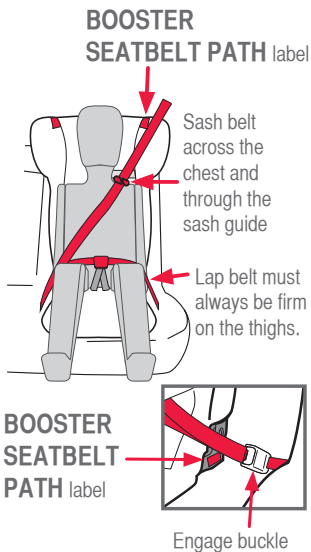

HOW TO USE

- G. The seatbelt must fit firmly but comfortably across the lap and chest. If needed, adjust the vehicle seat to improve the position of the sash on the child's chest. It should pull to the rear of the child.
- H. Always ensure the lap belt is on the child's hips and thighs at all times. The lap belt must not be on the child's abdomen. The sash belt must be across the child's chest.



IMPORTANT:

Always ensure the seatbelt is firmly fitted to the hips and thighs and the sash belt is always fitted diagonally across the chest.

The SecureGuard™ Device correctly adjusted must always be used when the child is using the booster seat as it ensures the lap belt is correctly positioned on the child's thighs and hips. A loose or poorly positioned lap belt can allow the lap belt to ride up into the abdomen and can cause serious injuries in a crash.



WARNING:

 
DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR

HOW TO USE



WARNING:


A SASH BELT UNDER THE ARM OR BEHIND THE BACK IS DANGEROUS

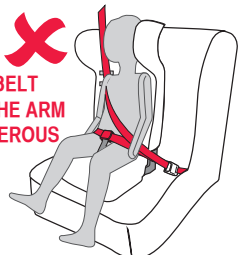

SEATBELT UNDER THE ARM IS DANGEROUS



 SEATBELT BEHIND THE BACK IS DANGEROUS

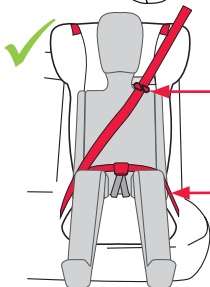

Seatbelt fitting closely across the chest and through the sash guide and over the top of the seat.

Lap belt must always be firm on the thighs.

NOTE: Seatbelt extenders should not be used if the seatbelt is not long enough to fit around the child. If a seatbelt extender is used then the seatbelt buckle must not be in contact with the child.

TO REMOVE CHILD

Disengage seatbelt tongue and buckle. Remove the seatbelt from the child and SecureGuard™ Device. When the booster seat is not being used, secure in position, by engaging seatbelt around the booster seat or store in a safe place to prevent it becoming a projectile in a crash.



CARE & MAINTENANCE

REGULAR CARE OF THIS RESTRAINT:

Please check the following items regularly to ensure the safety of your child:

- A. Check the webbing for fraying.
- B. Ensure there are no cracks in moulding or the plastic moulding.
- C. If any part of the restraint is cracked or broken, seek repair immediately or replace the child restraint.
- D. Clean the cover and the seat regularly.

HOW TO CLEAN

HARDWARE: Use only mild soap to clean all metal and plastic parts of your child's restraint, using a damp sponge or cloth. Do not use chemicals or cleaning agents. Do not try and place any hardware into a washing machine.

STRAPS/HARNESS: We recommend spot cleaning straps and harness with a damp sponge or cloth using only cold or warm water. Never place any straps or harness into a washing machine or tumble dryer.

COVER

The booster seat has a cover made from flame retardant fabric and is removable for cleaning. Washing and care instructions are on the care label attached to the cover. Refer to the following pages for instructions on how to remove and replace the cover.



VERY IMPORTANT:

Only replace the cover with Babylove supplied replacement cover with identical shoulder height markers or a replacement cover meeting AS/NZS 8005.

MAINTENANCE

 
There are no parts on this booster seat that require the user to maintain.



CARE & MAINTENANCE

TO REMOVE COVER

1. To remove the main cover unclip clips (B and C) located at the lower back of the seat. Lift and peel away A from seat.
2. To remove the base cover unclip clips (D) and feed SecureGuard™ Device (E) through the cover and peel away from seat.

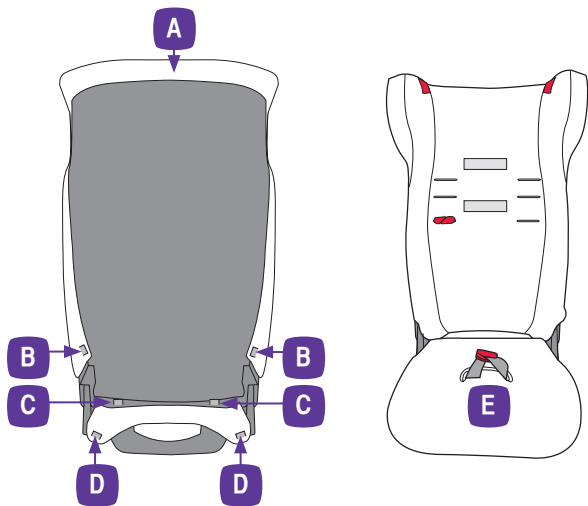

TO REPLACE COVER

1. To replace the main cover align trim to slots and lift elastic (A) over top of seat, clip the clips (B and C) located at the lower back of the seat.
2. To replace the base cover clip clips (D) and the back of the base and feed through SecureGuard™ Device (E) through the cover.

ACCESSORIES

MESSY MAT™ (IF SUPPLIED)

 
Place ribbed or pocket end of the Messy Mat seat protector on edge of car seat, smooth back toward seat join ('A') and fit in any excess Messy Mat into the join of the car seat ('A').

Hook and loop attachment referred in some instruction books, are no longer required to fit this model of Messy Mat seat protector.

CAUTION:

The pocket, if fitted, is only for small, light items. **DO NOT** overload the pocket with heavy, bulky items as this may damage the pocket or cause passengers to trip over them.

For other seat protectors please read their instructions.

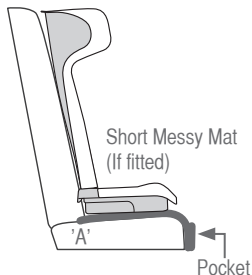

Note: Some Messy Mats may not have pockets.



IN CASE OF CRASH

If your restraint has been involved in a severe crash, you should destroy the restraint even if no damage is obvious. Some insurance companies offer vehicle insurance which covers or partially covers the replacement of your child restraint. Contact your insurance company for further details.

Your insurance company may require you to keep the child restraint for assessment, **but do not use the child restraint after a severe crash.**



NOTES



NOTES



NOTES



WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonable foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be acceptable quality and the failure does not amount to a major failure.

For the full terms of the Warranty refer to the Babylove website www.babylove.com.au/warranty

AUSTRALIA

Phone number: 1300 131 477

NEW ZEALAND

Phone number: 0508 688 822

www.babylove.com.au

Britax Childcare Pty Ltd.
A.B.N 55 006 773 600
Level 4, 650 Lorimer Street,
Port Melbourne, VIC, 3207,
Australia

We reserve the right to alter this product without notice in our constant endeavor for improvement.

The Babylove and Secureguard Trademark and model names are the property of Britax Childcare Pty Ltd. This product is covered by Australian and Overseas patents and applications. BRITAX Safe-n-Sound Patents Pending.
©2007-2018



P/No. 2201782/F