

# TESLA MODEL YL

## CHILD RESTRAINT INSTALLATION



### NOTES

1. This User Guide is designed to be used in conjunction with the User Guide for the applicable restraint when installed in a Tesla Model YL "Captain's Chair". If the instructions are contradictory, this User Guide takes precedence over the instructions in the Child Restraint User Guide. The applicable Series Numbers are correct at the time of publishing but may be subject to change without notice.
2. The use of a single Top Tether over the Headrest in the 2nd Row is not recommended due to the potential of this slipping off with the vehicle seat design. This also applies to the method recommended in the Vehicle Manual for Split Tethers where it talks about pulling the sides together to create a single tether.
3. The Split Tether Installations shown here have been tested by Tesla to the requirements of ADR34 and their Vehicle Manual will soon be updated to capture these. Always be sure to follow the latest recommendations from your vehicle manufacturer because they could be subject to change.
4. Should you have any questions or concerns, please consult with your Tesla Dealer or contact Britax Customer Service on 1300 303 330 or [aunz-support@britax.com](mailto:aunz-support@britax.com)

# TESLA MODEL YL

## CHILD RESTRAINT INSTALLATION



### CAPSULE – SINGLE TETHER



1. Not suitable for Installation in 2<sup>nd</sup> Row due to possibility of Tether slipping off headrest
2. Recommend Installation in 3<sup>rd</sup> Row only

Applicable to the following Series Numbers:

|                |                |                |
|----------------|----------------|----------------|
| BS0040A-i20133 | BS2300A-C20135 | BS2300B-C20135 |
| BS0040B-020133 |                |                |

### CONVERTIBLE – REARWARD FACING




1. Install Restraint as normal using Seatbelt or Isofix
2. Top Tether on restraint is to be tightened sufficiently to prevent it slipping over "shoulders".
3. Adjustable Extension strap to be used to tension down to anchor point.

Note: If Top Tether drops when loosening to remove child it must be repositioned and tightened above "shoulders" prior to next use. Alternatively, an elastic Cinch Strap could be used to hold the Tether hook in place whilst the Tether is loose.

Applicable to the following Series Numbers:

|                |                |                |
|----------------|----------------|----------------|
| BL0072E-i20133 | BS3300A-i20133 | BS7300E-020133 |
| BL0072E-020133 | BS3400A-i20133 | BS7300N-020133 |
| BL0072K-020133 | BS3700A-C20133 | BS7300S-i20133 |
| BS7300F-020133 | BS3800A-i20133 | BS7300S-020133 |
| BS0072E-020133 | BS7200A-i20133 | HP0072K-020133 |
| BS0072E-i20133 | BS7200A-020133 |                |
| BS0072K-020133 | BS7300E-i20133 |                |

### CONVERTIBLE – FORWARD FACING

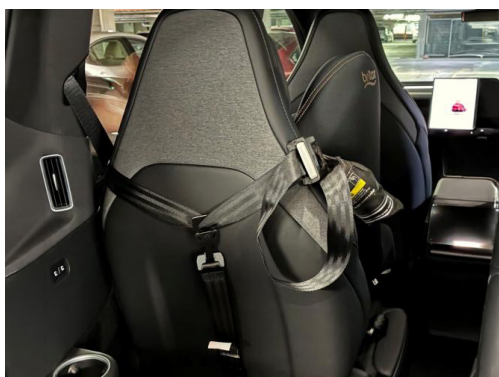

1. Install Restraint as normal using Seatbelt or Isofix
2. Attach 300mm Extension Strap to Anchor Point and Top Tether
3. Tighten top tether around Seat above "Shoulders" to prevent it slipping down.


Applicable to the following Series Numbers:

|                |                |                |
|----------------|----------------|----------------|
| BL0072E-i20133 | BS3300A-i20133 | BS7300E-020133 |
| BL0072E-020133 | BS3400A-i20133 | BS7300N-020133 |
| BL0072K-020133 | BS3700A-C20133 | BS7300S-i20133 |
| BS7300F-020133 | BS3800A-i20133 | BS7300S-020133 |
| BS0072E-020133 | BS7200A-i20133 | HP0072K-020133 |
| BS0072E-i20133 | BS7200A-020133 |                |
| BS0072K-020133 | BS7300E-i20133 |                |

# TESLA MODEL YL

## CHILD RESTRAINT INSTALLATION

### ROTATING RESTRAINT

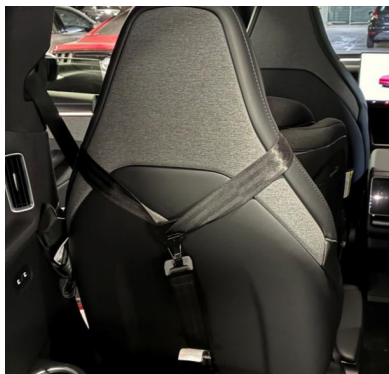


1. Install Restraint as normal using Seatbelt or Isofix
2. Attach 300mm Extension Strap to Anchor Point and Top Tether
3. Tighten top tether around Seat above "Shoulders" to prevent it slipping down.

Applicable to the following Series Numbers:

BS3501A-Z20132      BS3600A-Z20133      BS3600B-Z20133

### TYPE G OR HARNESSSED BOOSTER

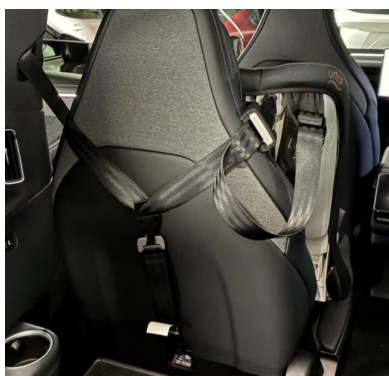

1. Install Restraint as normal using Seatbelt or Isofix
2. Attach 300mm Extension Strap to Anchor Point and Top Tether
3. Tighten top tether around Seat above "Shoulders" to prevent it slipping down.

Applicable to the following Series Numbers:

BL0090B-020133      BS0090F-020133      BS8300B-020133  
BL0090F-020133      BS090GA-020133      BS8700A-C20133  
BS0008A-020133      BS8100A-020133      HP090GA-020133

### TETHERED BOOSTER



1. Position Booster on Seat
2. Attach 300mm Extension Strap to Anchor Point and Top Tether
3. Tighten top tether around Seat above "Shoulders" to prevent it slipping down.

Applicable to the following Series Numbers:

BL4200A-020133      BS4900A-020133      4830/A/2013  
BS4200A-020133      BS4900B-020133      HP090GA-020133  
BS4830A-020132      HP4200A-020133